


SINGER
46K34,K35,K37,K39,K46

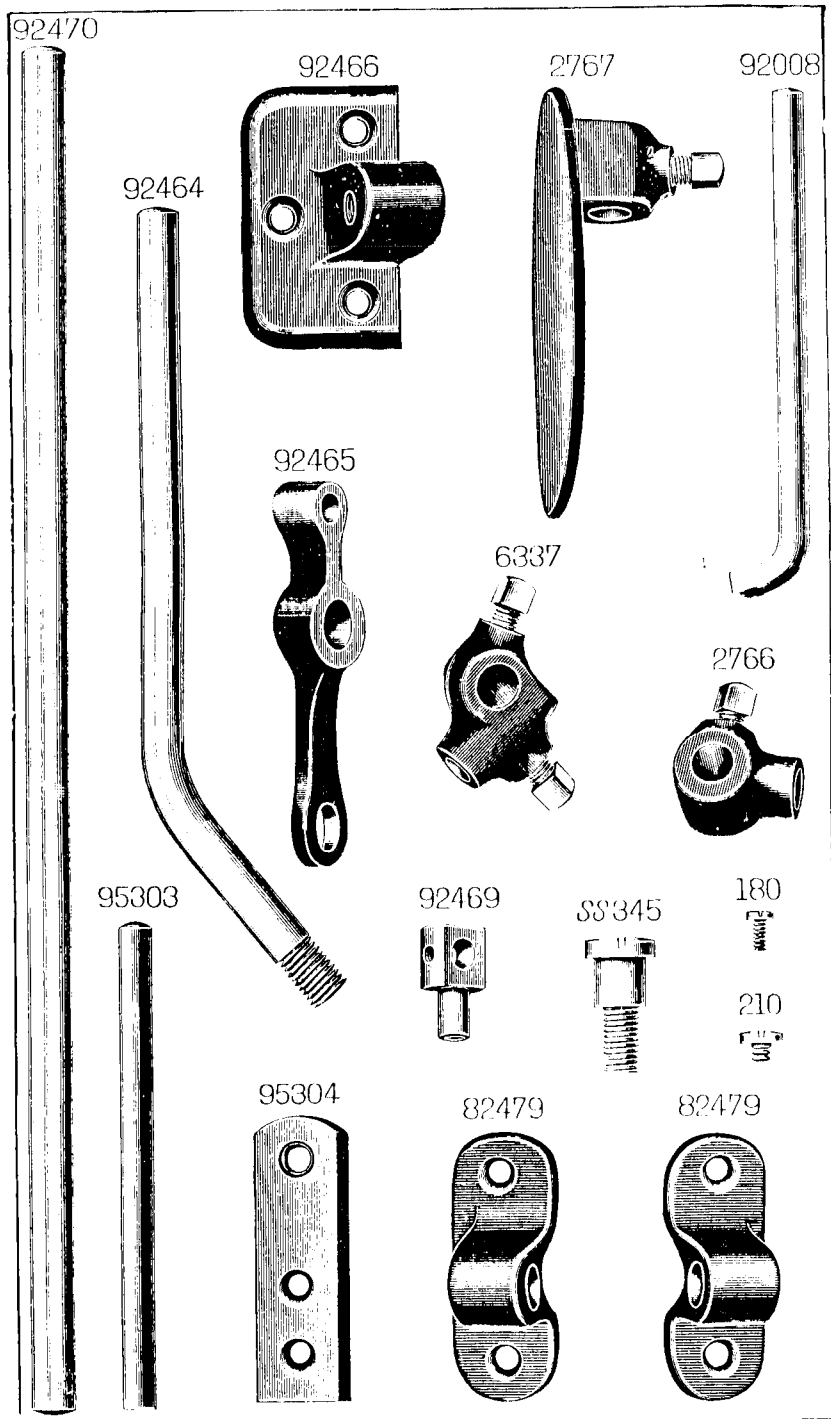

Form K2711
Sup'des K2390
October, 1925



ILLUSTRATED LIST OF PARTS



FOR



Nos. 46K34, 46K35, 46K37 to
46K39 and 46K46 MACHINES



THE SINGER MANUFACTURING COMPANY

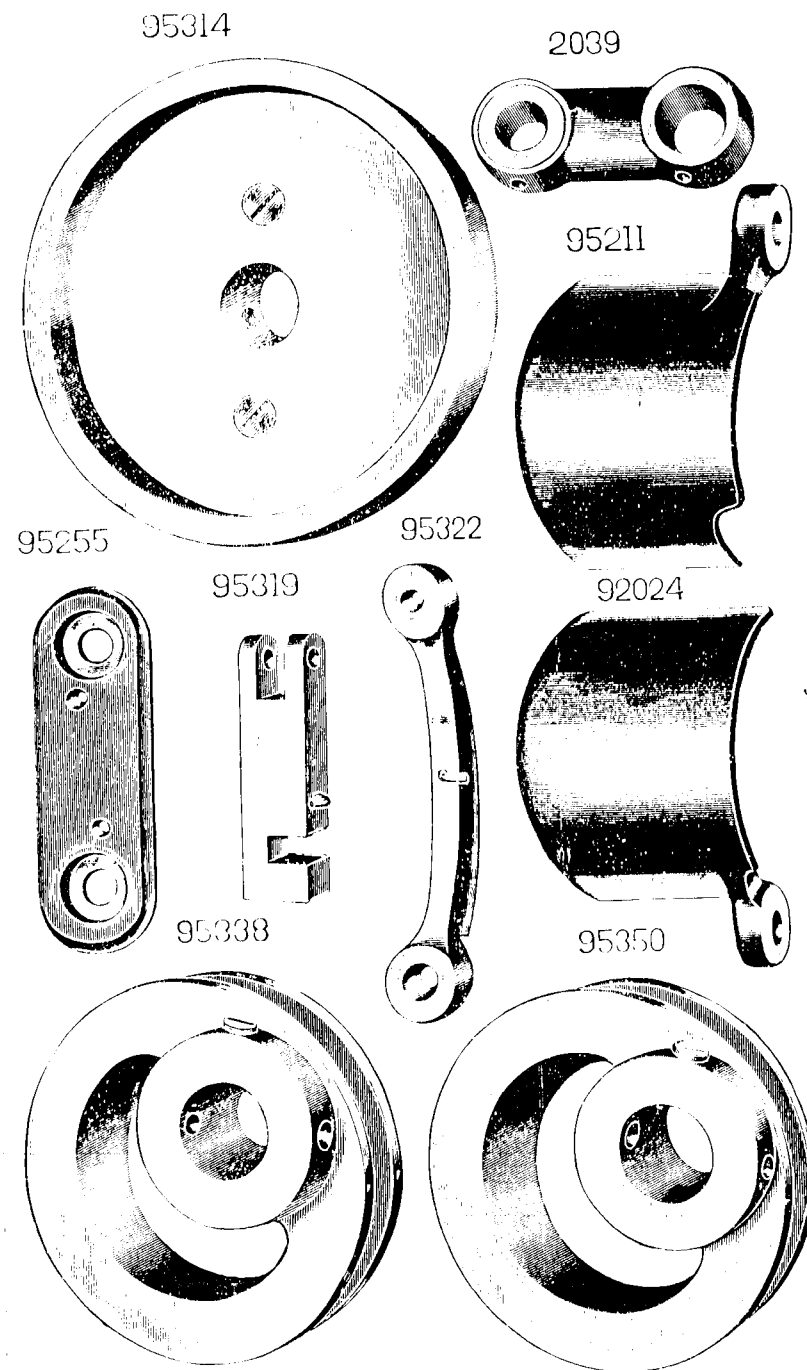
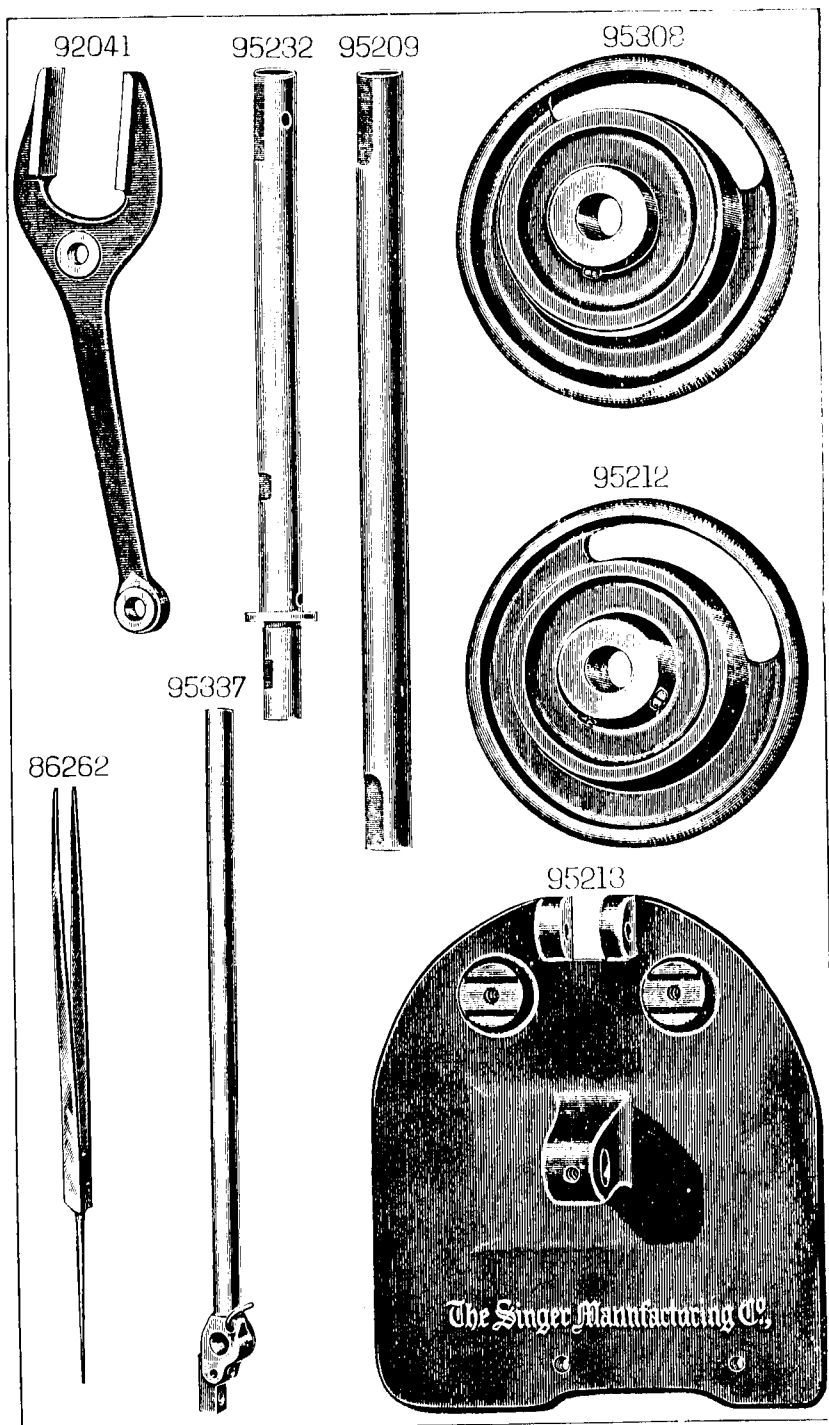


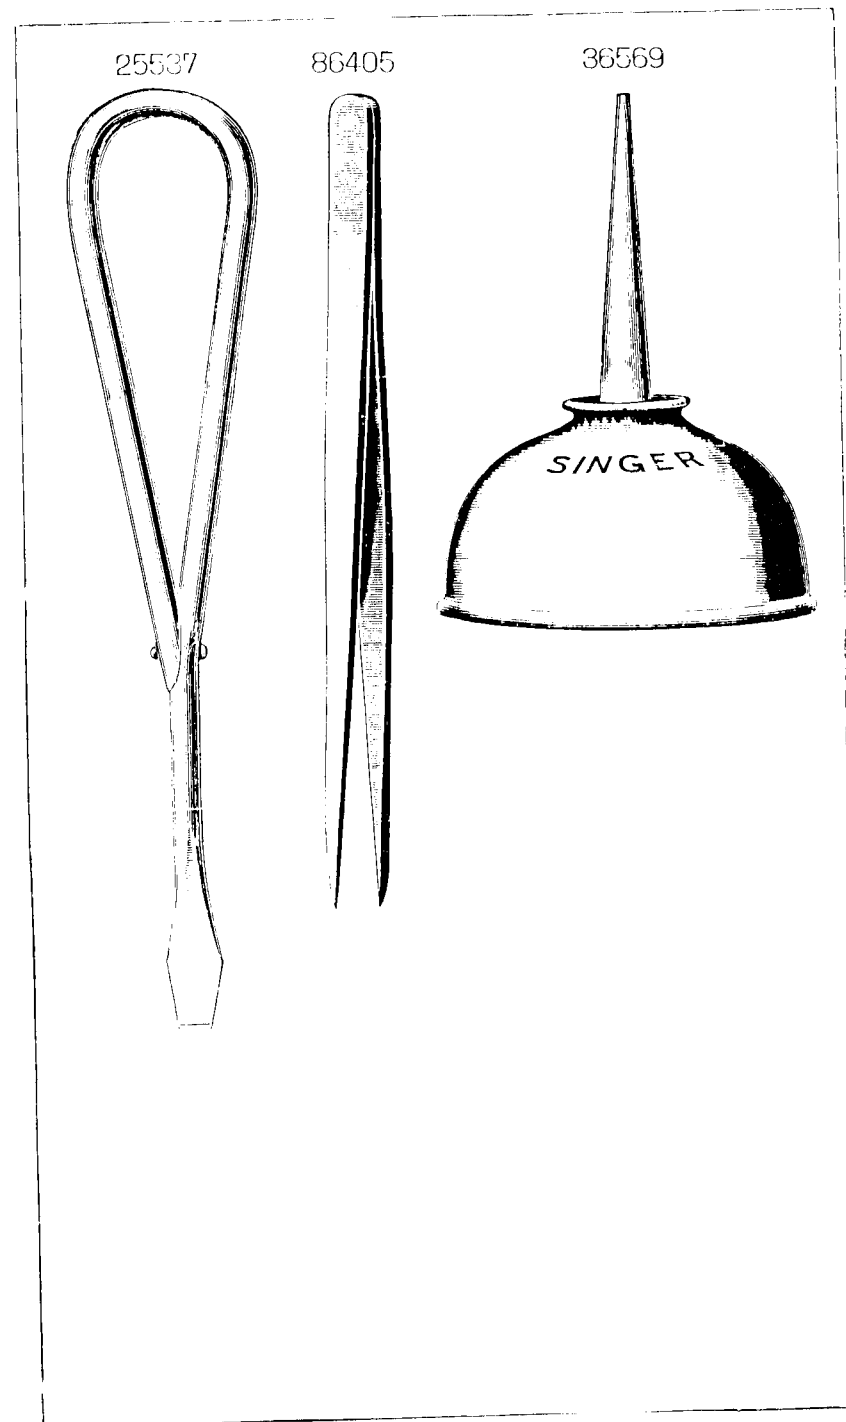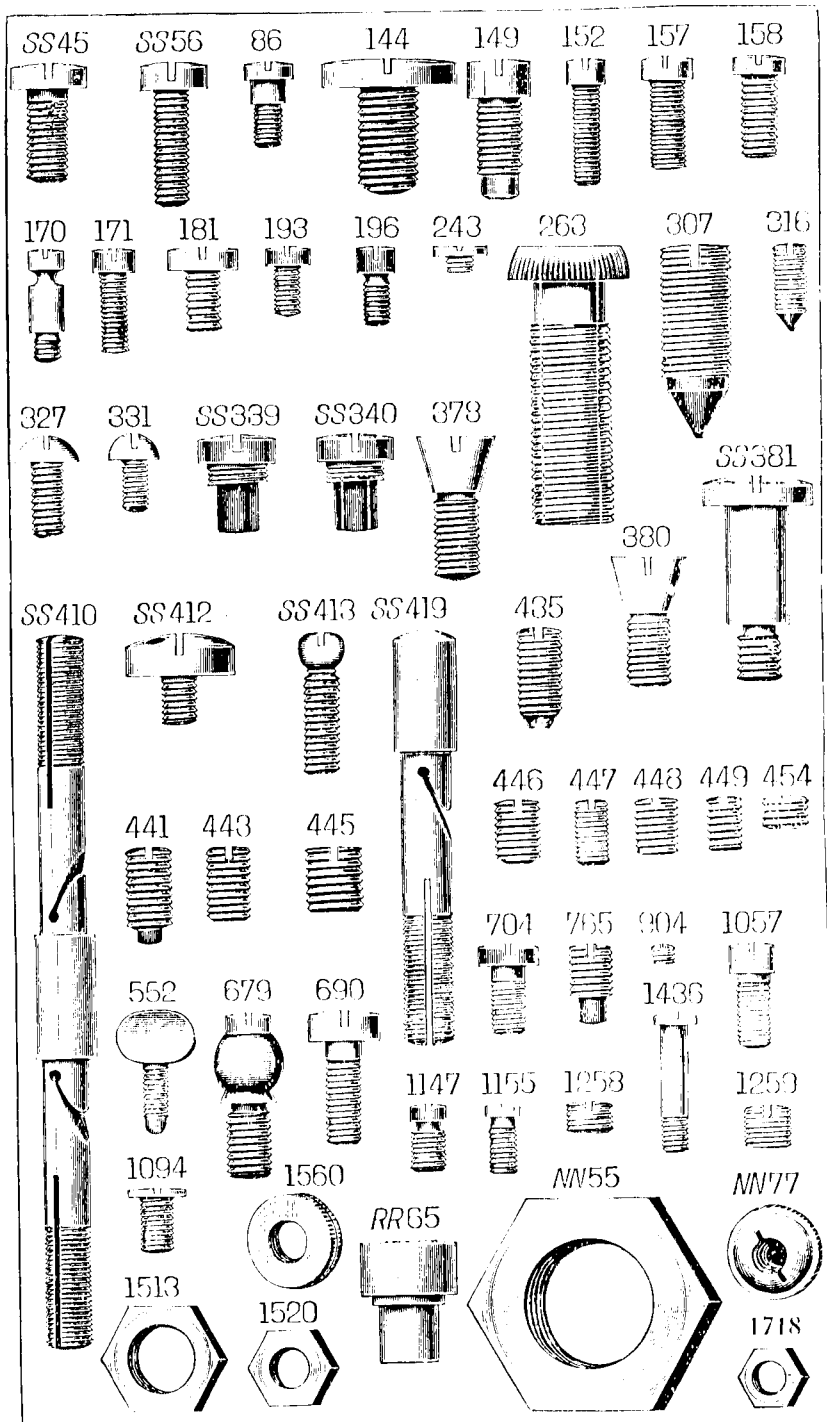

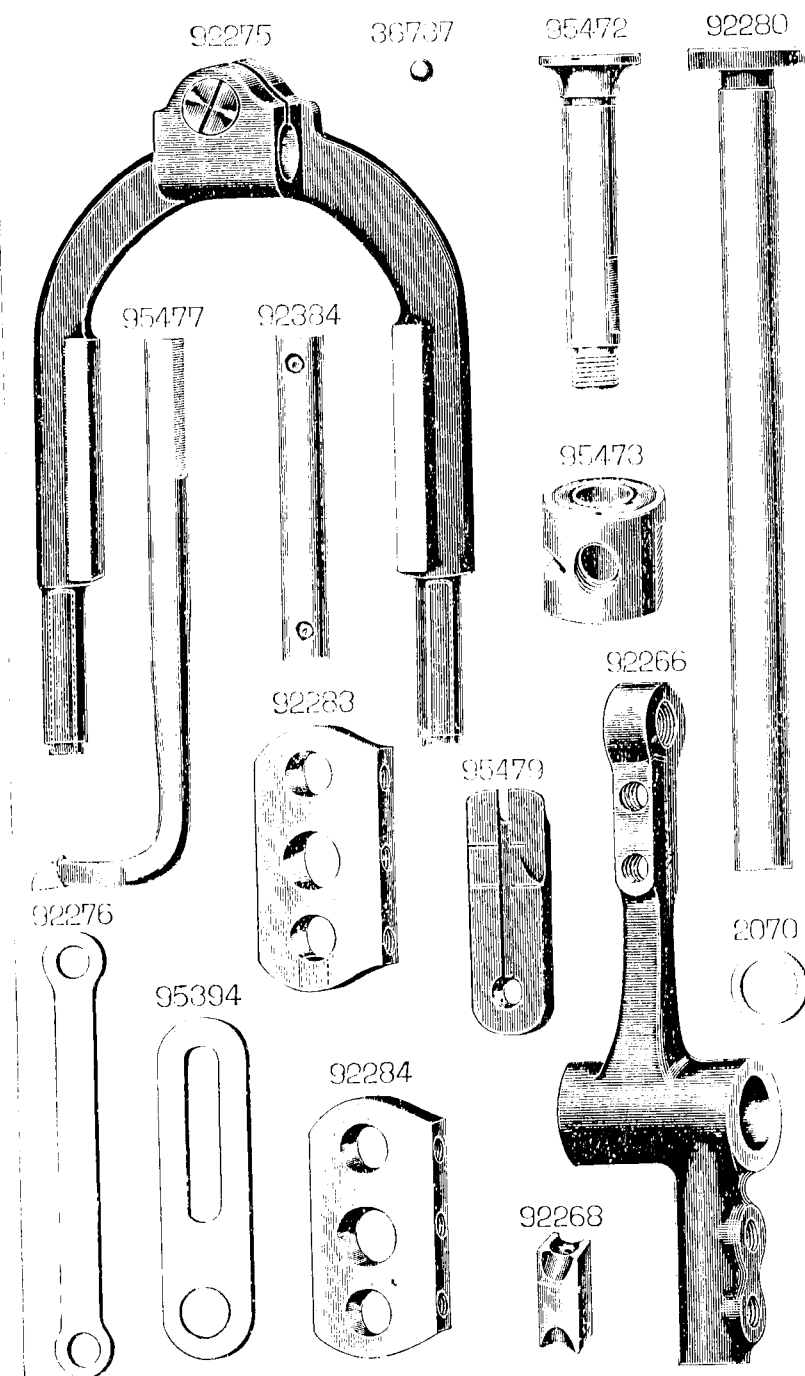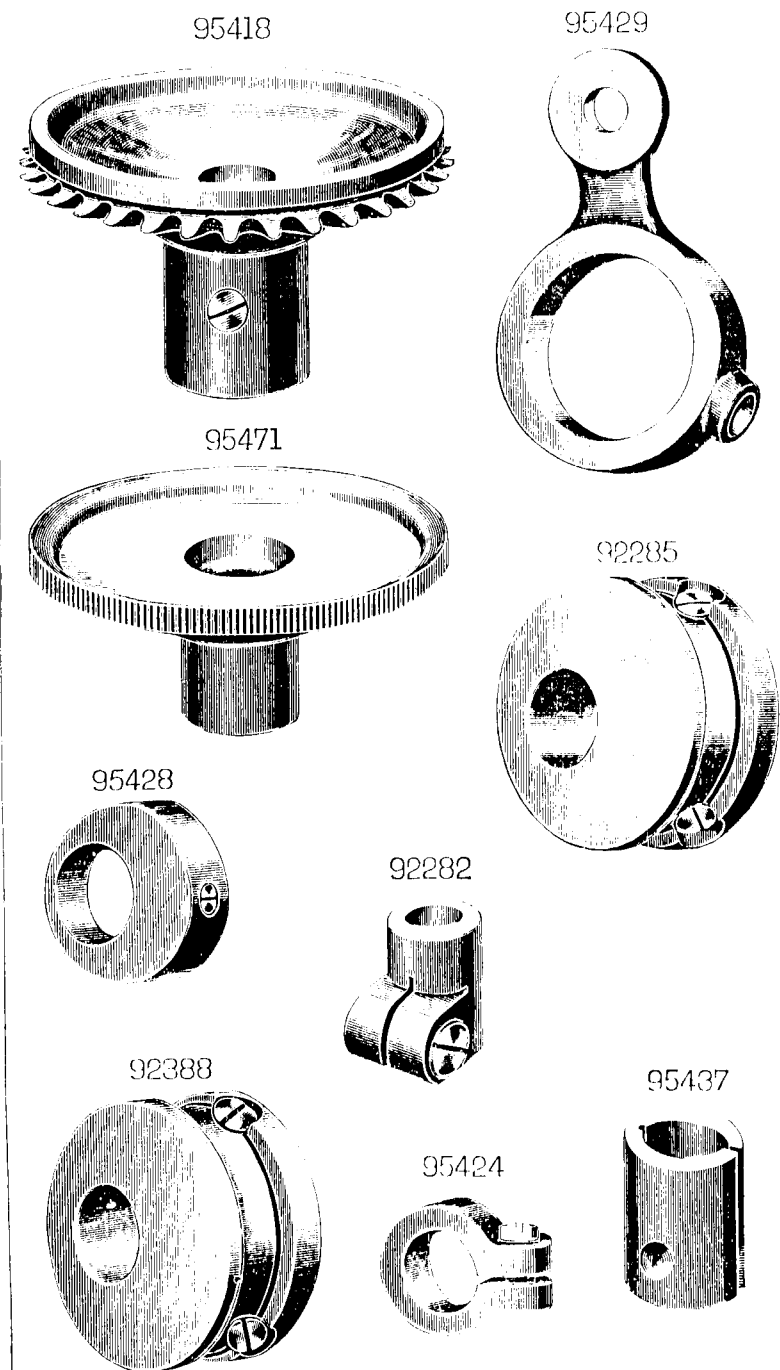


95440

62301

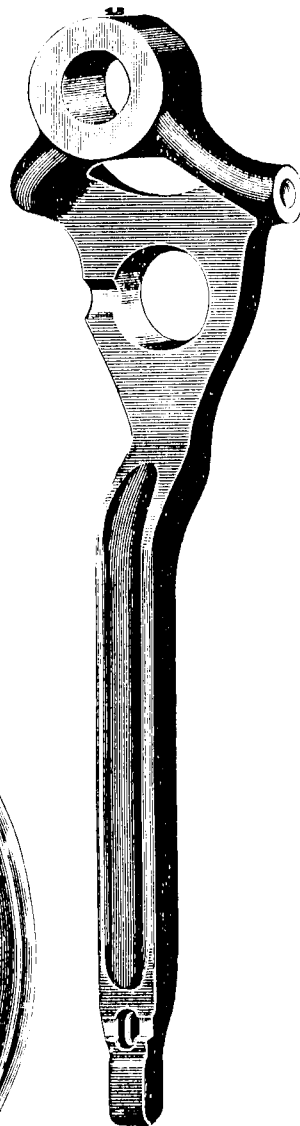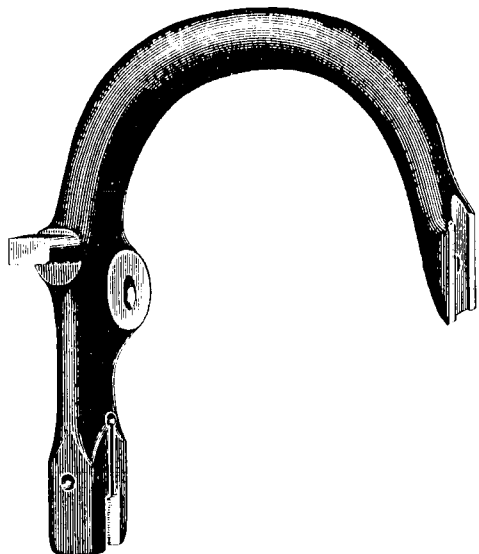


95414

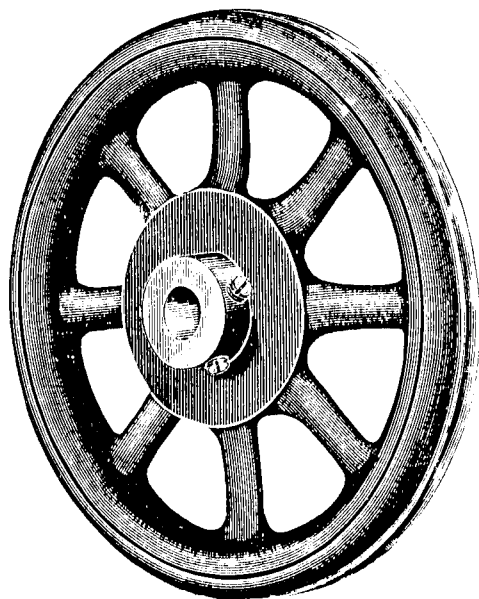


95415



95433 95423 95478

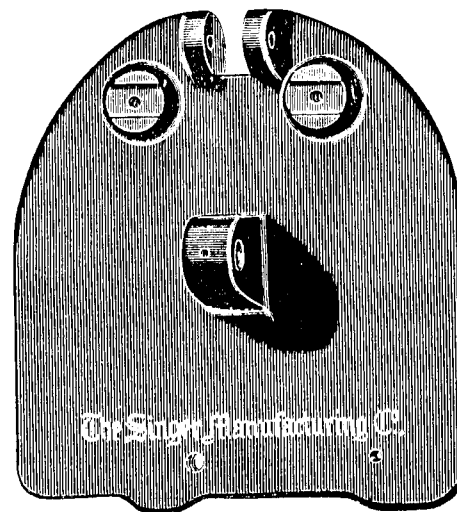


95430

95544

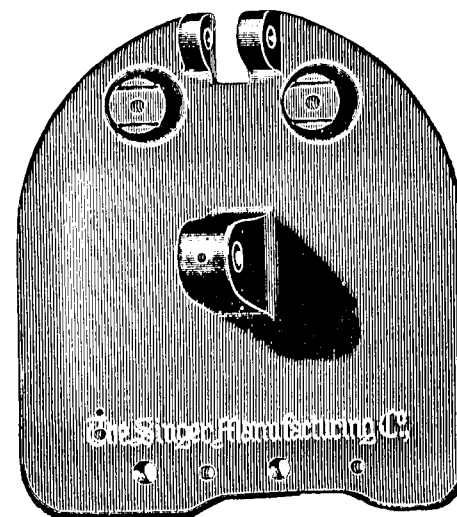


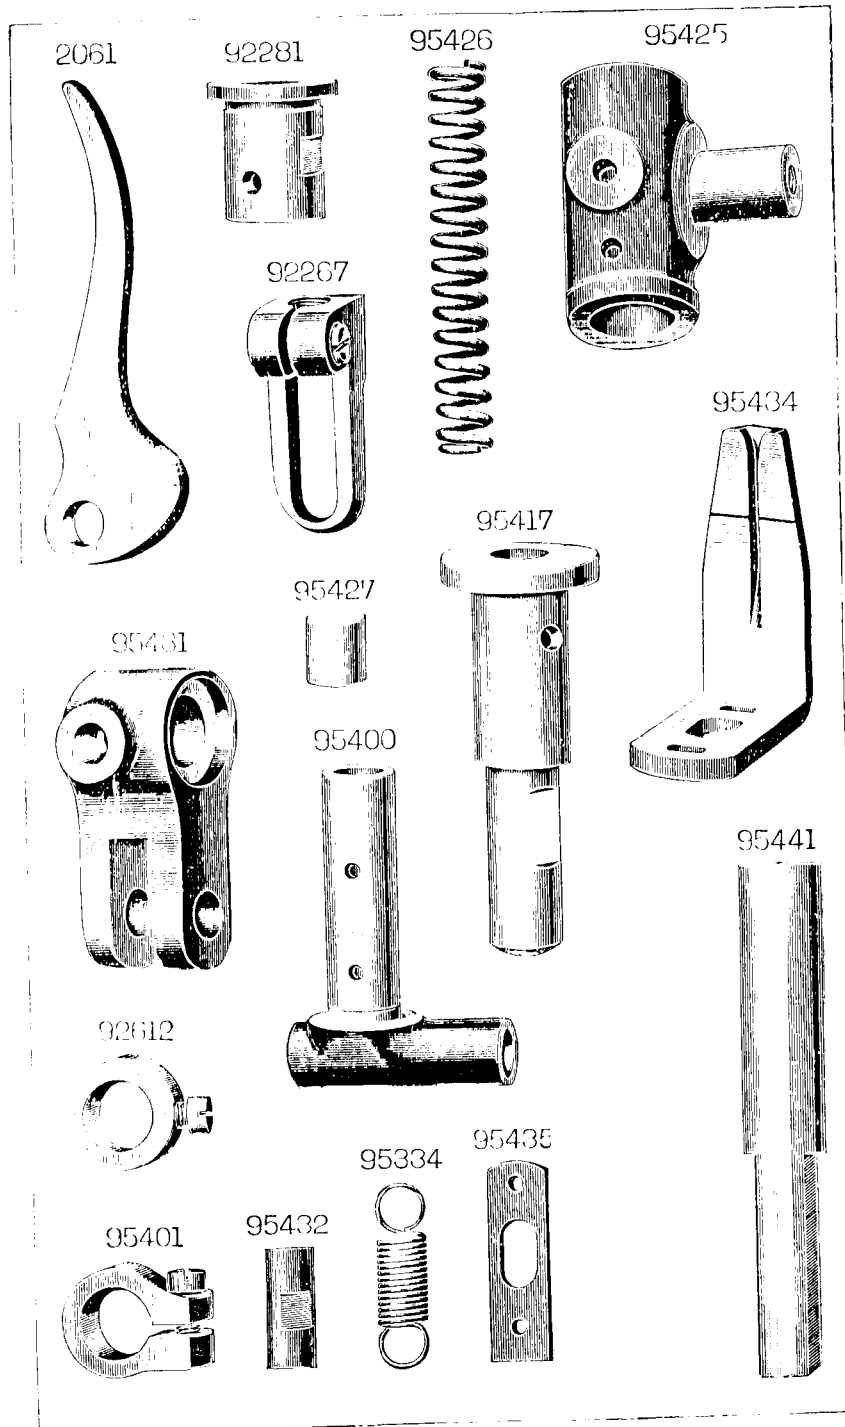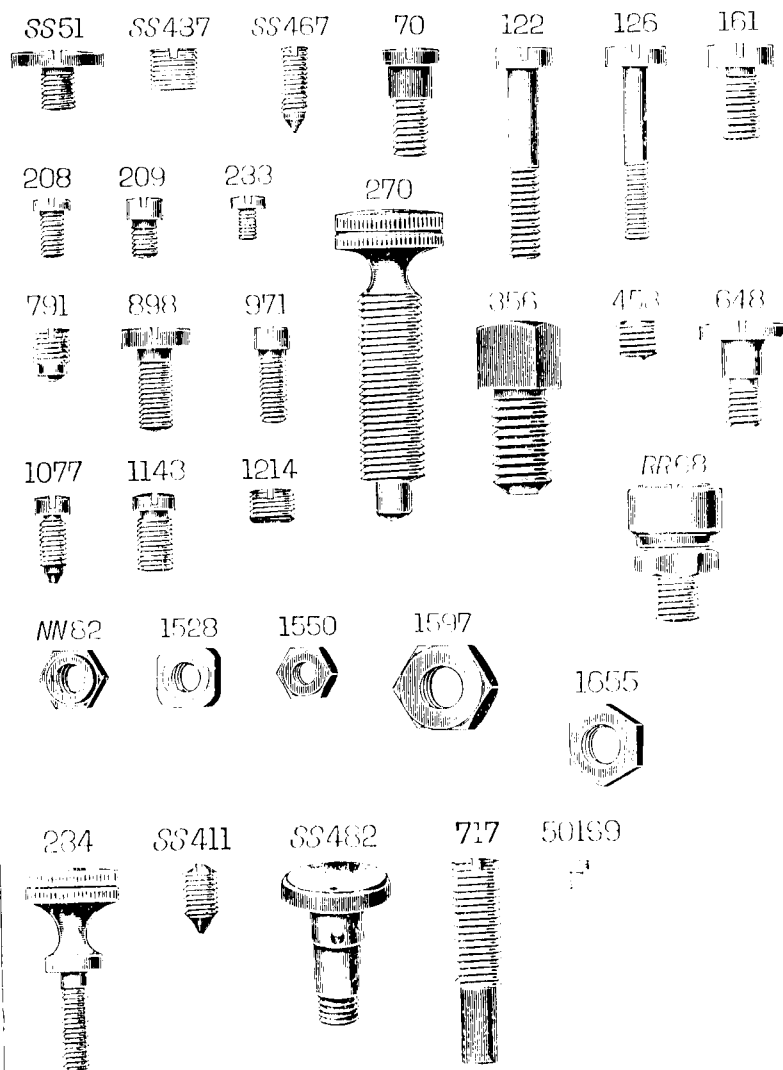


95397

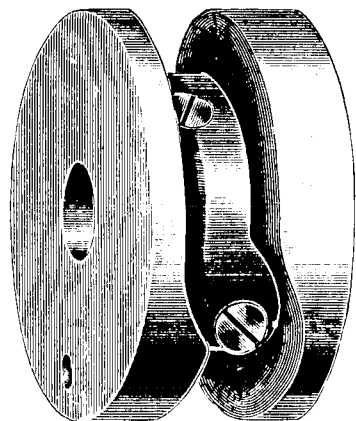


95398

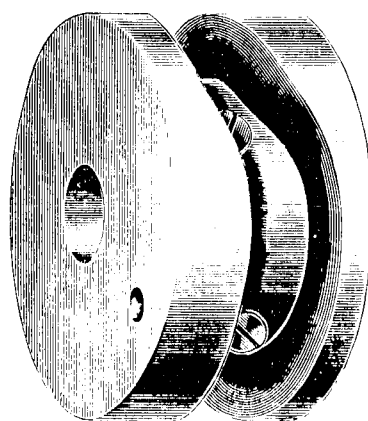


95474

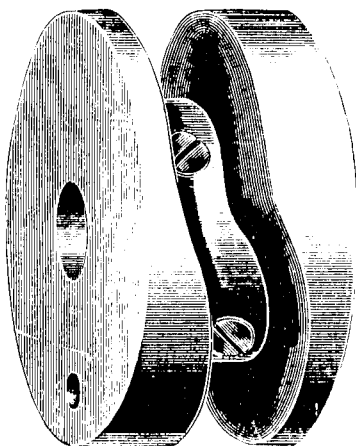


95481

 

95552

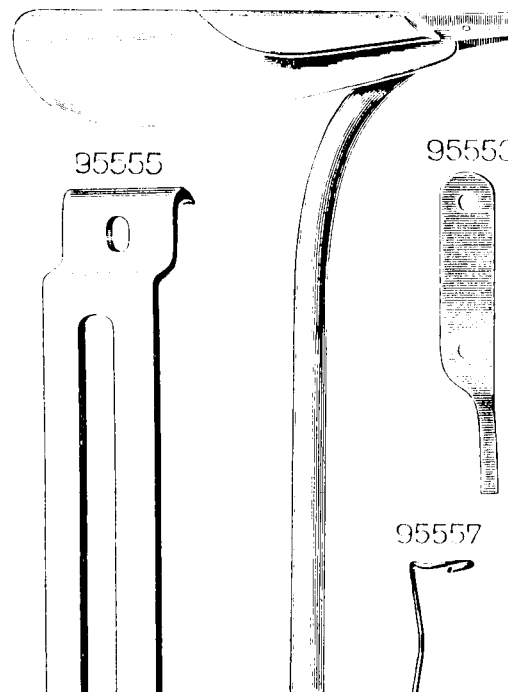

95555

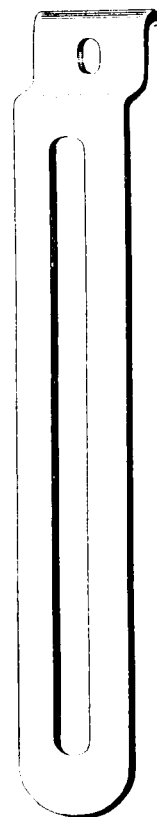


95553




95557



95554

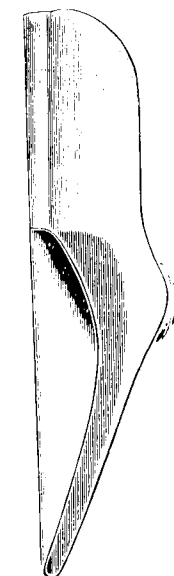

95556

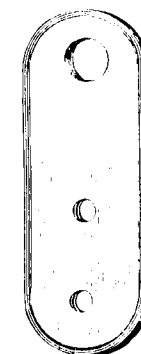

85514



219



242





286




1443



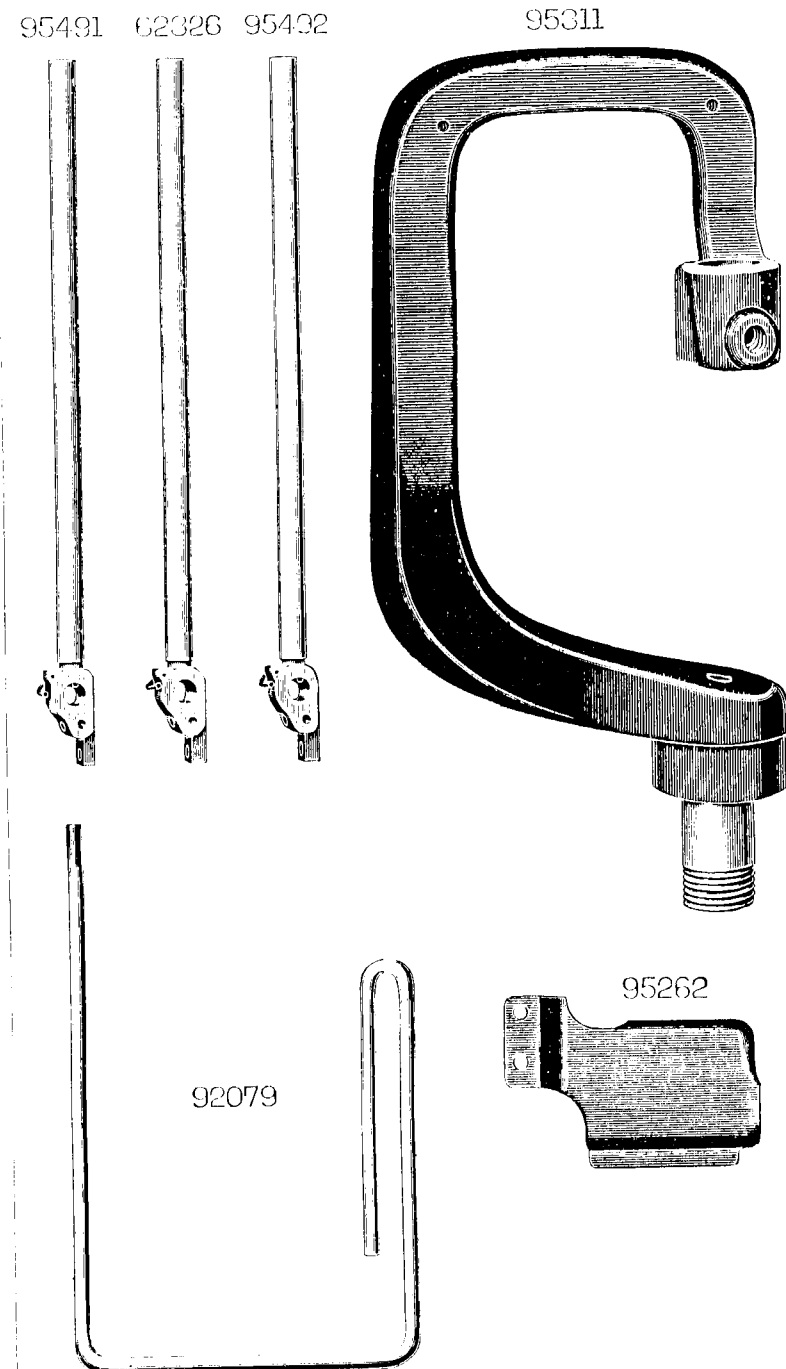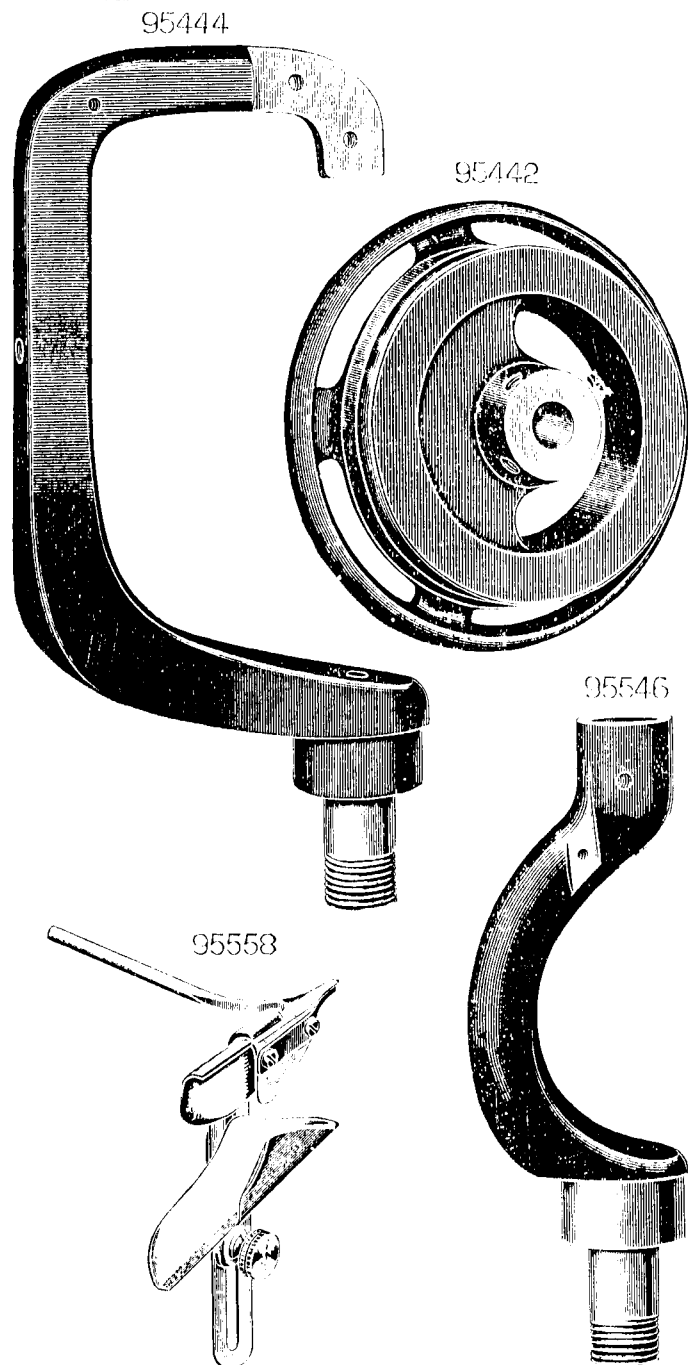

95315

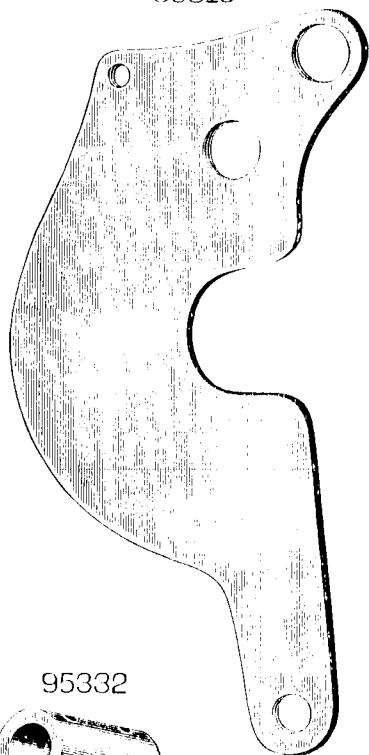


92033




95357



95332

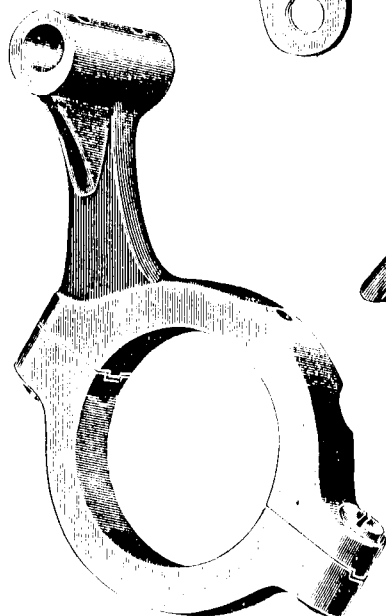

95449

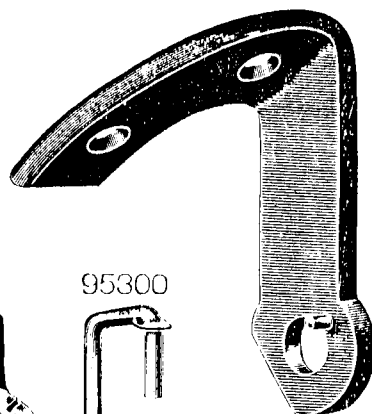


95300




95230




95484

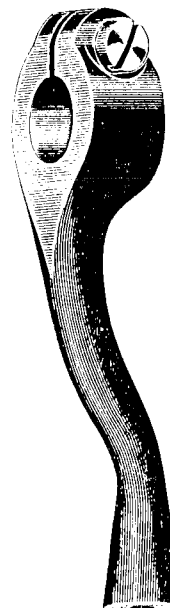


95498

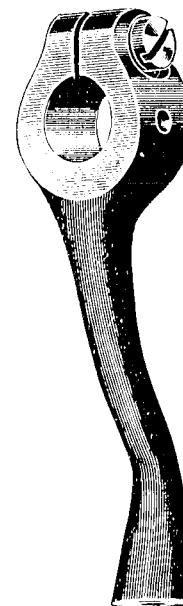


92032

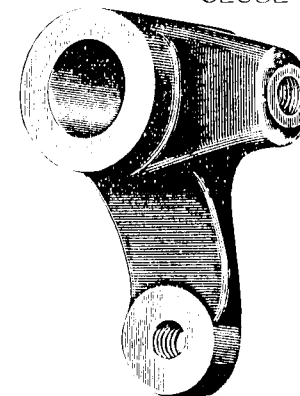


95483

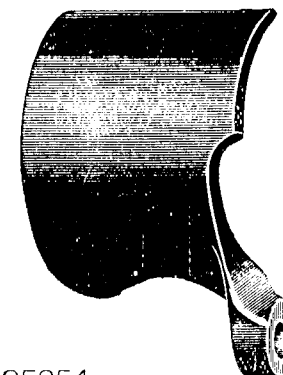


95443

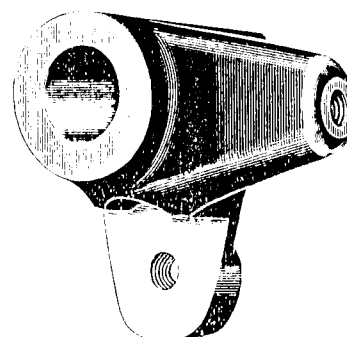


95254

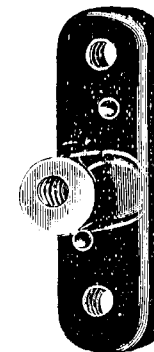

95346

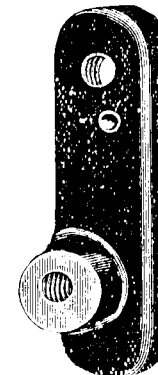

95325


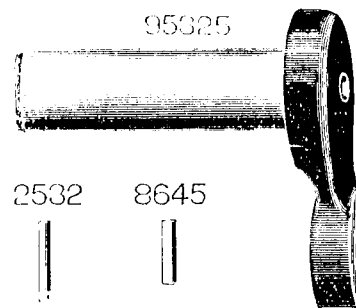




2532




8645



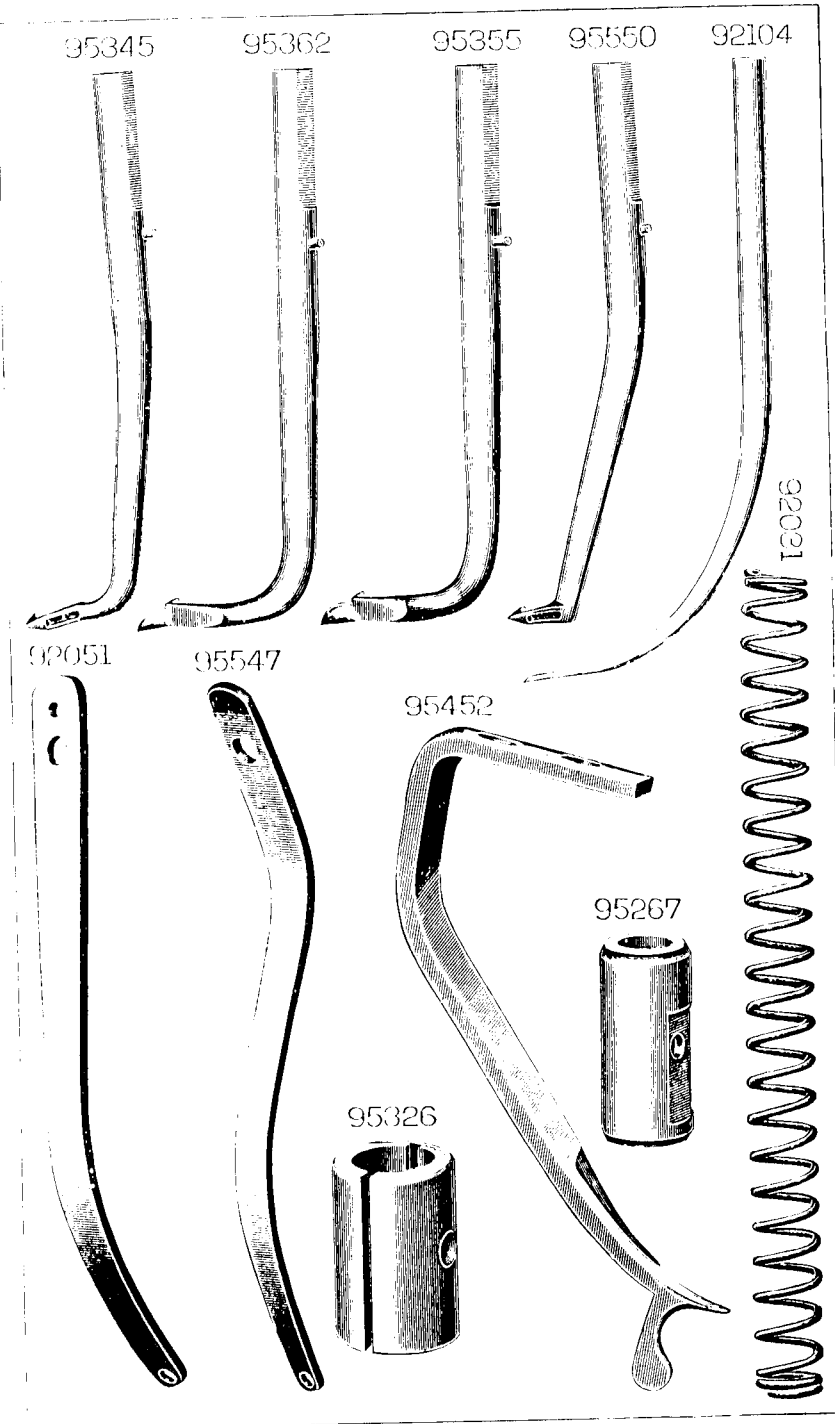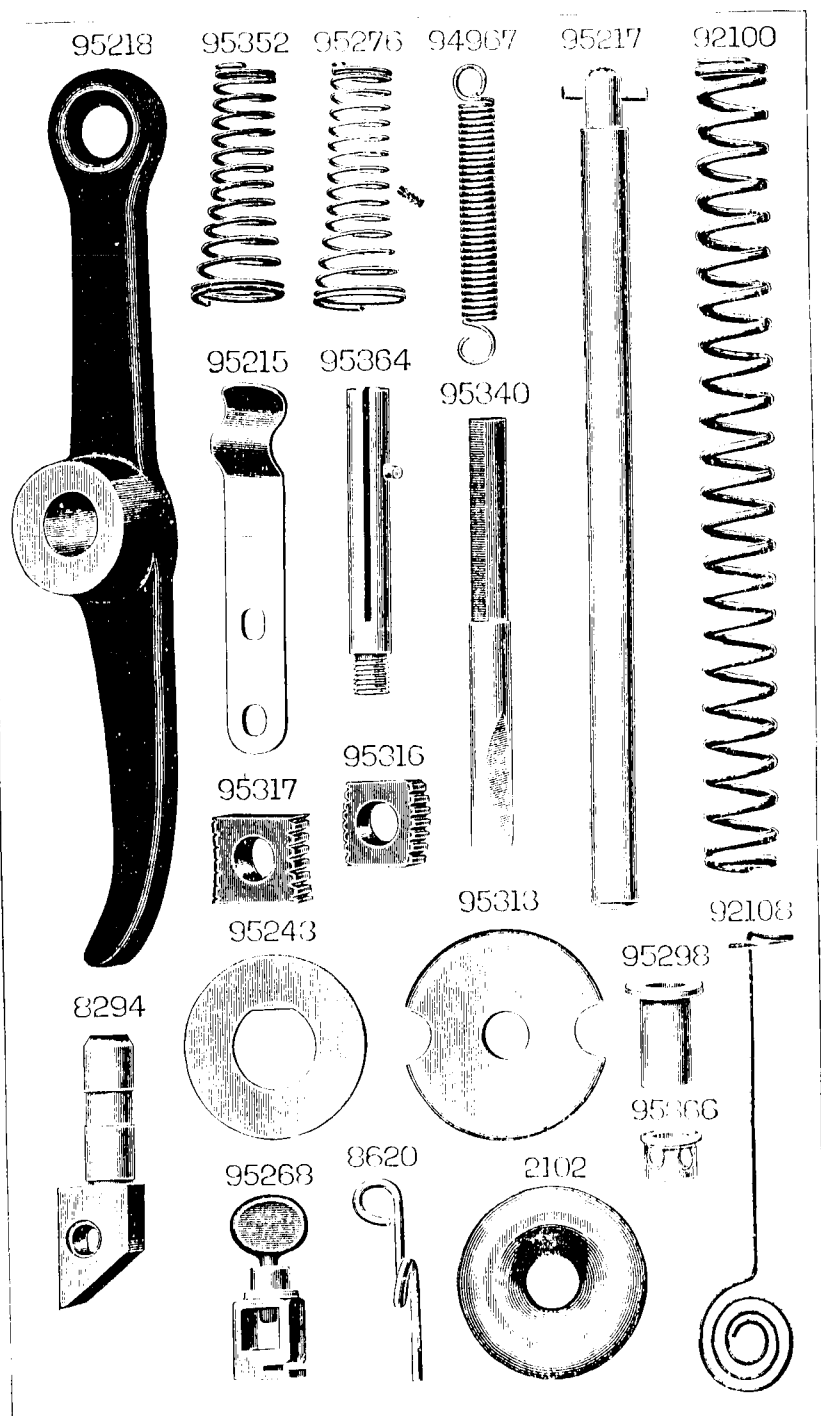

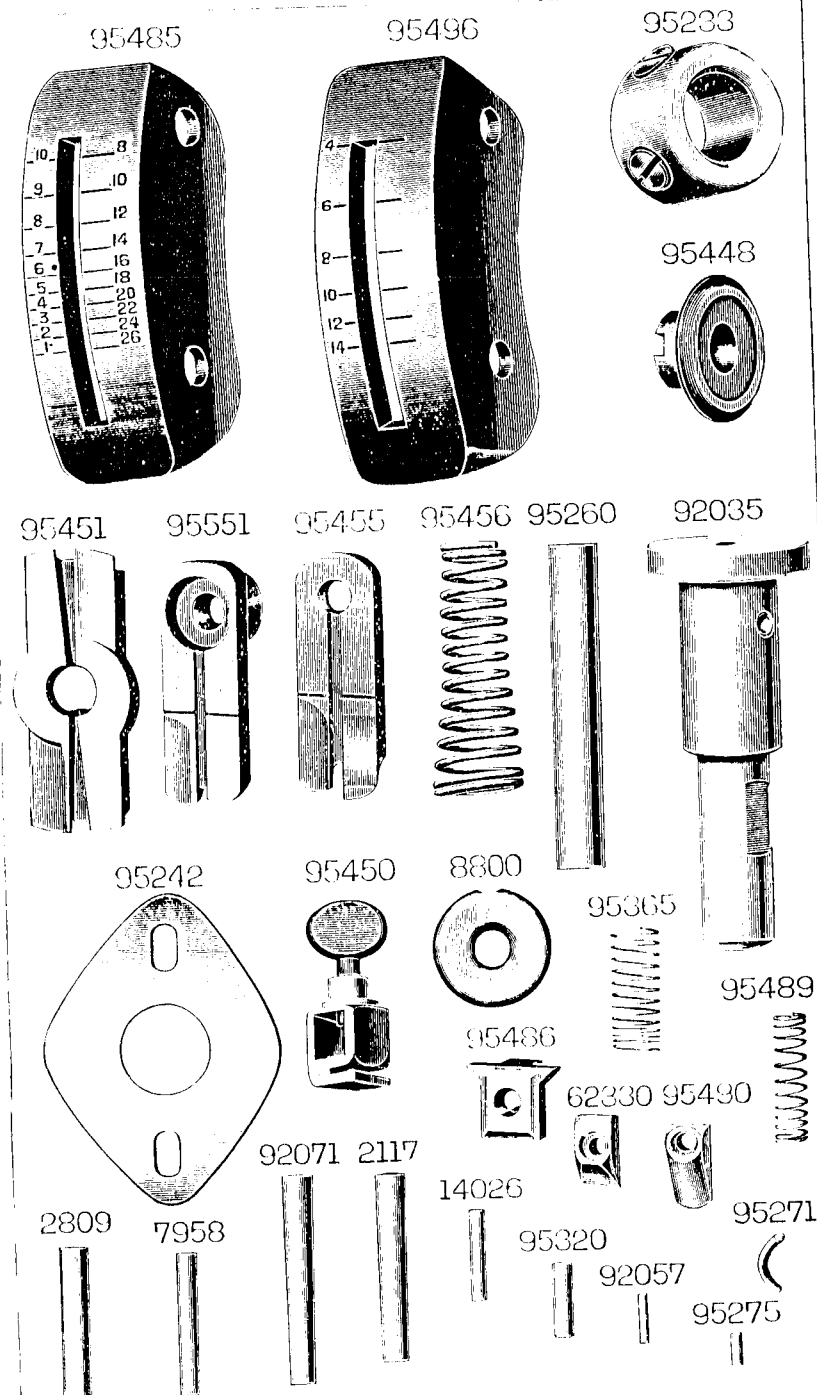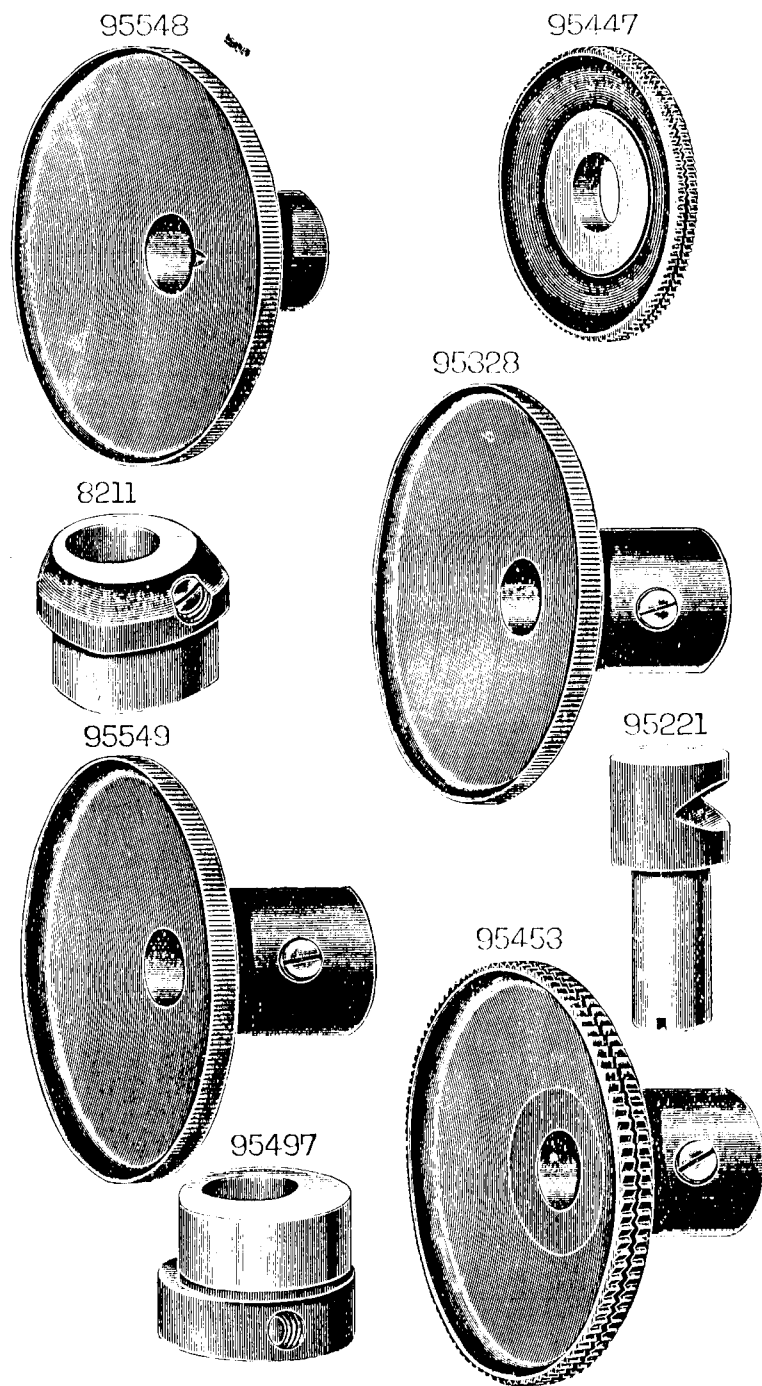


92169

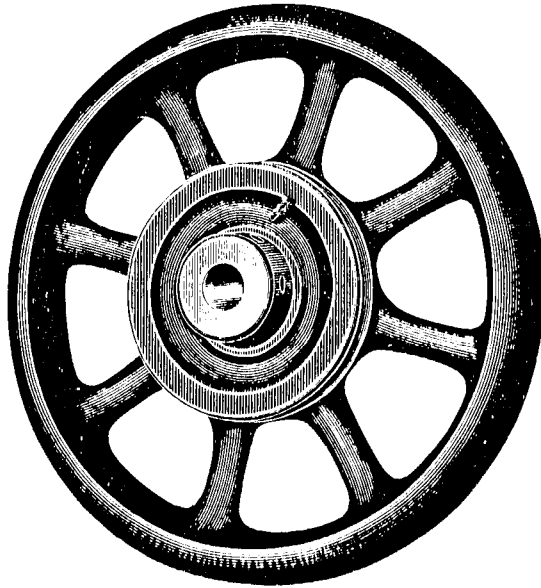


95457




95458

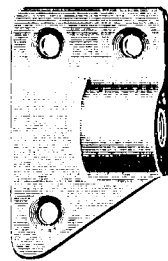


95324

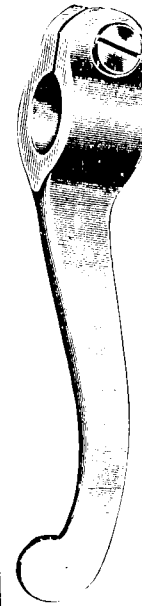

95327

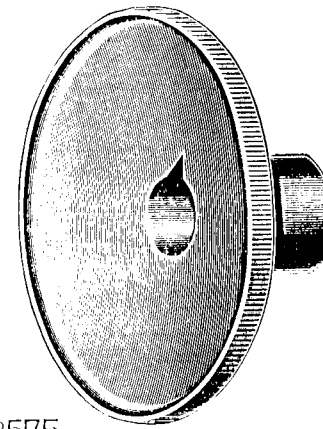


95363

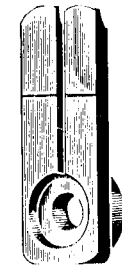

8575



95467

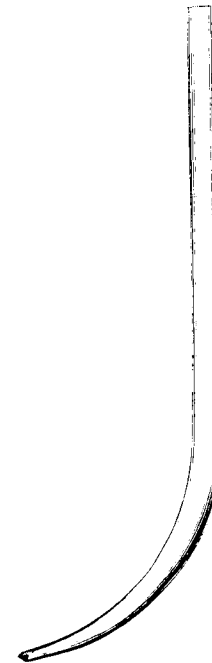

ILLUSTRATED LIST OF PARTS FOR Nos. 46K34, 46K35, 46K37 to 46K39 and 46K46 Machines



In ordering from this List, the prefix and affix letters, with the part number, **MUST BE** quoted exactly as they are shown in the first column.

A number always indicates the same part, in whatever List it may appear, or for whatever machine.

The prefix *SS* indicates Screws made only at Singer.

" " *NN* " Nuts made only at Singer.

" " *RR* " Rollers and Studs made only at Singer.

The affix letters (where shown) indicate the style of finish, as follows:—

- A.** Hardened, Polished and Plated.
- B.** Polished and Plated.
- C.** Hardened only.
- D.** Polished only.
- E.** Soft, not Polished.
- F.** Hardened and Polished.
- H.** Blued.
- J.** Plated only.
- K.** Hardened and Plated.
- L.** Brass or Gilt.
- M.** Oxidized.
- P.** Japanned.
- R.** Parkerized.
- T.** Copper Plated.

In this series:—

- 1 to 1500 and 50001 to 51500 are Screw Numbers.
- 1501 " 1800 are Nut Numbers.
- 1801 " 2000 " Roller " "
- 2001 " 50000 are numbers of machine parts, etc.
- 80001 " 100000 are numbers of machine parts, etc.,
made only at Singer.

Parts marked with an asterisk () are furnished only when the repairs are made at Factory.*

PARTS COMPLETE FOR No. 46K34 MACHINE



For Fine Fur Work (Surjetense), fitted with Stitch Regulator with Indicator, Friction Feed Motion and Ball Bearing Front Feeding Disc. Single Thread Chain Stitch.

No.	Date	
95308	1026	Balance Band Wheel with two 118c
118c	1035	" " " Set Screw
95209	1026	" " " Shaft
114d	1035	" " " " End Screw (2)
95398	1606	" " " " Looper Cam (steel) with two 115c
115c	1035	" " " " " Set Screw
95211	1031	" " " " Oil Hole Cover (right)
95483	1611	" " " " " (left)
86d	1035	" " " " " Hinge Screw (2)
95212	1026	" Hand Wheel with two 118c
118c	1035	" " " " Set Screw
95213	1026	Cover Plate
95361		Cover Plate, complete, Nos. 331d, SS 1191, 15004, 95213, 95352, 95368 and two 2102
2117	1615	Cover Plate Hinge Pin
95215	1612	" " " Latch Spring
193f	1035	" " " " " Screw (2)
62301	1106	Feed Adjusting Lever with 116c
116c	1035	" " " " Set Screw
307c	1035	" " " " Screw Centre (2)
1513j	1035	" " " " " Nut (2)
95217	1612	" " " " Spindle with 11026
11026	1615	" " " " " Position Pin
92031	1613	" " " " Spring
263c	1035	" " " " " Regulating Thumb Screw
2070	1403	" " " " " Washer

No.	Plate								
92032	1611	Feed Bell Crank	...	...	...	...	...	...	...
*92017	"	"	"	"	Connecting Rod	...	...	...	...
92033	1610	"	"	"	"	"	92017 with 92034, 92256 and four 196f	...	...
*92034	"	"	"	"	"	"	Cap (plain countersink) (for Friction Driver Universal Joint Screw)	...	...
*92256	"	"	"	"	"	"	Rod Cap (elongated countersink) (for Bell Crank Universal Joint Screw)	...	...
196f	1035	"	"	"	"	"	Rod Cap Binding Screw	...	...
92035	1615	"	"	"	Fulcrum Stud	...	...	...	...
448e	1035	"	"	"	"	"	Set Screw	...	...
679c	1035	"	"	"	Universal Joint Screw	...	...	...	...
95311	1609	Feed Bracket (front)	...	...	...	...	...	...	...
NN55e	1035	"	"	"	Nut	...	...	...	...
8211	1614	Feed Cam with 448e	...	...	...	...	...	...	...
448e	1035	"	"	"	Set Screw	...	...	...	...
2039	1031	Feed Connecting Link	...	...	...	...	...	...	...
380c	1035	"	"	"	Hinge Screw	...	...	...	...
1520c	1035	"	"	"	"	"	Nut	...	...
92041	1026	Feed Forked Connection	...	...	...	...	...	...	...
378c	1035	"	"	"	Hinge Screw	...	...	...	...
1520c	1035	"	"	"	"	"	Nut	...	...
95232	1026	Feed Friction Shaft (upright)	...	...	...	...	...	...	...
SS45d	1035	"	"	"	End Screw	...	...	...	...
95313	1612	"	"	"	"	"	Washer	...	...
95242	1615	"	"	"	Friction Spring	...	...	...	...
765e	1035	"	"	"	"	"	Tension Screw	...	...
95243	1612	"	"	"	"	"	Washer	...	...
95233	1615	"	"	"	Position Collar with 1258e and 1259c	...	...	...	...
1258e	1035	"	"	"	"	"	Set Screw (short)	...	...
1259c	1035	"	"	"	"	"	(long)	...	...
95314	1031	Feed Friction Wheel with 435e, 441e and two 765e	...	...	...	...	...	...	...
441e	1035	"	"	"	Position Screw	...	...	...	...
435e	1035	"	"	"	Set Screw	...	...	...	...
95315	1610	Feed Friction Wheel Driver	...	...	...	...	...	...	...
95316	1612	"	"	"	"	"	Block (inside)	...	...
SS339c	1035	"	"	"	"	"	(") Screw Stud	...	...
95317	1612	"	"	"	"	"	(outside)	...	...
SS340c	1035	"	"	"	"	"	(") Screw Stud	...	...
243c	1035	"	"	"	"	"	(") " " End Screw	...	...

No.	Plate								
94967	1612	Feed Friction Wheel Driver Spring	...	...	...	...	...	...	...
95230	1610	"	"	"	"	"	Hook	...	...
470b	1035	"	"	"	"	"	Screw Stud	...	...
679c	1035	"	"	"	"	"	Universal Joint Screw	...	...
152 b	1035	"	"	"	"	"	" " Nut	...	...
95318		Feed Friction Wheel Driver, complete, Nos. 470b, 243c, SS339c, SS340c and 95315 to 95317	...	...	...	...	...	...	...
95319	1031	Feed Friction Wheel Retaining Clutch with 95271	...	...	...	...	...	...	...
95322	1031	"	"	"	"	"	Bracket with 95271	...	...
95271	1615	"	"	"	"	"	" Spring Hook	...	...
690c	1035	"	"	"	"	"	" Screw	...	...
95320	1615	"	"	"	"	"	Hinge Pin	...	...
95334	1605	"	"	"	"	"	Spring	...	...
95271	1615	"	"	"	"	"	" Hook	...	...
95323		Feed Friction Wheel Retaining Clutch, complete, Nos. 95319, 95320 and 95322	...	...	...	...	...	...	...
95484	1611	Feed Regulating Lever with 158f	...	...	...	...	...	...	...
158f	1035	"	"	"	"	"	Binding Screw	...	...
95485	1615	"	"	"	"	"	Segment	...	...
161c	1408	"	"	"	"	"	Screw (2)	...	...
95486	1615	"	"	"	"	"	Stitch Indicator	...	...
284d	1408	"	"	"	"	"	Thumb Screw	...	...
95325	1611	Feed Regulator	...	...	...	...	...	...	...
95326	1613	"	"	"	Bush	...	...	...	...
149f	1035	"	"	"	"	"	Set Screw	...	...
380c	1035	"	"	"	"	"	Hinge Screw	...	...
1520c	1035	"	"	"	"	"	Nut	...	...
95218	1612	Feed Roll Opening Lever	...	...	...	...	...	...	...
SS381d	1035	"	"	"	"	"	Hinge Screw	...	...
95471	1402	Feeding Disc (front)	...	...	...	...	...	...	...
36737	1403	"	"	(")	Ball, $\frac{1}{2}$ " diam.	...	...	...	...
95472	1403	"	"	(")	Stud	...	...	...	...
95473	1403	"	"	(")	"	Bushing	...	...	...
145c	1035	"	"	(")	"	"	Binding Screw	...	...
316c	1035	"	"	(")	"	"	Raising Set Screw	...	...
1214c	1408	"	"	(")	"	"	Set Screw	...	...
1597c	1408	"	"	(")	"	"	Nut	...	...
95476		Feeding Disc (front, Ball Bearing), complete, Nos. 1214c, 1597c, 95471 to 95473 and twenty 36737	...	...	...	...	...	...	...
95328	1611	Feeding Disc (back) with 454c	...	...	...	...	...	...	...
454c	1035	"	"	"	Set Screw	...	...	...	...
92104	1613	Fur Guide	...	...	...	...	...	...	...
152f	1035	"	"	"	Binding Screw	...	...	...	...

No.	Plate								
95487	---	Head of Machine	...	...	...	...	...	...	...
SS56d	1035	" " " Binding Screw (2)	...	...	...	...	...	...	...
95362	1613	Looper with 92057	...	...	...	...	...	...	...
1147c	1035	" Binding Screw (2)	...	...	...	...	...	...	...
92266	1403	" Holder	...	...	...	...	...	...	...
92288	---	" " 92266 with RR68	...	...	...	...	...	...	...
95244	---	Looper Holder Connection , complete, Nos. 209d, SS467c, 1077c, 1550j, 92280, 92283, 92284, 92288, 92384, 92388, 95260, 95332, 95400, 95401 and four 1155d	...	...	...	...	...	...	...
92267	1605	Looper Holder Position Link with 171c	...	...	...	...	...	...	...
95254	1611	" " " " Bracket	...	...	...	...	...	...	...
95255	1031	" " " " " Plate	...	...	...	...	...	...	...
SS56e	1035	" " " " " Binding Screw (2)	...	...	...	...	...	...	...
7958	1615	" " " " " Steady Pin (2)	...	...	...	...	...	...	...
92268	1403	" " " " " Distance Rod	...	...	...	...	...	...	...
SS437c	1408	" " " " " End Screw	...	...	...	...	...	...	...
171c	1035	" " " " " Binding Screw	...	...	...	...	...	...	...
SS413c	1035	" " " " " Universal Joint Screw	...	...	...	...	...	...	...
1718h	1035	" " " " " Nut	...	...	...	...	...	...	...
		(bottom)	...	...	...	...	...	...	...
NN82c	1408	" " " " " Nut (top)	...	...	...	...	...	...	...
92269	---	Looper Holder Position Link , complete, Nos. SS437c, 92267, 92268 and two SS413c	...	...	...	...	...	...	...
92283	1403	Looper Holder Rock Shaft Bracket (right side)	...	...	...	...	...	...	...
SS467c	1408	" " " " " (" ") Adjusting Screw	...	...	...	...	...	...	...
1550j	1408	" " " " " (" ") Adjusting Screw Nut	...	...	...	...	...	...	...
92284	1403	" " " " " (left side)	...	...	...	...	...	...	...
1155d	1035	" " " " " Set Screw	...	...	...	...	...	...	...
92388	1402	" " " " " Eccentric with two 146c	...	...	...	...	...	...	...
95332	1610	" " " " " Connecting Rod with 95333 and two 1057c	...	...	...	...	...	...	...
*95333	---	" " " " " Connecting Rod Cap	...	...	...	...	...	...	...
1057c	1035	" " " " " " " " Screw	...	...	...	...	...	...	...
95260	1615	" " " " " " " Stud	...	...	...	...	...	...	...
446c	1035	" " " " " " " Set Screw	...	...	...	...	...	...	...
95400	1605	" " " " " Fulcrum Joint	...	...	...	...	...	...	...
95401	1605	" " " " " " " Collar with 171c	...	...	...	...	...	...	...
171c	1035	" " " " " " " Binding Screw	...	...	...	...	...	...	...
92384	1403	" " " " " " " Stud	...	...	...	...	...	...	...
209d	1408	" " " " " " " Set Screw	...	...	...	...	...	...	...
1077c	1408	" " " " " " " Spot Screw	...	...	...	...	...	...	...
95262	1609	" " " " " Oil Cover	...	...	...	...	...	...	...

No.	Plate								
92280	1403	Looper Holder Rock Shaft Stud	...	...	...	...	...	...	...
92281	1605	" " " " " Bushing	...	...	...	...	...	...	...
447c	1035	" " " " " " " Set Screw	...	...	...	...	...	...	...
92282	1402	" " " " " " " Collar with 704c	...	...	...	...	...	...	...
704c	1035	" " " " " " " Clamping Screw	...	...	...	...	...	...	...
RR68	1408	" " " " " " " Roller and Screw Stud with 378c and 1520c	...	...	...	...	...	...	...
378c	1035	" " " " " " " Screw	...	...	...	...	...	...	...
1520c	1035	" " " " " " " Nut	...	...	...	...	...	...	...
92057	1615	" " " " " " " Position Pin	...	...	...	...	...	...	...
95264	---	Machine Base	...	...	...	...	...	...	...
8294	1612	" " " " " Hinge Connection	...	...	...	...	...	...	...
2809	1615	" " " " " Pin	...	...	...	...	...	...	...
95265	---	Machine Base , complete, Nos. 95264, two each 2809 and 8294	...	...	...	...	...	...	...
95337	1026	Needle Bar with 95357	...	...	...	...	...	...	...
95267	1613	" " " " " Bushing	...	...	...	...	...	...	...
443c	1035	" " " " " " " Set Screw	...	...	...	...	...	...	...
95268	1612	" " " " " Clamp with 552b	...	...	...	...	...	...	...
552b	1035	" " " " " " " Thumb Screw	...	...	...	...	...	...	...
95338	1031	" " " " " Eccentric with 149c	...	...	...	...	...	...	...
92071	1615	" " " " " Dowel Pin	...	...	...	...	...	...	...
92275	1403	" " " " " Fork with 157c	...	...	...	...	...	...	...
157c	1035	" " " " " " " Clamping Screw	...	...	...	...	...	...	...
92276	1403	" " " " " " " Strap	...	...	...	...	...	...	...
208c	1408	" " " " " " " Screw	...	...	...	...	...	...	...
92277	---	" " " " " " " complete, Nos. 92275, 92276 and two 208c	...	...	...	...	...	...	...
449c	1035	" " " " " " " Set Screw	...	...	...	...	...	...	...
95357	1610	" " " " " Thread Guide	...	...	...	...	...	...	...
95298	1612	" " " " " Nipper	...	...	...	...	...	...	...
95489	1615	" " " " " " " Spring	...	...	...	...	...	...	...
95300	1610	" " " " " " " Adjusting Bracket	...	...	...	...	...	...	...
904c	1035	" " " " " " " " " " " Set Screw	...	...	...	...	...	...	...
95491	1609	Needle Bar with 95357	...	...	...	...	...	...	...
95490	1615	" " " " " Needle Stop	...	...	...	...	...	...	...
50169d	1408	" " " " " " " Screw	...	...	...	...	...	...	...
95488	---	Needle Bar , complete, Nos. 50169d, 95490 and 95491	...	...	...	...	...	...	...

NOTE: Needle Bar No. 95337 is sent with this machine unless otherwise specified on order.

95481	1606	Needle Guide with two 95275	...	...	...	...	...	...	...
898f	1408	" " " " " Binding Screw	...	...	...	...	...	...	...
95275	1615	" " " " " Position Pin	...	...	...	...	...	...	...

No.	Plate								
92079	1609	Reel Holder	...	...	...	...	...	...	...
327d	1035	"	"	Binding Screw (2)	...	...	...	...	...
8800	1615	"	"	"	"	Washer (2)	...	...	...
2102	1612	Tension Disc	...	...	...	...	...	...	...
SS419f	1035	"	"	Screw Stud and Thread Guide	...	...	...	...	...
331d	1035	"	"	"	"	Set Screw	...	...	...
1560d	1035	"	"	"	"	Thumb Nut	...	...	...
95352	1612	"	"	Spring	...	...	...	...	...
95340	1612	Thread Nipper Spindle	...	...	...	...	...	...	...
174c	1035	"	"	"	"	Binding Screw	...	...	...
95364	1612	Thread Take-up Post with 95367	...	...	...	...	...	...	...
95365	1615	"	"	"	"	Spring	...	...	...
95366	1612	"	"	"	"	Collar	...	...	...
95367	"	"	"	"	"	Stop Pin	...	...	...
95368	"	Thread Take-up, complete, Nos. 95364 to 95366	...	...	...	...	...	...	...

PARTS SPECIAL

TO

No. 46K35 MACHINE



For Fur Work (Surjeteuse), fitted with Stitch Regulator with Indicator,
Friction Feed Motion and Ball Bearing Front Feeding Disc. Single
Thread Chain Stitch.

This Machine is the same as No. 46K34, with the following exceptions:

No.	Plate								
95474	1606	Balance Band Wheel Shaft Looper Cam (Steel) with two 445c	...	...	...	...	...	...	...
92100	1612	Feed Adjusting Lever Spring	...	...	...	...	...	...	...
95477	1403	Looper	...	...	...	...	...	...	...
95480		Looper Holder Connection, complete, Nos. 209d, SS467c, 1047c, 1550j, 92280, 92283 to 92285, 92288, 92384, 95260, 95337, 95400, 95404 and four 1155d	...	...	...	...	...	...	...
92285	1402	Looper Holder Rock Shaft Eccentric with two 446c	...	...	...	...	...	...	...
95478	1407	Needle Bar with 95357	...	...	...	...	...	...	...
95450	1615	"	"	Clamp with 552h	...	...	...	...	...
95350	1031	"	"	"	"	Eccentric with 449c	...	...	...
95492	1609	Needle Bar with 95357	...	...	...	...	...	...	...
95493		Needle Bar, complete, Nos. 50169d, 95490 and 95492	...	...	...	...	...	...	...
<i>NOTE. — Needle Bar No. 95478 is sent with this machine unless otherwise specified on order.</i>									
95479	1403	Needle Guide with two 95275	...	...	...	...	...	...	...

PARTS SPECIAL

TO

No. 46K37 MACHINE



For Turned Slipper Work; fitted with Stitch Regulator with Indicator, Friction Feed Motion and Lifting Needle Guide. Single Thread Chain Stitch.

This Machine is the same as No. 46K34 with the following exceptions:

No.	Plate	
95414	1406	Balance Band Wheel with two 118s
95415	1407	Cover Plate
95416		Cover Plate, complete, Nos. 331d, SS419f, 1091f, 1560d, 95352, 95394, 95415 and two 2102
95443	1611	Feed Bell Crank
95417	1605	" " " Fulcrum Stud
95497	1614	" Eccentric
95496	1615	" Regulating Lever Segment
95437	1402	" Regulator Bush
95418	1402	Feeding Disc with 154c
95494		Head of Machine
95355	1613	Looper with 92057
95180		Looper Holder Connection, complete, Nos. 209d, SS467c, 1077c, 1550j, 92280, 92283 to 92285, 92288, 92381, 95260, 95332, 95400, 95401 and four 1155d
92285	1402	Looper Holder Rock Shaft Eccentric with two 446
95450	1615	Needle Bar Clamp with 552h
95434	1605	Needle Guide
161f	1408	" " Binding Screw
95440	1406	" " Bracket
95441	1605	" " " Guide Bar
453c	1408	" " " " " Set Screw (2)

No. 46K37 MACHINE PARTS.

No.	Plate	
206f	1605	Needle Guide Bracket Lifting Lever
70c	1408	" " " " " Hinge Screw
95423	1407	" " " " " Shaft
95424	1402	" " " " " Adjustable Collar with 1143f
1143f	1408	" " " " " " " Screw
1513j	1035	" " " " " Nut
95425	1605	" " " " " Sleeve
SS51c	1408	" " " " " End Screw
126d	1408	" " " " " Guide Screw
95426	1605	" " " " " Spring
95427	1605	" " " " " Pad
270d	1408	" " " " " Regulating Screw
122c	1408	" " " " " Slot Adjusting Screw
1528j	1408	" " " " " Nut
95428	1402	" " Eccentric with 791c
95429	1402	" " " Rod
648j	1408	" " " " " Hinge Screw
95430	1407	" " " " " Lever
1143c	1408	" " " " " Clamping Screw
95431	1605	" " " " " Link
95432	1605	" " " " " Hinge Pin
971b	1408	" " " " " " " Screw
95433	1407	" " " " " Spindle
92612	1605	" " " " " Collar with 209c
209c	1408	" " " " " Set Screw
791c	1408	" " " " " Set Screw
95435	1605	" " " " " Gib
233d	1408	" " " " " Screw
95436		Needle Guide, complete, Nos. 95434, 95435 and two 233d
95394	1403	Thread Guide (for Cover Plate)
1091f	1035	" " Binding Screw

PARTS SPECIAL

TO

No. 46K38 MACHINE



For Turned Slipper Work, fitted with Stitch Regulator with Indicator and Friction Feed Motion. Single Thread Chain Stitch. Maximum length of stitch $\frac{1}{4}$ inch.

This Machine is the same as No. 46K34 with the following exceptions:

No.	Plate				
95442	1608	Balance Band Wheel with two 448	...	...	...
95474	1606	" " " Shaft Looper Case (Steel) with two 445	...	...	...
95354	-	Cover Plate, complete, Nos. 334d, SS419f, 1094f, 1560d, 95243, 95352, 95394 and two 2102	...	...	...
92100	1612	Feed Adjusting Lever Spring	...	...	...
95443	1611	Feed Bell Crank	...	...	...
95444	1608	Feed Bracket (front) with 717c and 1520j	...	...	...
717c	1408	" " Stop Screw	...	...	...
1520j	1035	" " " " Nut	...	...	...
95497	1614	Feed Eccentric	...	...	...
95498	1611	Feed Regulating Lever with 158f	...	...	...
95496	1615	" " " Segment	...	...	...
7958	1615	" " " Steady Pin	...	...	...
95447	1611	Feeding Disc (front)	...	...	...
95448	1615	" " (") Bearing	...	...	...
SS482c	1408	" " (") " Screw Stud	...	...	...
1655c	1408	" " (") " " " Nut	...	...	...
2532	1611	" " (") " " " Position Pin	...	...	...
95449	1610	" " (") Bracket with 2532	...	...	...
327d	1035	" " (") " Screw (2)	...	...	...
95453	1614	Feeding Disc (back) with 454c	...	...	...

No.	Plate				
95477	1403	Looper	...	...	...
95480	--	Looper Holder Connection, complete, Nos. 209d, SS467c, 1977c, 1550j, 92280, 92283 to 92285, 92288, 92384, 95260, 95332, 95400, 95404 and four 1155d	...	...	...
92285	1402	Looper Holder Rock Shaft Eccentric with two 446c	...	...	...
62326	1609	Needle Bar with 95357	...	...	...
62330	1615	" " Needle Stop	...	...	...
62327		Needle Bar, complete, Nos. 50169d, 62326 and 62330	...	...	...
95450	1615	" " Clamp with 552b	...	...	...
95350	1031	" " Eccentric with 449c	...	...	...
95451	1615	" Guide	...	...	...
95394	1403	Thread Guide (for Cover Plate)	...	...	...
1094f	1035	" " Binding Screw	...	...	...
95452	1613	Work Guide	...	...	...
327d	1035	" " Binding Screw (2)	...	...	...

PARTS SPECIAL

TO

No. 46K39 MACHINE



For Overedging and Cording Hat Sweats (Surjetense), fitted with Stitch Regulator with Indicator and Friction Feed Motion. Double Thread Chain Stitch only.

This Machine is the same as No. 46K34 with the following exceptions:

No.	Plate	
95397	1606	Balance Wheel Shaft Looper Cam (Steel) with two 415c
92051	1613	Cord Guide (flat, for cover plate)
331d	1035	" " Binding Screw
8645	1611	" " Position Pin
95544	1407	Cover Plate
95545	—	Cover Plate , complete, Nos. SS410f, 1094f, 8645, 92051, 95276, 95352, 95394, 95544, two each 331d, 1560d and four 2102
95546	1608	Feed Bracket (front)
95221	1614	" " Stud
SS411c	1408	" " " Raising Set Screw
445c	1035	" " " Set Screw
95547	1613	" " Thread Guide
331d	1035	" " " " Screw
95548	1614	Feeding Disc (front)
95549	1614	" " (back) with 454c
95550	1613	Looper with 92057
95480	—	Looper Holder Connection , complete, Nos. 209d, SS467c, 1077c, 1550j, 92280, 92283 to 92285, 92288, 92384, 95260, 95332, 95400, 95401 and four 1155d
95346	1611	Looper Holder Position Link Bracket
92285	1402	" " Rock Shaft Eccentric with two 446c
95350	1031	Needle Bar Eccentric with 449c

No. 46K39 MACHINE PARTS.

No.	Plate	
95551	1615	Needle Guide with two 95275
181d	1035	" " Binding Screw
95552	1607	Sweat Guide (upper)
95553	1607	" " (") Spring (flat)
242a	1607	" " (") " Screw
95554	1607	" " (lower)
95555	1607	" " (") Bracket (slotted)
219a	1607	" " (") " Screw
1443a	1607	" " (") Hinge Cap Screw
95556	1607	" " (") Plate
286j	1607	" " (") " Binding Thumb Screw
85514	1607	" " (") " " " Washer
95557	1607	" " (") Spring
219a	1607	" " (") " Screw
95558	1608	Sweat Guide , complete, Nos. 286j, 1443a, 85514, 95552 to 95557, two each 219a and 242a
SS410f	1035	Tension Screw Stud and Thread Guide
95276	1612	" Spring
95394	1403	Thread Guide (for Cover Plate)
1094f	1035	" " Binding Screw

PARTS SPECIAL

TO

No. 46K46 MACHINE



For Fur and General Work (Surjeteuse). Fitted with Stitch Regulator with Indicator, Friction Feed Motion, and Ball Bearing Front Feeding Disc. Double Thread Chain Stitch.

This Machine is the same as No. 46K34 with the following exceptions:

No.	Plate				
92169	1616	Balance Band Wheel with two 148c	...	...	...
95397	1606	" " " Shaft Loper Cam (Steel) with two 145c	...	...	...
95454	- -	Cover Plate , complete, Nos. 331d, SS410f, 1094f, 95213, 95276, 95394, 95456, two 1560d and four 2192	...	...	...
92100	1612	Feed Adjusting Lever Spring	...	...	...
8620	1612	Feed Bracket Thread Eyelet	...	...	...
331d	1035	" " " " Screw	...	...	...
95467	1617	Fur Guide	...	...	...
95345	1613	Looper with 92057 (double chain)	...	...	...
95480	- -	Looper Holder Connection , complete, Nos. 209d, SS467c, 1077c, 1550j, 92280, 92283 to 92285, 92288, 92384, 95260, 95332, 95400, 95401 and four 1155d	...	...	...
92285	1102	Looper Holder Rock Shaft Eccentric with two 146c	...	...	...
95478	1107	Needle Bar with 95357	...	...	...
95450	1615	" " " Clamp with 552h	...	...	...
95350	1031	" " " Eccentric with 149c	...	...	...
95455	1615	Needle Guide with two 95275	...	...	...
92108	1612	Slack Thread Spring	...	...	...
331d	1035	" " " " Screw	...	...	...
SS410f	1035	Tension Screw Stud and Thread Guide	...	...	...
95276	1612	" " " Spring	...	...	...
95456	1615	" " " (heavy)	...	...	...
95394	1103	Thread Guide (for Cover Plate)	...	...	...
1094f	1035	" " " Binding Screw	...	...	...

ACCESSORIES

No.	Plate		
215 × 17	—	Needles , three each sizes 7 and 11, for 46K34 Machine	...
215 × 15	—	" " " " 14 and 16, for 46K35 Machine	...
215 × 9	—	" " " " 14 and 16, for 46K37 Machine	...
215 × 13	—	" six size 20, for 46K38 Machine	...
46 × 5	—	" three each sizes 7 and 8, for 46K39 Machine	...
215 × 15	—	" " " " 16 and 18, for 46K46 Machine	...
36569	1355	Oiler	...
25537	1355	Screw Driver	...
86262	1026	Tweezers for 46K34, 46K35 and 46K46 Machines	...
86405	1355	" " 46K37 to 46K39 Machines	...
—	—	Wood Screw 1½" × ¼" (3) (for fixing machine to table)	...

KNEE LIFTER

for 46K34, 46K35, 46K38, 46K39 and 46K46 Machines.

No.	Plate		
2767	1023	Knee Plate with 356c	...
356c	1408	" " Set Screw	...
92464	1023	" " Arm	...
2766	1023	" " " Bracket with 356c	...
356c	1408	" " " Set Screw	...
92465	1023	Lifting Lever	...
SS345e	1023	" " Hinge Screw	...
92466	1023	" " Bracket	...
—	—	" " " Screw (Wood) 1" No. 10	...
92008	1023	" " Connecting Rod	...
92009	—	" " " " 92008 with 6337	...
6337	1023	" " " " Bracket with two 356c	...
356c	1408	" " " " Set Screw	...
95302	—	" " 92465 with 180d, 210d, SS345e, 92466, 92469 and 95303	...
95303	1023	" " Releasing Pin	...
95304	1023	" " " " Guide Plate	...
—	—	" " " " " " Screw (Wood) 1" No. 10	...
180d	1023	" " " " Set Screw	...
92469	1023	" " Stud	...
210d	1023	" " " Position Screw	...

No.	Plate					
92470	1023	Rock Shaft	...	...	...	...
92471	—	" "	92470 with 2766, 2767, 92009 and 92464	...	...	...
82479	1023	" "	Bracket	...	...	...
—	—	" "	" Screw (Wood) 1" No. 10	...	...	...
95305	—	Knee Lifter , complete, Nos. 92471, 95302, 95304, two 82479 and nine Wood Screws 1" No. 10	...	...	...	...



KNEE LIFTER

for 46K34, 46K35, 46K38, 46K39 and 46K46 Machines WITHOUT Iron Base when used on Stand and Table only.

No.	Plate					
2767	1023	Knee Plate with 356c	...	...	...	...
356c	1408	" "	Set Screw	...	...	...
92464	1023	" "	Arm	...	...	...
2766	1023	" "	" Bracket with 356c	...	...	...
356c	1408	" "	" " Set Screw	...	...	...
95457	1616	Lifting Lever	...	...	...	...
SS345e	1023	" "	Hinge Screw	...	...	...
95458	1616	" "	Bracket	...	...	...
—	—	" "	" Screw (Wood) 1" No. 10	...	...	...
92008	1023	" "	Connecting Rod	...	...	...
92009	—	" "	" " 92008 with 6337	...	...	...
6337	1023	" "	" " Bracket with two 356c	...	...	...
356c	1408	" "	" " Set Screw	...	...	...
95459	—	" "	95457 with SS345e and 95458	...	...	...
92470	1023	Rock Shaft	...	...	...	...
92471	—	" "	92470 with 2766, 2767, 92009 and 92464	...	...	...
82479	1023	" "	Bracket	...	...	...
—	—	" "	" Screw (Wood) 1" No. 10	...	...	...
95499	—	Knee Lifter , complete, Nos. 92471, 95459, two 82479 and seven Wood Screws 1" No. 10	...	...	...	...

OBSOLETE PARTS

No.	Plate				
92024	1031	Balance Band Wheel Shaft Oil Hole Cover (left)	...	...	...
95221	1614	Feed Bracket Stud for 46K34 Machine	...	...	...
95324	1617	" Regulating Lever with 158f for 46K34 Machine	...	...	...
8575	1617	" " Stop Pin for 46K34 Machine	...	...	...
95327	1617	Feeding Disc (front) for 46K34 Machine	...	...	...
95363	1617	Needle Guide with two 95275 for 46K34 Machine	...	...	...
181d	1035	Needle Guide Binding Screw for 46K34 Machine	...	...	...
95394	1403	Thread Guide (for cover plate) for 46K35 Machine	...	...	...