

# HISTORICAL COPY

DEPARTMENT No. 54  
SEPTEMBER 8, 1928

## DO NOT REMOVE

### LIST OF PARTS COMPLETE

FOR

# MACHINE No. 149-4

FOR STITCHING CENTERS ON MEN'S SHIRTS AND OTHER WORK IN FABRICS REQUIRING FOUR-ROW STITCHING. FOUR NEEDLES AND FOUR LOOPERS. THE GREATEST DISTANCE BETWEEN THE OUTSIDE NEEDLES IS  $1\frac{1}{2}$  INCHES, WHICH CAN BE DIVIDED INTO SMALLER GAUGES BETWEEN EACH NEEDLE AS ORDERED, EXCEPT THAT NONE CAN BE MADE SMALLER THAN  $\frac{3}{16}$  INCH. SPEED UP TO 3400, ACCORDING TO THE MATERIAL BEING STITCHED.  
FORMERLY 149 S. V. 4 MACHINE

*128632	Arm, upper and lower (solid).....
128502	“ Back Cover.....
190b	“ “ “ Screw.....
128502	“ Side Cover.....
286b	“ “ “ Thumb Screw.....
128503	“ Rotary Shaft.....
128613	“ “ “ 128503 with 50913c and 128559.....
128661	“ “ “ 128613 with 128663.....
128501	“ “ “ Ball Bearing.....
128505	“ “ “ “ “ Case.....
128627	“ “ “ “ “ “ 128505 with 128501, 128506 and three 205F.....
128506	Arm Rotary Shaft Ball Bearing Case Cap with 128619
128619	“ “ “ “ “ “ “ Pad (felt)
205F	“ “ “ “ “ “ “ Screw.....
30Sc	“ “ “ “ “ “ “ Set Screw ..
51007	“ “ “ Bushing (intermediate).....
54089	“ “ “ “ “ “ 51007 with 64508 and 64805.....
64508	Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) long.....
64805	Arm Rotary Shaft Bushing (intermediate) Oil Pad (braided cotton) short.....
88Sc	Arm Rotary Shaft Bushing (intermediate) Set Screw ..
128507	“ “ “ “ “ (front).....
50999c	“ “ “ “ “ “ Set Screw.....
128508	“ “ “ Collar with two 125Sc.....
125Sc	“ “ “ “ “ Set Screw.....
19013	“ “ “ Front Bearing Oil Pad (braided cotton).....

128509	Balance Wheel, 2 in. pulley, with two 430c	.....
128510	“ “ “ Cover	.....
14Hr	“ “ “ Screw	.....
430c	“ “ “ Set Screw	.....
128633	Cloth Plate	.....
128513	“ “ Oil Tube with 49092, for oiling 128520	.....
49092	“ “ “ “ Packing (felt)	.....
128514	“ “ Slide	.....
38416	“ “ “ Spring	.....
725J	“ “ “ “ Screw	.....
128515	Cloth Plate Slide complete, Nos. 128514, two 38416 and four 725J	.....
128634	Cloth Plate complete, Nos. 128513, 128515, 128633 and two 1198c	.....
1011F	Cloth Plate Screw (left)	.....
50473F	“ “ “ (right)	.....
128635	Feed Bar with two 453c	.....
128636	“ “ 128635 with 128519 and two 190b	.....
128707	“ “ 128636 with 57225 and 128533	.....
57225	“ “ Hinge Pin	.....
453c	“ “ “ “ Set Screw	.....
42366	“ “ Oil Pad (braided cotton)	.....
128518	“ “ Wearing Block	.....
128519	“ “ “ Plate	.....
190b	“ “ “ “ Screw	.....
128520	“ Connection (forked) with 453c and 769c	.....
128615	“ “ 128520 with 1095e, 128522, 128528, 128532 and two 128521	.....
769c	Feed Connection Clamping Screw	.....
453c	“ “ Set Screw	.....
128521	“ “ Slide Block Section	.....
128522	“ “ “ “ Sleeve	.....
1095F	“ “ “ “ “ Cap Screw	.....
128738	“ Dog, 19 teeth (16 teeth to the inch) with 452c	.....
452c	“ “ Adjusting Screw	.....
157d	“ “ Screw	.....
128638	“ Lifting Eccentric with two 452c	.....
452c	“ “ “ Set Screw	.....
50941c	“ Regulating Screw	.....
128526	“ “ “ Plate	.....
391d	“ “ “ “ Screw	.....
128527	“ Regulator with two 1143c	.....
128528	Feed Regulator complete, Nos. 391d, 399d, 50941c, 128526, 128527, 128530 and 128531	.....
128529	Feed Regulator Bushing	.....
50999d	“ “ “ Set Screw	.....
41036	“ “ Oil Pad (felt)	.....
1143c	“ “ Set Screw	.....

128530	Feed Regulator Slide Block	.....
128531	“ “ “ “ Stop	.....
399d	“ “ “ “ “ Screw	.....
128532	“ “ “ “ Washer	.....
128533	“ Rocking Frame with two each 453c and 1324c	.....
1324c	“ “ “ Adjusting Screw	.....
128534	“ “ “ Hinge Pin	.....
57235	“ “ “ “ “ Bushing	.....
453c	“ “ “ “ “ “ Set Screw	.....
453c	“ “ “ “ “ “ Set Screw	.....
128768	Looper (self threading) with 590b, 61041 and 128702	.....
128739	“ Carrier with four 50379e	.....
128769	“ “ 128739 with 228b and 128740	.....
128537	“ “ Driver	.....
*128538	“ “ “ Connection	.....
128630	“ “ “ “ “ 128538 with two 128539 and four 896e	.....
128621	Looper Carrier Driver Connection complete, Nos. 128630, 128631 and two 142e	.....
128663	Looper Carrier Driver Connection 128621 with 128537, 128543 to 128547 and 128641	.....
*128539	Looper Carrier Driver Connection Cap	.....
896e	“ “ “ “ “ “ Screw	.....
*128540	“ “ “ “ “ “ End Bearing	.....
128631	“ “ “ “ “ “ “ 128540 with 128541	.....
*128541	Looper Carrier Driver Connection End Bearing Cap	.....
142e	“ “ “ “ “ “ “ “ Screw	.....
128641	Looper Carrier Driver Eccentric with 791c and two 452c	.....
791c	Looper Carrier Driver Eccentric Position Screw	.....
452c	“ “ “ “ “ Set Screw	.....
128543	“ “ “ “ “ Holder with two 896e	.....
896e	“ “ “ “ “ Clamping Screw	.....
128544	“ “ “ “ “ Rock Shaft	.....
128545	“ “ “ “ “ Hinge Pin	.....
413c	“ “ “ “ “ “ Set Screw	.....
128546	“ “ “ “ “ Nut	.....
128547	“ “ “ “ “ “ Clamp with 175d	.....
175d	“ “ “ “ “ “ “ Screw	.....
898c	“ “ “ “ “ “ Screw	.....
128642	“ Eccentric with two 889c	.....
128635	“ “ 128642 with 1664e, 50942e, 128549, 128624 and two 55515	.....
55515	Looper Eccentric Oil Pad (braided cotton)	.....
889c	“ “ “ Set Screw	.....
128549	“ “ “ Sleeve	.....

128550	Looper Eccentric Sleeve Connection with 128552 and two 175E
128624	Looper Eccentric Sleeve Connection 128550 with 679c
679c	“ “ “ “ Ball Screw Stud
1520J	“ “ “ “ “ “ “
	Nut
128551	Looper Eccentric Sleeve Connection Ball Screw Stud Nut Lock Washer
*128552	Looper Eccentric Sleeve Connection Cap
175E	“ “ “ “ “ Screw
50942c	“ “ “ “ “ Hinge Screw
1664E	“ “ “ “ “ “ Nut
50379F	“ Set Screw
128702	“ Thread Guard
61041	“ “ “ Pin
590D	“ “ “ Screw
128740	“ “ Guide
NOTE: When ordering No. 128740, state gauge required	
228D	Looper Thread Guide Screw
57244	Needle Bar (hollow)
61181	“ “ 57244 with 61094
38456	“ “ Bushing (lower)
1133E	“ “ “ “ Set Screw
128554	“ “ “ (upper)
1133E	“ “ “ “ Set Screw
128555	“ “ Connecting Bracket with 1057D, 50370D and 50379F
128713	Needle Bar Connecting Bracket 128555 with 128556 and 128557
1057D	Needle Bar Connecting Bracket Clamping Screw
128556	“ “ “ “ Link
128557	“ “ “ “ Hinge Pin
50370D	“ “ “ “ “ “ Set Screw
128558	“ “ Lever with 50282E, 50370D and two 1259c
128618	“ “ “ 128558 with 128557 and 128713
50943c	“ “ “ Ball Screw Stud
1259c	“ “ “ “ “ “ Set Screw
128559	“ “ “ Connecting Rod with 683E, 54897, 128560, 128561, 128628 and four 896E
*128560	Needle Bar Lever Connecting Rod Cap (lower)
896E	“ “ “ “ “ “ “ Screw
*128561	“ “ “ “ “ “ (upper)
896E	“ “ “ “ “ “ “ Screw
42077	“ “ “ “ “ Guide
171E	“ “ “ “ “ “ Screw
54897	“ “ “ “ “ Oil Cup

128628	Needle Bar Lever Connecting Rod Oil Pad (braided cotton)
683E	Needle Bar Lever Connecting Rod Oil Pad Stop Screw
128562	“ “ “ Hinge Pin
128563	“ “ “ “ “ Bushing (back)
443c	“ “ “ “ “ “ “ Set Screw
128564	“ “ “ “ “ “ (front)
743c	“ “ “ “ “ “ “ Set Screw
54648	“ “ “ “ “ “ “ Oil Pad (braided cotton)
50282E	Needle Bar Lever Set Screw
61094	“ Clamp with four 50014E
50014E	“ Set Screw
128567	Oil Cup
128568	Oil Cup complete, for oiling 128550, Nos. 128567 and 128569 to 128571
128569	Oil Cup Pad (felt)
792c	“ “ Screw
128570	“ “ Tube
128571	“ “ “ Wick (braided cotton)
128572	“ Cup
128573	Oil Cup complete, for oiling 128538, Nos. 11006, 128572, 128574 to 128576 and two 128571
128574	Oil Cup Bracket
41006	“ “ Pad (felt)
1239F	“ “ Screw
128575	“ “ Tube (long)
128576	“ “ “ (short)
128574	“ “ “ Wick (braided cotton)
128577	“ Tube
49092	“ “ Packing (felt)
128741	“ “ Bracket and Thread Guide with 49092 and 128577
61477	Presser Bar with 25303
25303	“ “ Ball, size 1/4 in.
61046	“ “ Bushing (lower)
1133E	“ “ “ “ “ Set Screw
38456	“ “ “ (upper)
1133E	“ “ “ “ “ Set Screw
128580	“ “ Guide Bracket with 175c and 454c
175c	“ “ “ “ “ Adjusting Screw
128581	“ “ “ “ “ Guide
457c	“ “ “ “ “ “ Set Screw
454c	“ “ “ “ “ “ Set Screw
128582	“ “ Lifter
57258	“ “ “ Hinge Stud
443c	“ “ “ “ “ “ Set Screw
51871	“ “ “ Roller and Stud