

SINGER
95K32,K33

LIST OF PARTS

FOR

Nos. 95K32 & 95K33

MACHINES



THE SINGER MANUFACTURING COMPANY.

PARTS COMPLETE

for No. 95K32 Machine

For Thread Drawing. No Needles.

No.					
*99466	Arm	with 15404, two each 15405 and 56015
16532	"	Dowel Pin (2)
21131	"	Oil Tube with 52045, for oiling 24036
52084	"	" " " 52045, " " 24040
52045	"	" " " Packing (cotton wick)
116e	"	Screw (back) (2)
868e	"	" (front) (2)
99467	"	Shaft (horizontal)
52059	"	" (") Flanged Bushing (back)
52045	"	" (") " " (") Oil Pad (Cotton Wick)
446e	"	" (") " " (") Set Screw
52078	"	" (") " " (front)
52045	"	" (") " " (") Oil Pad (Cotton Wick)
435e	"	" (") " " (") Set Screw
59703	"	" (") Gear with two 1036c
1036c	"	" (") " Set Screw
1448 ^c	"	" (") Screw
99469	"	" (upright)
52492	"	" (") Bushing (lower)
432e	"	" (") " (") Set Screw
99471	"	" (") " (upper)
1149e	"	" (") " (") Set Screw
127073	"	" (") Gear (lower) with two 1259c
1259e	"	" (") " (") Set Screw
59708	"	" (") " (upper) with two 1253c
1253e	"	" (") " (") Set Screw
56015	"	" (") Oil Tube (lower)
56015	"	" (") " " (upper)
68350 54807	"	" " Front Bearing Oil Cup
12480	"	Side Cap
219d	"	" " Screw
12193	"	Side Cover
50053d	"	" " Thumb Screw

9/34

3/34

No.						
52081	Balance Wheel	(stand) heavy rim, 2 1/8" Pulley, with two 448c
52005	"	" (power) light rim, 2 3/8" Pulley, with two 448c
52063	"	" Oil Cover
210d	"	" " " Screw
448c	"	" Set Screw
*99402	Bed
99403	"	Slide
99404	"	" 99403 with 662d and 19147
19147	"	" Spring
662d	"	" " Screw
99449	Face Plate
190d	"	" " Screw
50190d	"	" " Thumb Screw
99406	Feed Bar
343c	"	" " Screw Centre
1519c	"	" " " " Nut
3033	Feed Connecting Link
375c	"	" " " Hinge Screw
1518c	"	" " " " " Nut
52073	"	" " " " Stud
50083c	"	" " " " " Set Screw
99150	Feed Dog	with 19118
191c	"	" " Screw
19116	"	" " Spring
19117	"	" " " Hook for 99451
19118	"	" " " " for 99450
99408	Feed and Feed Lifting Eccentric	with 448c
448c	"	" " " " " Set Screw
24036	"	" " " " " Sleeve
24037	Feed Forked Connection
375c	"	" " " Hinge Screw
1518c	"	" " " " Nut
99409	Feed Lifting Rock Shaft
99410	"	" " " " complete, Nos. 99409 and 99451
12430	"	" " " " Connecting Rod with 12204 and two 966e
12204	"	" " " " " " Cap 127157
966e	"	" " " " " " " Screw
375c	"	" " " " " " " Hinge Screw
1518c	"	" " " " " " " " Nut
99451	"	" " " " " Crank with 157c, 19117, 19121 and 19122
157c	"	" " " " " " Clamping Screw

127156
127157

7/47
"

No.						
19121	Feed Lifting Rock Shaft	Crank Roller
19122	"	" " " " " " " Pin
50191c	"	" " " " " Screw Centre
1513j	"	" " " " " " Nut
52074	Feed Regulator	with 50083c
1128c	"	" " Hinge Screw
818d	"	" " Thumb Screw
21351	"	" " " " Stop
52068	Feed Rock Shaft
52069	"	" " " complete, Nos. 29633 and 52068
29633	"	" " " Crank with 157c
157c	"	" " " " Clamping Screw
50191c	"	" " " " Screw Centre
1512j	"	" " " " " Nut
99411	Guide Adjustable Rod
99412	"	" " " " Indicator
207d	"	" " " " " Screw
1191d	"	" " " " " Thumb Screw
27795	"	" " " " " " Pad
99413	"	" Bracket
164d	"	" " " Screw
99414	"	" Strip
99415	"	" " Bracket
453c	"	" " " " Screw
190f	"	" " " " Screw
99416	Guide , complete, Nos. 207d, 453c, 1191d, 27795, 99411 to 99415, two each 164d and 190f
12391	Presser Bar	(hollow)
99417	"	" " Guide Bracket with 453c
453c	"	" " " " " Set Screw
52016	"	" " Lifter
689c	"	" " " " Screw
1520r	"	" " " " " Nut
12327	"	" " Lifting Lever Bracket
11167	"	" " Spring
11170	"	" " " " Washer
99452	Presser Foot
99473	"	" " Bracket
35c	"	" " " " Hinge Screw
1747c	"	" " " " " " Nut
50111d	"	" " " " Hinge Screw

No.							
99474	Presser Foot	Shank
99455	"	"	Spring (right)
99456	"	"	" (left)
337d	"	"	" Screw
99475	"	"	complete, Nos. 35c, 1747c, 99452, 99455, 99456, 99473, 99474, two each 337d and 501114
190d	"	"	Screw
688j	Pressure Regulating Thumb Screw	
99464	Punch (Serrated)	$\frac{1}{8}$ "	wide
99458	"	(")	$\frac{3}{16}$ "
99460	"	(")	$\frac{1}{4}$ "
<i>NOTE:—No. 99458 is supplied with machine unless otherwise specified on order.</i>							
99476	Punch Bar (hollow)	
52013	"	"	Bushing (lower) with 29532
1133e	"	"	" (") Set Screw
52014	"	"	" (upper)
1133e	"	"	" (") Set Screw
99477	"	"	Clamp with 1112c
1112c	"	"	" Screw
24040	"	"	Connecting Link with 794e
99478	"	"	" " 24040 with 99465
794e	"	"	" " Adjusting Screw
99465	"	"	" Stud with 196 ^{AL}
196 ^{AL}	"	"	" " Clamping Screw
99459	"	"	Crank, with 743c, 858c and 1036c
743c	"	"	" Position Screw
858c	"	"	" Set Screw
99426	"	"	" Stud
1036c	"	"	" Set Screw
29532	"	"	" Oil Cup
99427	Rotating Knife (Adjustable)	
99440	"	"	Adjuster
21202	"	"	" Friction Washer
99479	"	"	Holder with two 1147c
1147c	"	"	" Set Screw
99480	"	"	" Shaft
127004	"	"	" Bushing (back)
52045	"	"	" " (") Packing (Cotton)
1143c	"	"	" " (") Set Screw
99482	"	"	" " (front)
52045	"	"	" " (") Packing (Cotton)
1148c	"	"	" " (") Set Screw

No.							
51897	Rotating Knife	Holder Shaft	Front Bearing	Oil Cup
127073	"	"	"	"	Gear with two 1259c
127007	"	"	"	"	" Case (2 pieces) with 121c and 50234d
50234d	"	"	"	"	" Plug Screw
121c	"	"	"	"	" Screw
1259c	"	"	"	"	" Set Screw
1091d	"	"	"	"	" Screw
99461	Throat Plate	
99462	"	"	Cutting Strip
1443d	"	"	" Screw
99463	Throat Plate , complete, Nos. 1443d, 99461 and 99462	
6911	"	"	" Screw (4)
*15404	Trade Mark	
15405	"	"	Rivet
99484	Drip Pan , with four Wood Screws $\frac{1}{2}$ " No. 5	

Double Punch (Adjustable)

No.							
99468	Punch (Serrated) (2)	
99507	"	Bar
99470	"	Holder
195d	"	Screw
99472	"	" Washer
99481	"	Bar, complete, Nos. 99470, 99472, 99507 and two 195d, for Double Punch

NOTE:—Nos. 99468 and 99481 are only supplied with machine when specified on order, and at an extra charge.

PARTS COMPLETE

for No. 95K33 Machine

For Thread Drawing. No Needles.

No.								
*99166	Arm	with 15101, two each 15105 and 56015
16532	"	Dowel Pin (2)
21131	"	Oil Tube with 52045, for oiling 24036
52084	"	" " " " 52045, " " 24040
52045	"	" " " Packing (Cotton Wick)
116c	"	Screw (back) (2)
868c	"	" (front) (2)
99167	"	Shaft (horizontal)
52059	"	" (") Flanged Bushing (back)
52045	"	" (") " " (") Oil Pad (Cotton Wick)
446c	"	" (") " " (") Set Screw
52078	"	" (") " " (front)
52045	"	" (") " " (") Oil Pad (Cotton Wick)
435c	"	" (") " " (") Set Screw
59703	"	" (") Gear with two 1036c
1036c	"	" (") " Set Screw
144 ^{nc}	"	" (") Screw
99169	"	" (upright)
52192	"	" (") Bushing (lower)
432c	"	" (") " (") Set Screw
99171	"	" (") " (upper)
1149c	"	" (") " (") Set Screw
127073	"	" (") Gear (lower) with two 1259c
1259c	"	" (") " (") Set Screw
59708	"	" (") " (upper) with two 1253c
1253c	"	" (") " (") Set Screw
56015	"	" (") Oil Tube (lower)
56015	"	" (") " " (upper)
54897	"	" Front Bearing Oil Cup
12480	"	Side Cap
219d	"	" " Screw
12193	"	Side Cover
50053d	"	" " Thumb Screw

9/34

No.					
12391	Presser Bar (hollow)
99417	" " Guide Bracket with 453c
453c	" " " " Set Screw
52016	" " Lifter
689c	" " " " Screw
1520r	" " " " Nut
12327	" " Lifting Lever Bracket
99496	" " Spring
11170	" " " " Washer
99497	Presser Foot
99498	" " Bracket
35c	" " " " Hinge Screw
1747c	" " " " " " Nut
95c	" " " " Hinge Screw
99474	Presser Foot Shank
99499	" " Spring (right)
99500	" " " (left)
99501	" " " " Bracket (adjustable)
197d	" " " " " " Screw
233d	" " " " " " Screw
99502	" " " " " " Washer
99503	Presser Foot , complete, Nos. 35c, 1747c, 99474, 99497 to 99501, two each 95c, 197d, 233d and 99502
190d	Presser Foot Screw
688j	Pressure Regulating Thumb Screw
99504	Punch (Serrated) $\frac{5}{16}$ " wide
99505	" (") $\frac{3}{8}$ " " "
99506	" (") $\frac{1}{2}$ " " "
99507	" Bar
52013	" " Bushing (lower) with 29532
1133e	" " " " (") Set Screw
52014	" " " " (upper)
1133e	" " " " (") Set Screw
24040	" " Connecting Link with 794e
99478	" " " " 24040 with 99465
794e	" " " " " " Adjusting Screw
99465	" " " " " " Stud with 196e
196e	" " " " " " Clamping Screw
99459	" " Crank, with 743e, 858c and 1036e
743e	" " " " " " Position Screw
858c	" " " " " " Set Screw
99426	" " " " " " Stud

No.					
1036e	Punch Bar Crank Stud Set Screw
99508	" " Holder
201d	" " Screw
99509	" " " " Washer
99510	Punch Bar , complete, Nos. 201d and 99507 to 99509
29532	" " " " Oil Cup
99511	Rotating Knife (Adjustable)
99410	" " " " Adjuster
21202	" " " " Friction Washer
99512	" " " " Holder with two 1147c
1147c	" " " " " " Set Screw
99513	" " " " " " Shaft
127004	" " " " " " Bushing (back)
52045	" " " " " " (") Packing (Cotton)
1143c	" " " " " " (") Set Screw
99482	" " " " " " (front)
52045	" " " " " " (") Packing (Cotton)
1148c	" " " " " " (") Set Screw
54897	" " " " " " Front Bearing Oil Cup
127073	" " " " " " Gear with two 1259c
127007	" " " " " " Case (2 pieces) with 121c and 50234d
50234d	" " " " " " " " Plug Screw
121c	" " " " " " " " Screw
1259c	" " " " " " " " Set Screw
1094d	" " " " " " " " Screw
99514	Throat Plate
99515	" " " " Cutting Strip
460c	" " " " " " Adjusting Screw
1443d	" " " " " " Screw
99516	Throat Plate , complete, Nos. 99492, 99514, 99515, two each 223d, 460c, and three 1443d
691f	" " " " Screw (4)
*15101	Trade Mark
15105	" " " " Rivet
99484	Drip Pan , with four Wood Screws $\frac{1}{2}$ " No. 5

Accessories

No.					
36569	Oiler with 36571
36570	" 36569, filled with Oil
36571	" Spout, $1\frac{1}{4}$ " long
25537	Screw Driver (large)

Knife and Cutting Strip Grinder

No.								
99815	Cutting Strip	Holding Spring	
39896	"	"	"	"	Bracket	
204264	"	"	"	"	"	Position Pin	...	
176d	"	"	"	"	"	Screw	...	
207d	"	"	"	"	"	Screw	...	
793d	"	"	"	"	"	Thumb Screw	...	
99816	39896	39896	Emery Wheel, 4" diam.	<i>3/32 12/32</i>	
39887	"	"	Driving Shaft	
201510d	"	"	"	"	Nut	
204101	"	"	"	"	"	Washer	...	
39888	"	"	"	"	"	Oil Hole Cover	...	
200283c	"	"	"	"	"	"	Screw	
206963	"	"	"	"	"	Pulley with two 200403c	...	
200403c	"	"	"	"	"	"	Set Screw	
206969	"	"	"	"	"	Washer (paper)	...	
39889	Frame	
99817	Knife Holder	
135d	"	"	"	"	"	Screw (right)	...	
162d	"	"	"	"	"	"	(left)	
39892	"	"	"	"	"	Slide Bracket with 200386c	...	
201298c	"	"	"	"	"	Adjusting Screw	...	
39893	"	"	"	"	"	"	Slide Plate	
200577h	"	"	"	"	"	"	"	Screw
10249	"	"	"	"	"	"	Tension Spring	
219f	"	"	"	"	"	"	"	Screw
200386c	"	"	"	"	"	"	Set Screw	
39894	"	"	"	"	"	"	Shaft	
206232	"	"	"	"	"	"	Collar with 201052c	
201052c	"	"	"	"	"	"	Set Screw	
793d	"	"	"	"	"	"	Holding Thumb Screw	
99818	Knife and Cutting Strip Grinder, complete,	Nos. 135d, 162d, 176d,	219f, 10249, 39887, 39889, 39892 to 39894, 39896, 99815, 99817,	200283c, 201298c, 201510d, 204101, 206963, two each 207d, 793d,	200577h, 204264, 206232, 206969 and three Wood Screws 1 1/4" No. 12	

Knee Lifter

No.								
5596	Bell Crank	
5599	"	"	"	"	Bracket	
178e	"	"	"	"	"	Screw	...	
5601	"	"	"	"	"	Hinge Pin	...	
5735	"	"	"	"	"	Spring	...	
56848	"	"	"	"	"	5596 with 5599 and 5601	...	
5598	Bell Crank, complete,	Nos. 5735 and 56848	
16585	Lifting Lever with 448c	
52028	"	"	"	"	"	Connecting Rod	...	
12416	"	"	"	"	"	"	Joint	
76d	"	"	"	"	"	"	"	Hinge Screw
1521c	"	"	"	"	"	"	"	Lock Nut
802d	"	"	"	"	"	"	"	Hinge Screw
12241	"	"	"	"	"	"	"	Link
766d	"	"	"	"	"	"	"	Hinge Screw
16586	"	"	"	"	"	"	"	Pin
448c	"	"	"	"	"	"	"	Set Screw
2763	Rock Shaft	
97502	"	"	"	"	"	Bracket	...	
2765	"	"	"	"	"	"	Screw (Wood) 1" No. 10	
2766	"	"	"	"	"	"	Knee Arm	
356c	"	"	"	"	"	"	Hub with 356c	
2768	"	"	"	"	"	"	Set Screw	
2767	"	"	"	"	"	"	2765 with 2766 and 2767	
356c	"	"	"	"	"	"	Plate with 356c	
6337	"	"	"	"	"	"	Set Screw	
2778	"	"	"	"	"	"	Lifting Bracket with two 356c	
356c	"	"	"	"	"	"	Hook	
356c	"	"	"	"	"	"	Set Screw	
356c	"	"	"	"	"	"	Set Screw	
2770	"	"	"	"	"	"	Stop Dog with 356c	
356c	"	"	"	"	"	"	Set Screw	
84789	Rock Shaft 2763 with 2768, 2770, 2778, 6337, two 97502 and four Wood Screws, 1" No. 10	
99136	Knee Lifter, complete,	Nos. 76d, 766d, 802d, 1521c, 5598, 12241, 12416, 16585, 16586, 52028, 84789 and two 178e	