


# "Genuine" Parts For Eastman Straight Knives

## Model 627X BRUTE Model 629X BLUE STREAK II

### SHARPENER HOUSING ASSEMBLY (Rear View)

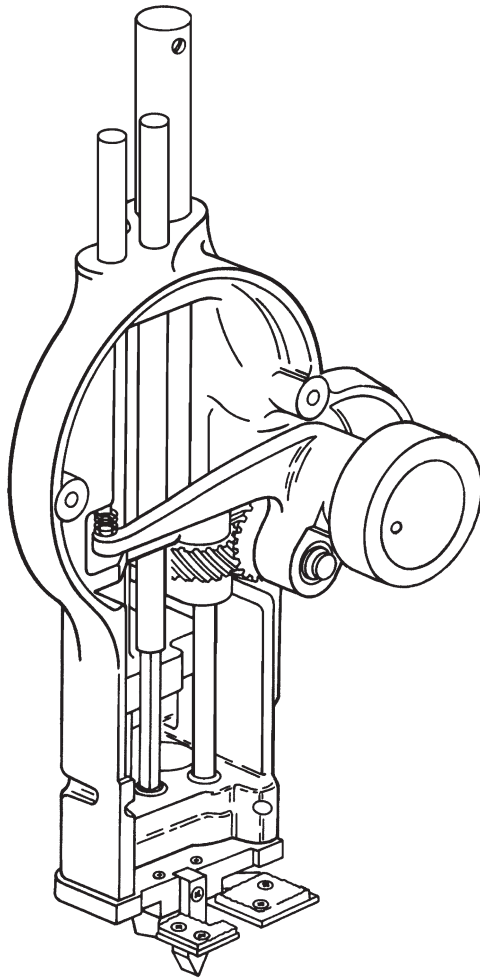


All Drawings © 1988-1990, 1993, 1995,  
1996, 1998 Eastman Machine Company

Univ. Number	Eastman Number	Description
GE1442	4C2-2	Lock Nut For Shaft
GE1753	4C2-85	RH Follower Nut
GE1754	4C2-86	LH Follower Nut
GE1418	11C12-58	RH Square Shaft (5-8" Knife)
GE1419	11C12-59	RH Square Shaft (9-10" Knife)
GE1005	11C12-81	RH Square Shaft (11-1/2" Knife)
GE1421	11C12-85	RH Square Shaft (13" Knife)
GE1430	11C12-56	LH Square Shaft (5-8" Knife)
GE1431	11C12-57	LH Square Shaft (9-10" Knife)
GE1004	11C12-80	LH Square Shaft (11-1/2" Knife)
	11C12-84	LH Square Shaft (13" Knife)
GE1467	11C12-64	Shaft For Crank
GE1755	12C11-74	Thrust Washer
GE1462	12C15-29	Thrust Washer (2)
GE1447	12C15-30	Thrust Washer For Bottom Plate (2)
	17C15-78	Pin For Bell Crank
GE1443	17C15-82	Pin Crank Spring
GE1449	17C15-103	Roll Pin For Push Rod
GE1456	17C15-113	Spreader Pin
GE1472	18C6-81	Retaining Ring For Shaft
GE1473	18C6-26	Retaining Ring For Bell Crank
GE1444	34C10-89	Spring For Bell Crank
GE1907	53C11-60	Cover Drive Pulley (For Old Style 625, 627 & 629 Models Only)
GE1469	55C4-41	Spacer For Ball Bearings
GE1756	62C16-151	Sharpener Housing Only
GE1448	65C6-75	Push Rod
GE1458	71C1-10	Idler Gear Oil Retainer
GE1422	73C7-46	Tube For Square Shaft (4-8" Knife)
GE1423	73C7-47	Tube For Square Shaft (9-10" Knife)
	73C7-86	Tube For Square Shaft (11-1/2" Knife)
	73C7-88	Tube For Square Shaft (13" Knife)
GE1426	73C7-48	Tube For Screw Shaft (4-8" Knife)
GE1427	73C7-49	Tube For Screw Shaft (9-10" Knife)
	73C7-85	Tube For Screw Shaft (11-1/2" Knife)
	73C7-87	Tube For Screw Shaft (13" Knife)
GE1450	79C12-163	Bottom Plate, Sharpener Housing
	85C3-6E	Bell Crank Only
GE1461	87C3-8	Spiral Gear
GE1446	87C3-44	Spur Gear (2)
GE1757	87C3-53	Gear & Shaft
GE1464	90C4-29	Lower Bearing For Drive Shaft
GE1445	90C4-33	Bearing For Gears (2)
GE1471	90C4-34	Bearing For Bell Crank
GE1463	90C4-42	Bearing For Drive Shaft
GE1758	90C4-48	Upper Bearing For Drive Shaft
GE1454	90C4-58	Bear For Screw Shaft
GE1470	90C6-24	Ball Bearing For Crank (2)
GE1466	142C1-7	Key For Gear
GE1457	191C1-21	Felt Pad For Cross Head
GE1459	300C7-1	Round Head Screw (4-36 x 1/8")
GE1460	300C7-2	Screw
GE1453	300C10-1	Round Head Screw (6-32 x 3/16") (2)
GE1455	302C10-6	Flat Head Screw (6-32 x 1/2")
GE1451	302C12-3	Flat Head Screw (8-32 x 3/8") (5)
	584C2-3	Bell Crank w/Pin & Bearing Only
GE1759	584C3-16	Bell Crank, Complete w/Lever
GE1474	602C1-7	Slow Speed Driver Assembly
GE1475	602C1-9	Driver Pulley w/Driver
GE1468	627C1-10	Idler Gear & Bushing
GE1465	716C1-12	Driver Shaft w/Gear
GE1452	727C1-6	Oil Pad & Holder
	1C13-12	15/16" Spacer Length, 1-1/8-1-1/4" Stroke
GE1441	1C13-13	1-1/4" Spacer Length, 1-1/2-1-3/4" Stroke
	73C7-55	3-7/8" Spacer Length, 1-1/8-1-1/4" Stroke
	73C7-56	4-1/4" Spacer Length, 1-1/2-1-3/4" Stroke
	73C7-57	2-7/8" Spacer Length, 1-1/8-1-1/4" Stroke
	73C7-58	3-1/4" Spacer Length, 1-1/2-1-3/4" Stroke
	73C7-59	1-7/8" Spacer Length, 1-1/8-1-1/4" Stroke
GE1074	73C7-60	2-1/4" Spacer Length, 1-1/2-1-3/4" Stroke

**Note:** Number in parenthesis indicate quantity of a part required.

# "Genuine" Parts For Eastman Straight Knives

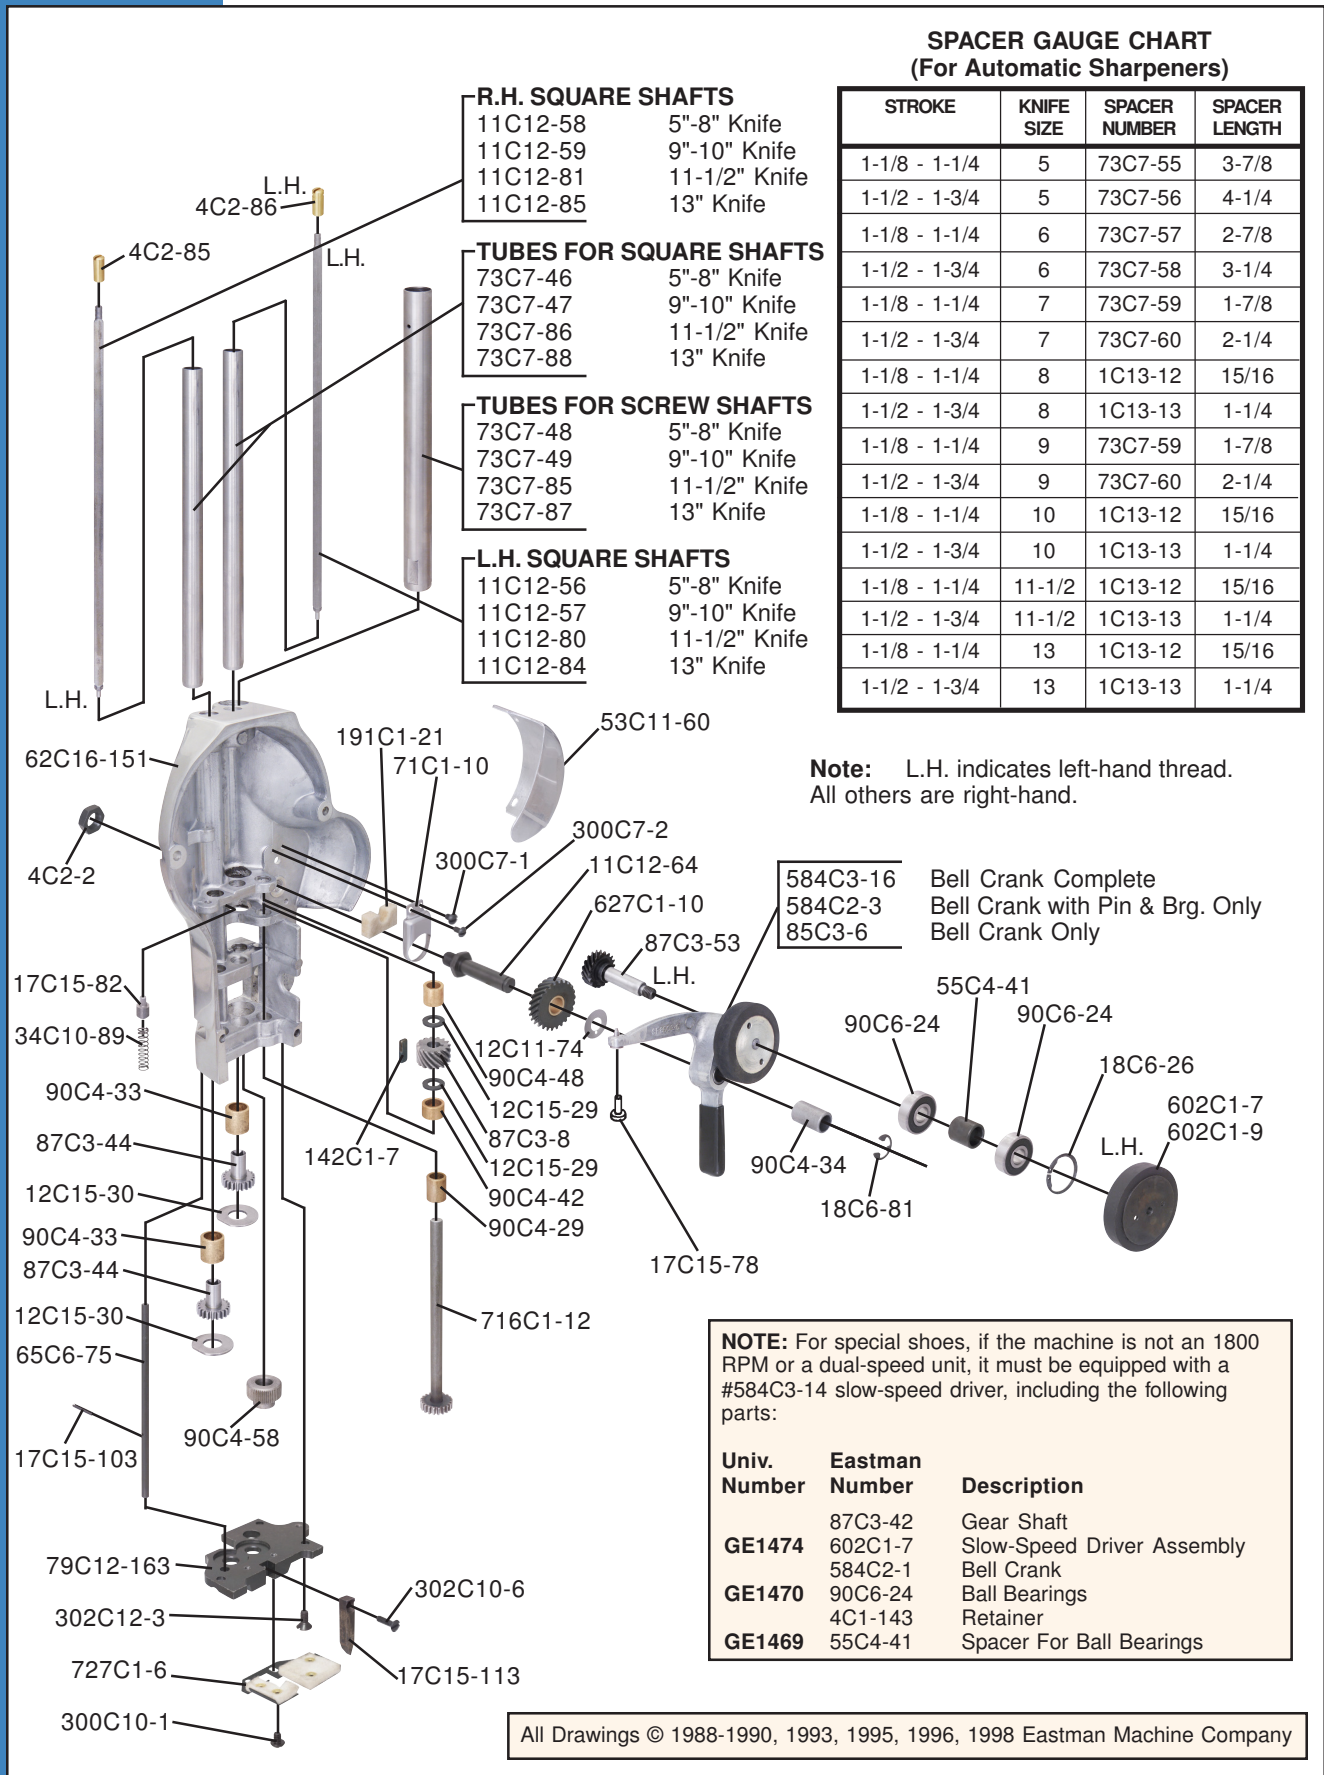

**SPACER GAUGE CHART**  
(For Automatic Sharpeners)

STROKE	KNIFE SIZE	SPACER NUMBER	SPACER LENGTH
1-1/8 - 1-1/4	5	73C7-55	3-7/8
1-1/2 - 1-3/4	5	73C7-56	4-1/4
1-1/8 - 1-1/4	6	73C7-57	2-7/8
1-1/2 - 1-3/4	6	73C7-58	3-1/4
1-1/8 - 1-1/4	7	73C7-59	1-7/8
1-1/2 - 1-3/4	7	73C7-60	2-1/4
1-1/8 - 1-1/4	8	1C13-12	15/16
1-1/2 - 1-3/4	8	1C13-13	1-1/4
1-1/8 - 1-1/4	9	73C7-59	1-7/8
1-1/2 - 1-3/4	9	73C7-60	2-1/4
1-1/8 - 1-1/4	10	1C13-12	15/16
1-1/2 - 1-3/4	10	1C13-13	1-1/4
1-1/8 - 1-1/4	11-1/2	1C13-12	15/16
1-1/2 - 1-3/4	11-1/2	1C13-13	1-1/4
1-1/8 - 1-1/4	13	1C13-12	15/16
1-1/2 - 1-3/4	13	1C13-13	1-1/4

- R.H. SQUARE SHAFTS**  
 11C12-58 5"-8" Knife  
 11C12-59 9"-10" Knife  
 11C12-81 11-1/2" Knife  
 11C12-85 13" Knife
- TUBES FOR SQUARE SHAFTS**  
 73C7-46 5"-8" Knife  
 73C7-47 9"-10" Knife  
 73C7-86 11-1/2" Knife  
 73C7-88 13" Knife
- TUBES FOR SCREW SHAFTS**  
 73C7-48 5"-8" Knife  
 73C7-49 9"-10" Knife  
 73C7-85 11-1/2" Knife  
 73C7-87 13" Knife
- L.H. SQUARE SHAFTS**  
 11C12-56 5"-8" Knife  
 11C12-57 9"-10" Knife  
 11C12-80 11-1/2" Knife  
 11C12-84 13" Knife

**Note:** L.H. indicates left-hand thread. All others are right-hand.

- 584C3-16 Bell Crank Complete  
 584C2-3 Bell Crank with Pin & Brg. Only  
 85C3-6 Bell Crank Only

**NOTE:** For special shoes, if the machine is not an 1800 RPM or a dual-speed unit, it must be equipped with a #584C3-14 slow-speed driver, including the following parts:

Univ. Number	Eastman Number	Description
	87C3-42	Gear Shaft
GE1474	602C1-7	Slow-Speed Driver Assembly
	584C2-1	Bell Crank
GE1470	90C6-24	Ball Bearings
	4C1-143	Retainer
GE1469	55C4-41	Spacer For Ball Bearings

All Drawings © 1988-1990, 1993, 1995, 1996, 1998 Eastman Machine Company