

SINGER

6211/6212/6214/6215/6217

LIST OF PARTS

SEWING MACHINE SERIES

6210

by
SINGER*

© THE SINGER COMPANY
1989 SINGER DO BRASIL
ALL RIGHTS RESERVED

* REGISTERED TRADEMARK

PRINTED IN BRAZIL
356493-001

MAY-89


6210 SERIES
REVISION RECORD

REV.	DESCRIPTION	APPROVAL AND DATE
1	ADOPTED BY SERVICE LETTER NBR 009 CHANGED REF. NBR 01 FROM P/N 354642-451 TO P/N 355240-451 PAGE 30 CHANGED REF. NBR 02 FROM P/N 445840 TO P/N 445841 PAGE 30 CHANGED REF. NBR 20 FROM P/N 353539 TO P/N 44628 PAGE 30 ADDED REF. NBR 27 P/N 618638-005 PAGE 29/30 DELETED REF. NBR 12 P/N 113455-001 (1) PAGE 31 CHANGED REF. NBR 13 FROM P/N 356165 TO P/N 356605 PAGE 42 CHANGED REF. NBR 13 FROM P/N 446487 TO P/N 446487-001 PAGE 44	X 3425 08/07/89 3425 08/07/89 6928 08/24/89 3425 08/08/89 6994 10/02/89 3413 09/06/89 3372 07/10/89

INDEX


PAGE NBR	SUB-ASSEMBLY
01 , 02	ATTACHMENT SET
03 , 04	ARM, BED, THROAT PLATE & BED SLIDE
05 , 14	COVERS & ADD-ONS
15 , 18	NEEDLE BAR, PRESSER BAR & TAKE-UP
19 , 20	ARM SHAFT DRIVE
21 , 22	HAND WHEEL
23 , 24	TENSION ASSEMBLY
25 , 26	HOOK SYSTEM
27 , 28	BIGHT AMPLITUDE
29 , 30	NEEDLE POSITION
31 , 32	DISC SELECTION ASSEMBLY
33 , 34	CAM STACK
35 , 36	FEED REGULATOR CAM
37 , 40	BUTTONHOLER & FEED REGULATOR CAM
41 , 42	CAM CONTROLLED FEED
43 , 44	FEED SYSTEM
45 , 46	OPTIONS
47 , 53	ELECTRICAL EQUIPMENT

ATTACHMENT SET

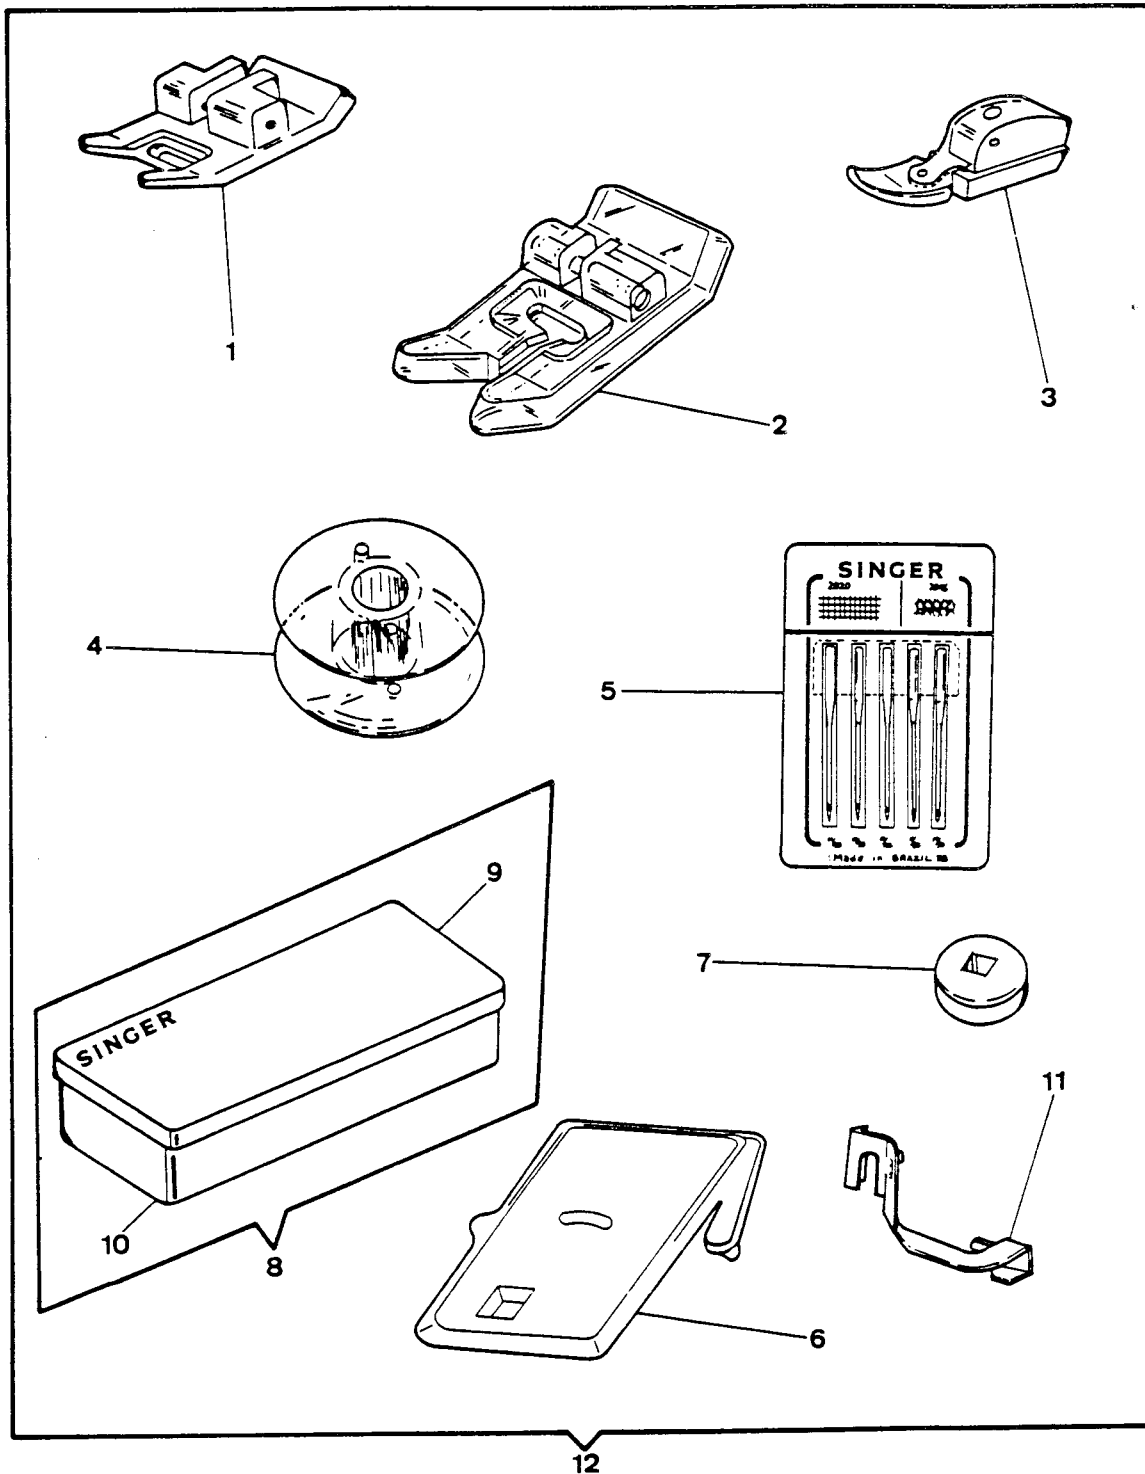

PART LIST			ATTACHMENT SET				
			6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	446492-451	SPECIAL PURPOSE PRESSER FOOT PLATE (SNAP-ON)		X	X	X	X
02	161927	PRESSER FOOT PLATE (SNAP-ON) FOR SEWING BUTTONHOLES		X	X	X	X
03	507836	PRESSER FOOT PLATE (SNAP-ON) COMPLETE FOR CORDING & SLIDE FASTENERS		X	X	X	X
04	172336	BOBBIN (PLASTIC)	X	X	X	X	X
05	353364	NEEDLE PACK (INCLUDES 1 EA. N2020 SIZE 11/14/16 & N2045 SIZE 11/14)	X	X	X	X	X
05	410152	NEEDLE PACK (5 NEEDLES) FOR JAPAN	X	X	X	X	X
06	313117	FEED COVER PLATE (PLASTIC)	X	X	X	X	X
07	507664-459	ARM TOP COVER SPOOL PIN THREAD LEAD-OFF (SMALL PLASTIC)	X	X	X	X	X
08	446150-454	ATTACHMENT BOX COMPLETE	X	X	X	X	X
09	446149-454	ATTACHMENT BOX COVER (PLASTIC)	X	X	X	X	X
10	446148-454	ATTACHMENT BOX BASE (PLASTIC)	X	X	X	X	X
11	381213	BLIND STITCH GUIDE		X	X	X	X
12	446495	ATTACHMENT SET COMPLETE	X				
12	356210	ATTACHMENT SET COMPLETE (AMEDO)	X				
12	353480	ATTACHMENT SET COMPLETE (FOR JAPAN)	X				
12	446496	ATTACHMENT SET COMPLETE		X	X	X	X
12	356211	ATTACHMENT SET COMPLETE (AMEDO)		X	X	X	X
12	353481	ATTACHMENT SET COMPLETE (FOR JAPAN)		X	X	X	X


ARM, BED, THROAT PLATE & BED SLIDE

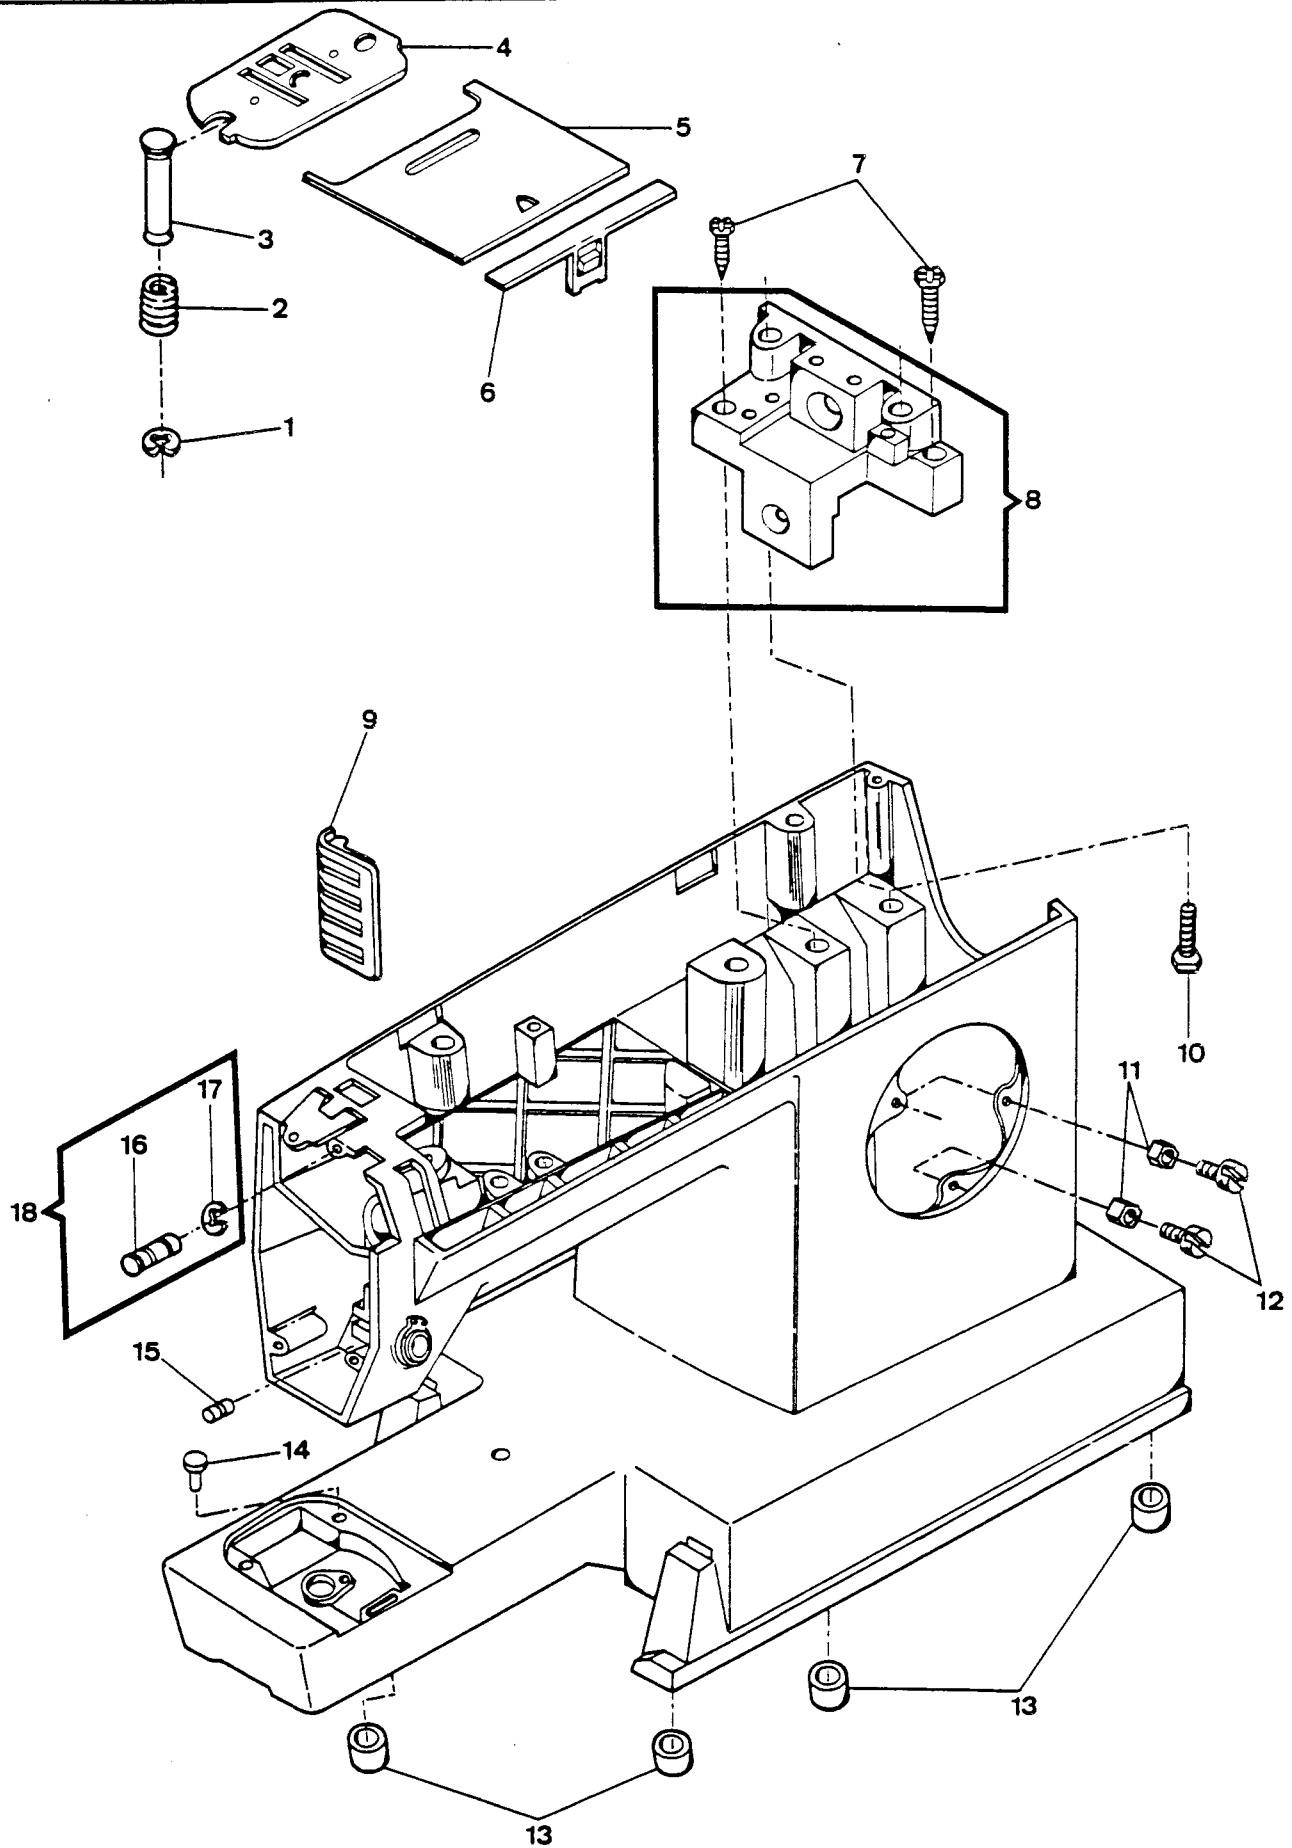


PART LIST
ARM, BED, THROAT PLATE & BED SLIDE

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	179926	THROAT PLATE CLAMP SPRING RETAINING RING	X	X	X	X	X
02	353494	THROAT PLATE CLAMP SPRING	X	X	X	X	X
03	353597	THROAT PLATE CLAMP	X	X	X	X	X
04	312777	THROAT PLATE FOR ZIG-ZAG SEWING	X	X	X	X	X
05	446481	BED SLIDE	X	X	X	X	X
06	446482	BED SLIDE SPRING (SNAP-ON)	X	X	X	X	X
07	113455-006	ARM SHAFT (REAR) HOUSING MOUNTING SCREW	X	X	X	X	X
08	446347-002	ARM SHAFT (REAR) HOUSING ASSEMBLY	X	X	X	X	X
09	353360-451	ARM INSERT MOTOR VENT GRILL	X	X	X	X	X
10	446349-451	ARM SHAFT (REAR) HOUSING MOUNTING BOLT	X	X	X	X	X
11	353588-451	BUTTONHOLER & FEED REGULATOR NUT		X	X	X	X
12	113513-451	BUTTONHOLER & FEED REGULATOR SCREW		X	X	X	X
13	353559-451	BED CUSHION	X	X	X	X	X
14	353624	THROAT PLATE POSITION PIN	X	X	X	X	X
15	446358	TENSION RELEASING LEVER HINGE PIN	X	X	X	X	X
16	446375	THREAD TAKE-UP LEVER LINK HINGE STUD	X	X	X	X	X
17	353215	THREAD TAKE-UP LEVER LINK HINGE STUD RETAINING RING	X	X	X	X	X
18	353623	THREAD TAKE-UP LEVER LINK HINGE STUD WITH RING	X	X	X	X	X

COVERS & ADD-ONS (FOR METAL HANDLE MACHINES)

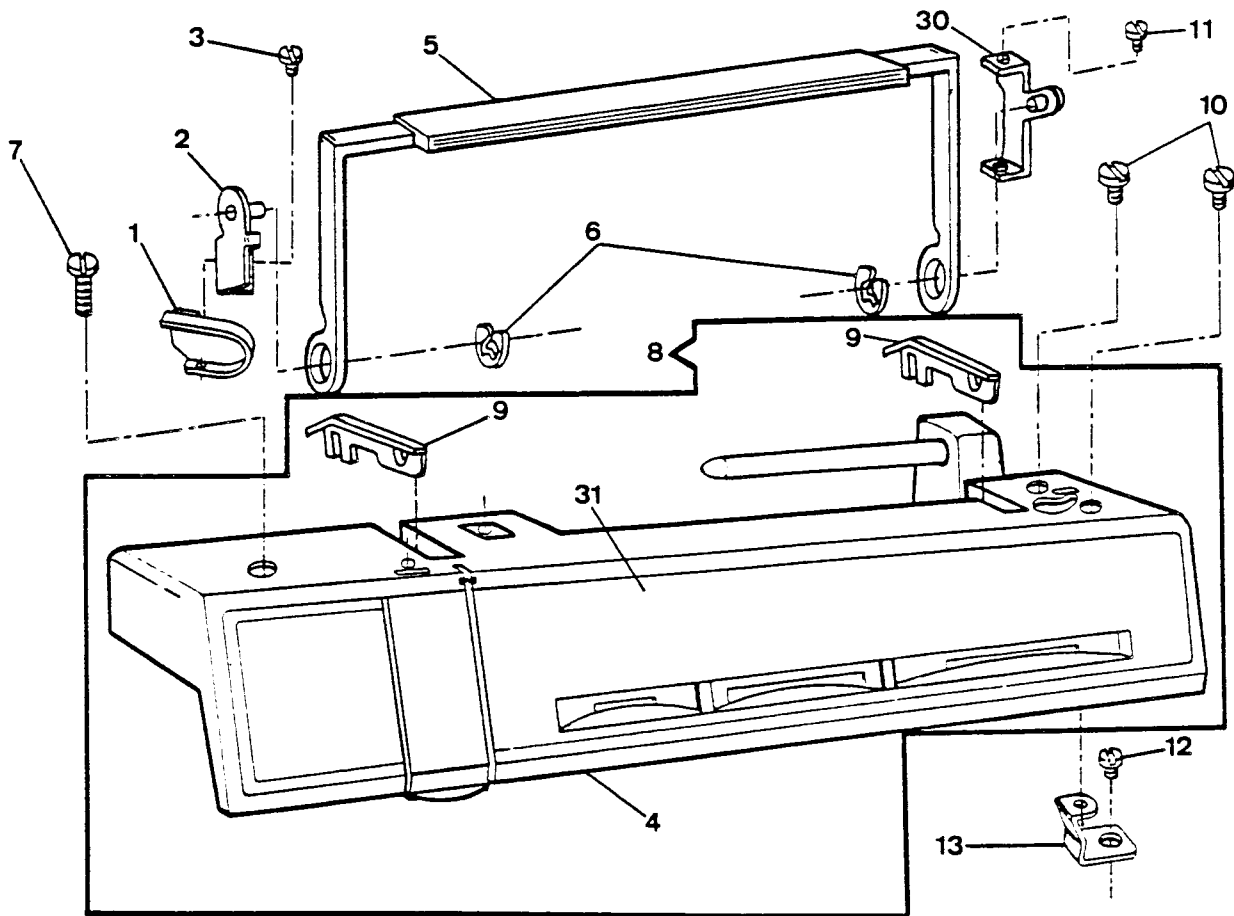


PART LIST			COVERS & ADD-ONS (FOR METAL HANDLE MACHINE)				
			6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	446498	ARM TOP COVER HANDLE RETAINING SPRING	X	X	X	X	X
02	179886	ARM TOP COVER HANDLE HINGE PIN BRACKET (LEFT) ASSEMBLY	X	X	X	X	X
03	354826-451	ARM TOP COVER HANDLE HINGE PIN BRACKET MOUNTING SCREW	X	X	X	X	X
04	179987-001	ARM TOP COVER ASSEMBLY (WITHOUT LOGO)	X				
04	179987-003	ARM TOP COVER ASSEMBLY (WITH "SAMBA 2" LOGO)	X				
04	356535-451	ARM TOP COVER ASSEMBLY (WITHOUT LOGO)			X		
04	356535-452	ARM TOP COVER ASSEMBLY (WITH "SAMBA 5" LOGO)			X		
04	356546-451	ARM TOP COVER ASSEMBLY (WITHOUT LOGO)					X
04	356546-452	ARM TOP COVER ASSEMBLY (WITH "SAMBA 6" LOGO)					X
04	356550-451	ARM TOP COVER ASSEMBLY (FOR JUBILE & SAMBA EXCLUSIVE)					X
04	356533-451	ARM TOP COVER ASSEMBLY (WITHOUT LOGO)					X
04	356533-452	ARM TOP COVER ASSEMBLY (WITH "SAMBA 7" LOGO)					X
04	353372-00X	ARM TOP COVER ASSEMBLY (FOR LADY STAR M/C)		X			
04	353372-001	ARM TOP COVER ASSEMBLY (WITHOUT LOGO)		X			
04	353372-003	ARM TOP COVER ASSEMBLY (WITH "SAMBA 4" LOGO)		X			
05	353592-451	ARM TOP COVER HANDLE	X	X	X	X	X
06	445721	ARM TOP COVER HANDLE RETAINING RING	X	X	X	X	X
07	354975-451	ARM TOP COVER SCREW	X	X	X	X	X
08	353292-001	ARM TOP COVER COMPLETE (WITHOUT LOGO)			X		
08	353292-002	ARM TOP COVER COMPLETE (WITH "SAMBA 5" LOGO)			X		
08	353293-001	ARM TOP COVER COMPLETE (WITHOUT LOGO)					X
08	353293-002	ARM TOP COVER COMPLETE (WITH "SAMBA 6" LOGO)					X
08	353294-001	ARM TOP COVER COMPLETE (WITHOUT LOGO)					X
08	353294-002	ARM TOP COVER COMPLETE (WITH "SAMBA 7" LOGO)					X
08	446444-001	ARM TOP COVER COMPLETE (WITHOUT LOGO)	X				
08	446444-003	ARM TOP COVER COMPLETE (WITH "SAMBA 2" LOGO)	X				
08	353370-001	ARM TOP COVER COMPLETE (WITHOUT LOGO)		X			
08	353370-003	ARM TOP COVER COMPLETE (WITH "SAMBA 4" LOGO)		X			
09	179883-451	ARM TOP COVER HANDLE INSERT (PLASTIC)	X	X	X	X	X
10	354895-453	ARM TOP COVER MOUNTING SCREW (RIGHT REAR & FRONT)	X	X	X	X	X
11	141808-452	ARM TOP COVER HINGE PIN BRACKET (RIGHT) RETAINING SCREW	X	X	X	X	X
12	113455-001	ARM TOP COVER MOUNTING BRACKET (RIGHT) MOUNTING SCREW	X	X	X	X	X
13	356178	ARM TOP COVER MOUNTING BRACKET (RIGHT)	X	X	X	X	X





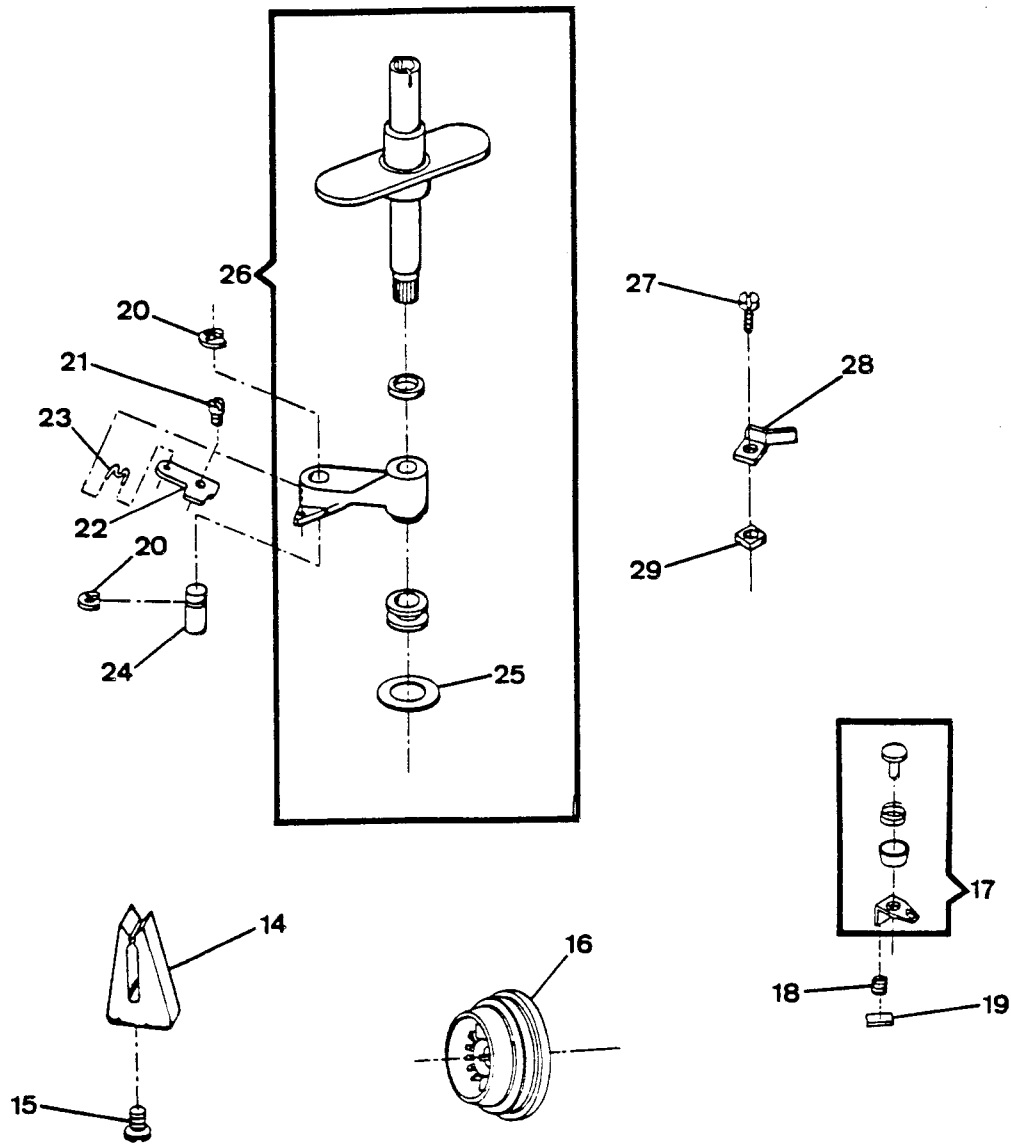


PART LIST
COVERS & ADD-ONS (FOR METAL HANDLE MACHINES) (CONT.)

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
14	353553-451	ARM TOP COVER THREAD GUIDE	X	X	X	X	X
15	113342-451	ARM TOP COVER THREAD GUIDE SCREW	X	X	X	X	X
16	179967-451	ARM TOP COVER SPOOL PIN THREAD LEAD-OFF	X	X	X	X	X
17	44368	BOBBIN WINDER TENSION COMPLETE	X	X	X	X	X
18	141936-833	BOBBIN WINDER TENSION ADJUSTING SCREW	X	X	X	X	X
19	44794	BOBBIN WINDER TENSION ADJUSTING SCREW RETAINING CLIP	X	X	X	X	X
20	44374	BOBBIN WINDER LEVER RETAINING RING	X	X	X	X	X
21	113458-001	BOBBIN WINDER SPRING MOUNTING PLATE SCREW	X	X	X	X	X
22	446463	BOBBIN WINDER SPRING MOUNTING PLATE	X	X	X	X	X
23	446477	BOBBIN WINDER SPRING	X	X	X	X	X
24	446465	BOBBIN WINDER LEVER HINGE STUD	X	X	X	X	X
25	15287-701	BOBBIN WINDER FRICTION RING	X	X	X	X	X
26	446469-001	BOBBIN WINDER ASSEMBLY	X	X	X	X	X
27	141920-451	BOBBIN WINDER STOP SCREW	X	X	X	X	X
28	445924	BOBBIN WINDER STOP	X	X	X	X	X
29	53640-819	BOBBIN WINDER STOP SCREW NUT	X	X	X	X	X
30	353601	ARM TOP COVER HANDLE HINGE PIN BRACKET ASSEMBLY (RIGHT)	X	X	X	X	X
31	446443-451	CONTROL PANEL (BLACK)	X				
31	356183-900	CONTROL PANEL (LIGHT GRAY)	X				
31	353369-451	CONTROL PANEL (BLACK)		X			
31	353369-45X	CONTROL PANEL (GRAY)		X			
31	356187-900	CONTROL PANEL (LIGHT GRAY)		X			
31	353289-451	CONTROL PANEL (BLACK)			X		
31	353290-451	CONTROL PANEL (BLACK)				X	
31	353291-451	CONTROL PANEL (BLACK)					X
31	SK-3932	CONTROL PANEL (GRAY)					X

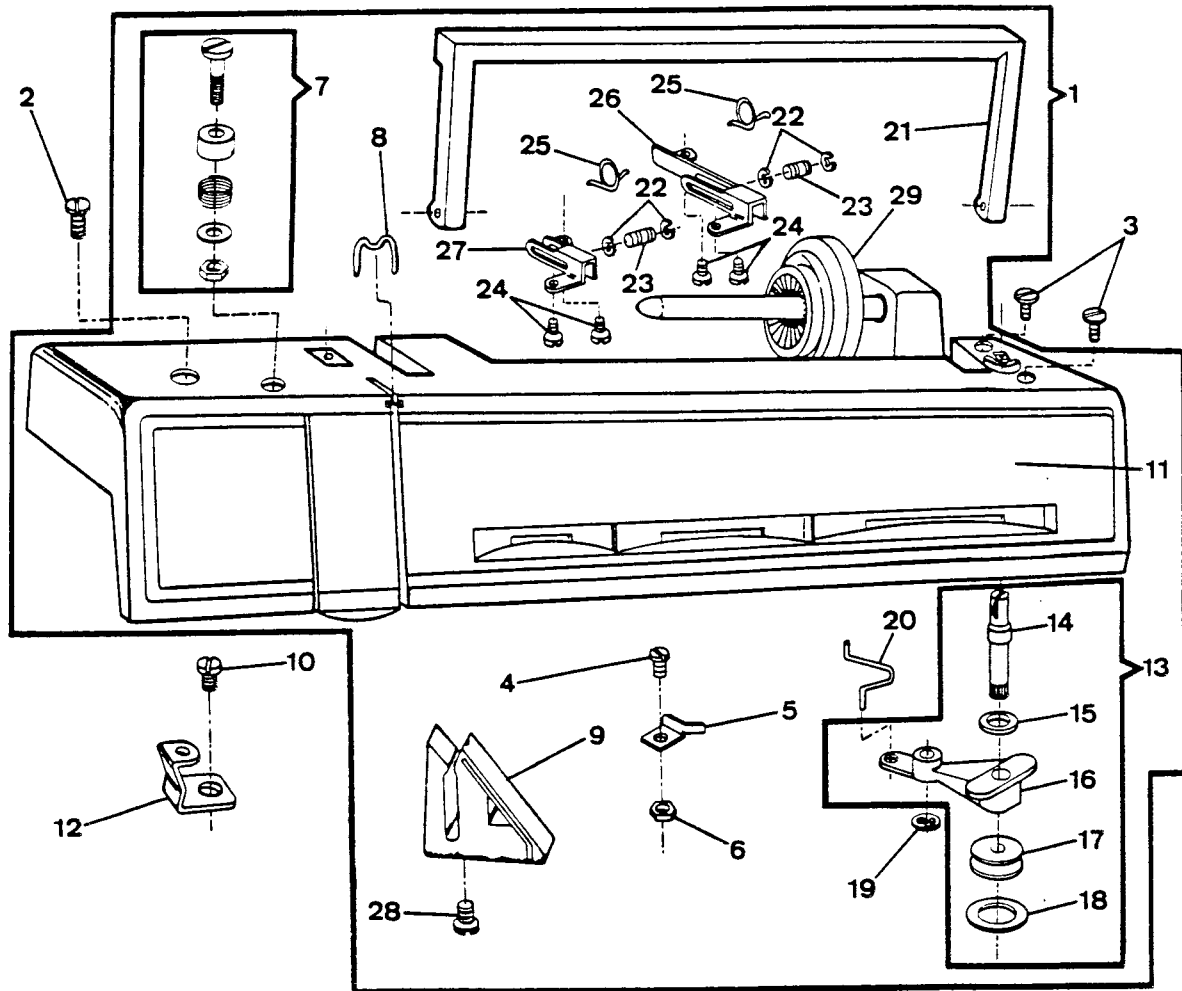

		PART LIST				
		COVERS & ADD-ONS (FOR PLASTIC HANDLE MACHINES)				
		6	6	6	6	6
		2	2	2	2	2
		1	1	1	1	1
REF.	PART NBR	DESCRIPTION				
		1	2	4	5	7
01	531960-453	ARM TOP COVER COMPLETE (W/O LOGO)	X			
01	356181-452	ARM TOP COVER COMPLETE (SPRINT LOGO)	X			
01	356218-452	ARM TOP COVER COMPLETE (FOR DX2)	X			
01	531962-453	ARM TOP COVER COMPLETE (W/O LOGO)		X		
01	356185-452	ARM TOP COVER COMPLETE (SPORT LOGO)		X		
01	356551-451	ARM TOP COVER COMPLETE (W/O LOGO)			X	
01	356555-451	ARM TOP COVER COMPLETE (W/O LOGO)				X
01	356574-451	ARM TOP COVER COMPLETE (W/O LOGO)				X
02	354895-453	ARM TOP COVER SCREW	X	X	X	X
03	354895-453	ARM TOP COVER MOUNTING SCREW (RIGHT REAR & FRONT)	X	X	X	X
04	141920-453	BOBBIN WINDER STOP SCREW	X	X	X	X
05	445924	BOBBIN WINDER STOP	X	X	X	X
06	53640-819	BOBBIN WINDER STOP SCREW NUT	X	X	X	X
07	356258	BOBBIN WINDER TENSION COMPLETE	X	X	X	X
08	445444-900	CONTROL PANEL THREAD GUIDE	X	X	X	X
09	313563-451	ARM TOP COVER THREAD GUIDE	X	X	X	X
10	354826-451	ARM TOP COVER MOUNTING BRACKET SCREW	X	X	X	X
11	446443-451	CONTROL PANEL (BLACK)	X			
11	356183-900	CONTROL PANEL (LIGHT GRAY)	X			
11	353369-451	CONTROL PANEL (BLACK)		X		
11	353369-45X	CONTROL PANEL (GRAY)		X		
11	356187-900	CONTROL PANEL (LIGHT GRAY)		X		
11	353289-451	CONTROL PANEL (BLACK)			X	
11	353290-451	CONTROL PANEL (BLACK)				X
11	353291-451	CONTROL PANEL (BLACK)				X
11	SK-3932	CONTROL PANEL (GRAY)				X
12	531765	ARM TOP COVER MOUNTING BRACKET (LEFT)	X	X	X	X
13	531767-001	BOBBIN WINDER ASSEMBLY	X	X	X	X
14	531768	BOBBIN WINDER SPINDLE COMPLETE	X	X	X	X
15	543531	BOBBIN WINDER SPINDLE WASHER	X	X	X	X
16	531770-451	BOBBIN WINDER FRAME	X	X	X	X
17	44440-001	BOBBIN WINDER PULLEY	X	X	X	X
18	15287-701	BOBBIN WINDER FRICTION RING	X	X	X	X
19	445486	BOBBIN WINDER RETAINING RING	X	X	X	X
20	531766	BOBBIN WINDER HINGE STUD SPRING	X	X	X	X
21	531760-451	ARM TOP COVER HANDLE	X	X	X	X
22	445721	ARM TOP COVER HANDLE RETAINING RING	X	X	X	X
23	531761	ARM TOP COVER HANDLE HINGE PIN	X	X	X	X
24	113455-003	ARM TOP COVER HANDLE MOUNTING BRACKET SCREW	X	X	X	X
25	531762	ARM TOP COVER HANDLE MOUNTING BRACKET SPRING	X	X	X	X
26	531763	ARM TOP COVER HANDLE MOUNTING BRACKET	X	X	X	X
27	531764	ARM TOP COVER HANDLE MOUNTING BRACKET	X	X	X	X
28	354810-451	ARM TOP COVER THREAD GUIDE SCREW	X	X	X	X
29	179967-451	ARM TOP COVER SPOOL PIN THREAD LEAD-OFF	X	X	X	X

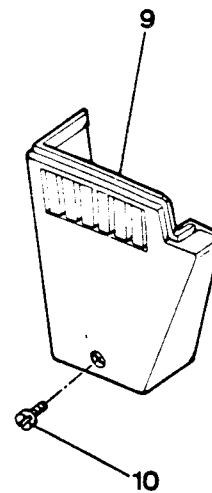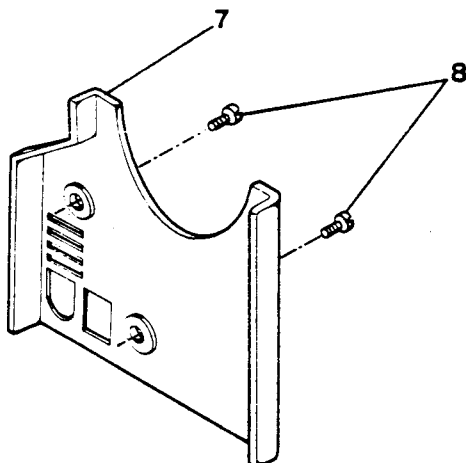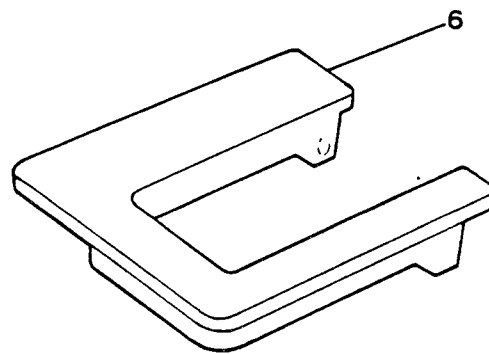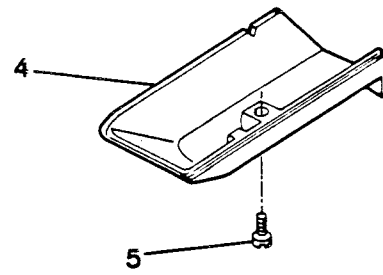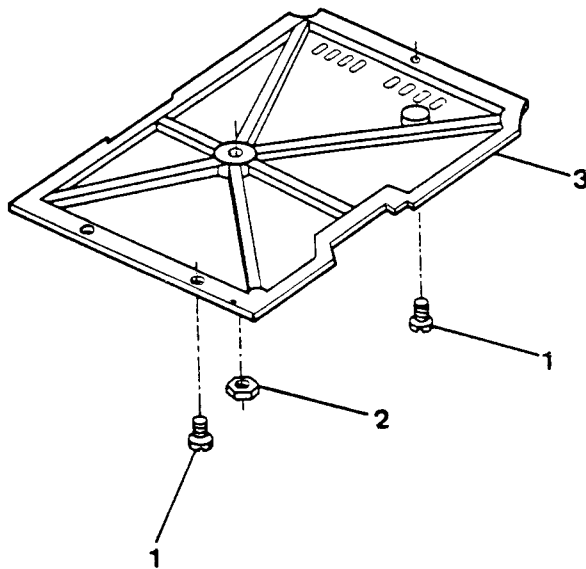

PART LIST
COVERS & ADD-ONS (CONT.)

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	113455-001	BED (BOTTOM) COVER FASTENING SCREW	X	X	X	X	X
02	514608	BED (BOTTOM) COVER FASTENING SCREW NUT	X	X	X	X	X
03	353587-451	BED (BOTTOM) COVER (PLASTIC)	X	X	X	X	X
04	446493-451	BED (TUBULAR) BOTTOM COVER (PLASTIC)	X	X	X	X	X
05	354895-453	BED (TUBULAR) BOTTOM COVER FASTENING SCREW	X	X	X	X	X
06	446455-451	BED EXTENSION	X	X	X	X	X
07		REFER TO CHARTS ON FOLLOWING PAGES					
08	354637-453	ARM END COVER SCREW	X	X	X	X	X
09	353433-451	FACE PLATE ASSEMBLY (FOR U.K., AUSTRALIA, US SCHOOL & CONTINENTAL EUROPE)	X	X	X	X	X
09	446452-451	FACE PLATE COMPLETE	X	X	X	X	X
10	354133-453	FACE PLATE SCREW	X	X	X	X	X


ARM END COVER

PART NBR	U.S.	EUR.	CAN.	UK	USA CAN.	AUSTR.	NON-REG EUROPE 220V.	NON-REG 120V	
446450-001	X								6211
446450-002		X							6211
446450-003			X						6211
446450-004				X					6211
446450-005					X				6211
446450-006						X			6211
446450-007							X		6211
446450-008								X	6211
446450-009	X								6212
446450-010		X							6212
446450-011			X						6212
446450-012				X					6212
446450-013					X				6212
446450-014						X			6212
446450-015							X		6212
446450-016								X	6212
446450-017	X								6214
446450-018		X							6214
446450-019			X						6214
446450-020				X					6214
446450-021					X				6214
446450-022						X			6214
446450-023							X		6214
446450-024								X	6214
446450-025	X								6215
446450-026		X							6215
446450-027			X						6215
446450-028				X					6215
446450-029					X				6215
446450-030						X			6215
446450-031							X		6215
446450-032								X	6215
446450-033	X								6217
446450-034		X							6217
446450-035			X						6217
446450-036				X					6217
446450-037					X				6217
446450-038						X			6217
446450-039							X		6217
446450-040								X	6217
446450-089					X				DX2C

ARM END COVER


PART NBR	INT. GROUP 110V	INT. GROUP 220V	INT. GROUP 110V	INT. GROUP 220V	JAPAN	MIDDLE EAST 110V	MIDDLE EAST 220V	
446450-041	X							6217
446450-042		X						6217
446450-043			X					6217
446450-044				X				6217
446450-045	X							6211
446450-046		X						6211
446450-047			X					6211
446450-048				X				6211
446450-049	X							6212
446450-050		X						6212
446450-051			X					6212
446450-052				X				6212
446450-053	X							6214
446450-054		X						6214
446450-055			X					6214
446450-056				X				6214
446450-057	X							6215
446450-058		X						6215
446450-059			X					6215
446450-060				X				6215
446450-061					X			6211
446450-062					X			6212
446450-063					X			6214
446450-064					X			6215
446450-065					X			6217
446450-066						X		6211
446450-067							X	6211
446450-068						X		6212
446450-069							X	6212
446450-070						X		6214
446450-071							X	6214
446450-072						X		6215
446450-073							X	6215
446450-074						X		6217
446450-075							X	6217

NEEDLE BAR, PRESSER BAR & TAKE-UP

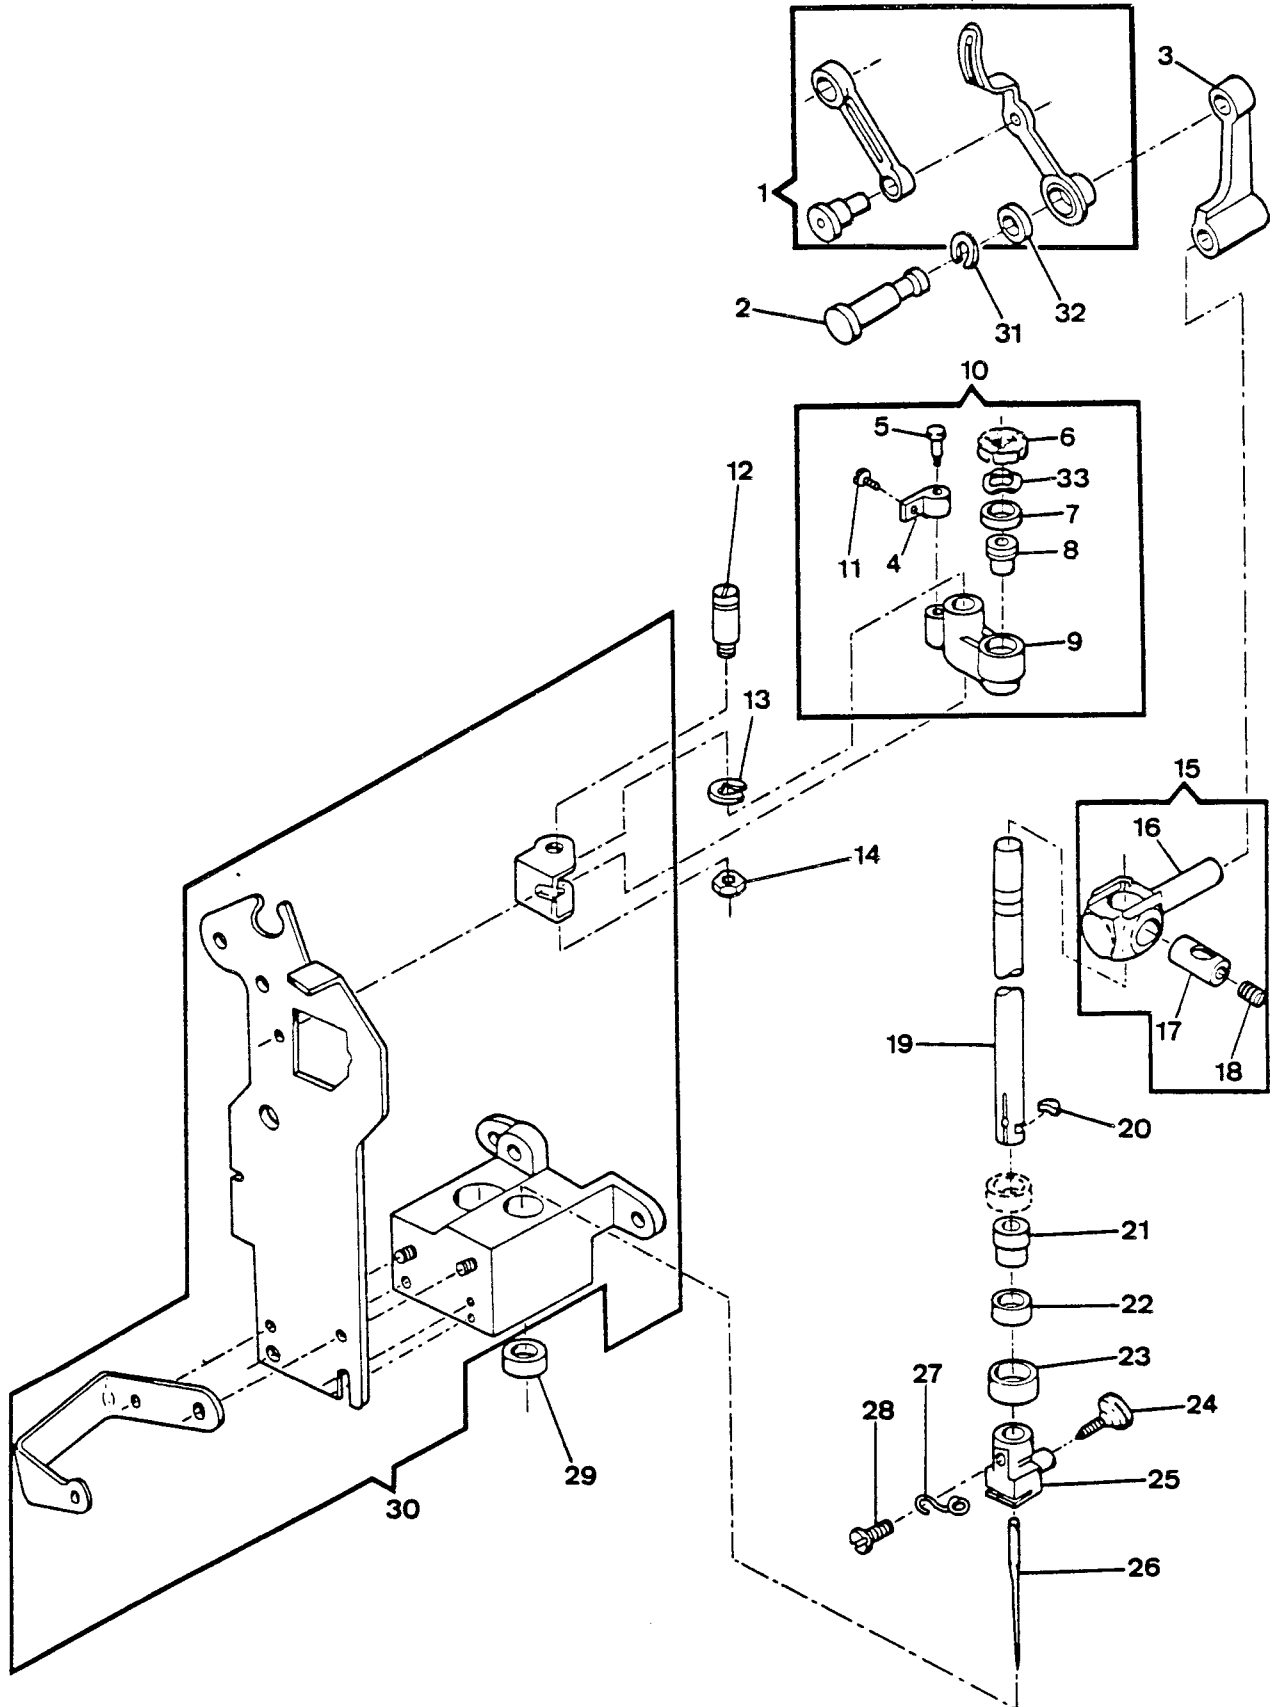

PART LIST
NEEDLE BAR, PRESSER BAR & TAKE-UP


REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	445672	THREAD TAKE-UP LEVER COMPLETE	X	X	X	X	
02	446260	THREAD TAKE-UP STUD	X	X	X	X	X
03	446357	NEEDLE BAR CONNECTING LINK	X	X	X	X	X
04	446190	NEEDLE BAR DRIVING ARM HINGE BRACKET	X	X	X	X	X
05	37935	NEEDLE BAR DRIVING ARM HINGE BRACKET HINGE PIN	X	X	X	X	X
06	353522	NEEDLE BAR BALL BUSHING (UPPER) RETAINING RING	X	X	X	X	X
07	507379	NEEDLE BAR BALL BUSHING (UPPER) SOCKET (LOWER)	X	X	X	X	X
08	446355-001	NEEDLE BAR BALL BUSHING (UPPER)	X	X	X	X	X
09	353521	NEEDLE BAR VIBRATING BRACKET	X	X	X	X	X
10	353520	NEEDLE BAR VIBRATING BRACKET COMPLETE	X	X	X	X	X
11	141844-819	NEEDLE BAR DRIVING ARM HINGE BRACKET SCREW	X	X	X	X	X
12	446359	NEEDLE BAR VIBRATING BRACKET HINGE PIN	X	X	X	X	X
13	445721	NEEDLE BAR VIBRATING BRACKET HINGE PIN RETAINING RING	X	X	X	X	X
14	353402-451	NEEDLE BAR VIBRATING BRACKET HINGE PIN NUT	X	X	X	X	X
15	353549-940	NEEDLE BAR CONNECTING STUD WITH HINGE PIN	X	X	X	X	X
16	353549	NEEDLE BAR CONNECTING STUD	X	X	X	X	X
17	37931	NEEDLE BAR CONNECTING STUD HINGE PIN	X	X	X	X	X
18	141916-833	NEEDLE BAR CLAMPING SCREW	X	X	X	X	X
19	445793	NEEDLE BAR	X	X	X	X	X
20	37943	NEEDLE BAR GIB	X	X	X	X	X
21	446355-001	NEEDLE BAR BALL BUSHING (LOWER)	X	X	X	X	X
22	507379	NEEDLE BAR BALL BUSHING (LOWER) SOCKET	X	X	X	X	X
23	446361	NEEDLE BAR BALL BUSHING (LOWER) ADJUSTING COLLAR	X	X	X	X	X
24	113413-451	NEEDLE THUMB SCREW	X	X	X	X	X
25	353630	NEEDLE CLAMP BODY (FOR JAPAN ONLY)	X	X	X	X	X
26	204514-100	NEEDLE 2045 SIZE NBR 14	X	X	X	X	X
27	353629	NEEDLE CLAMP THREAD GUIDE (FOR JAPAN ONLY)	X	X	X	X	X
28	141808-451	NEEDLE CLAMP BODY, NEEDLE CLAMP THREAD GUIDE & NEEDLE STOP SCREW	X	X	X	X	X
29	44450	NEEDLE BAR BALL BUSHING (LOWER) SOCKET (UPPER)	X	X	X	X	X
30	356599	NEEDLE BAR, PRESSER BAR & VIBRATING BRACKET HOUSING ASSEMBLY	X	X	X	X	X
31	445486	THREAD TAKE-UP STUD RETAINING RING	X	X	X	X	X
32	543531	THREAD TAKE-UP STUD THRUST WASHER	X	X	X	X	X
33	353424	NEEDLE BAR BALL BUSHING (UPPER) WAVED WASHER	X	X	X	X	X

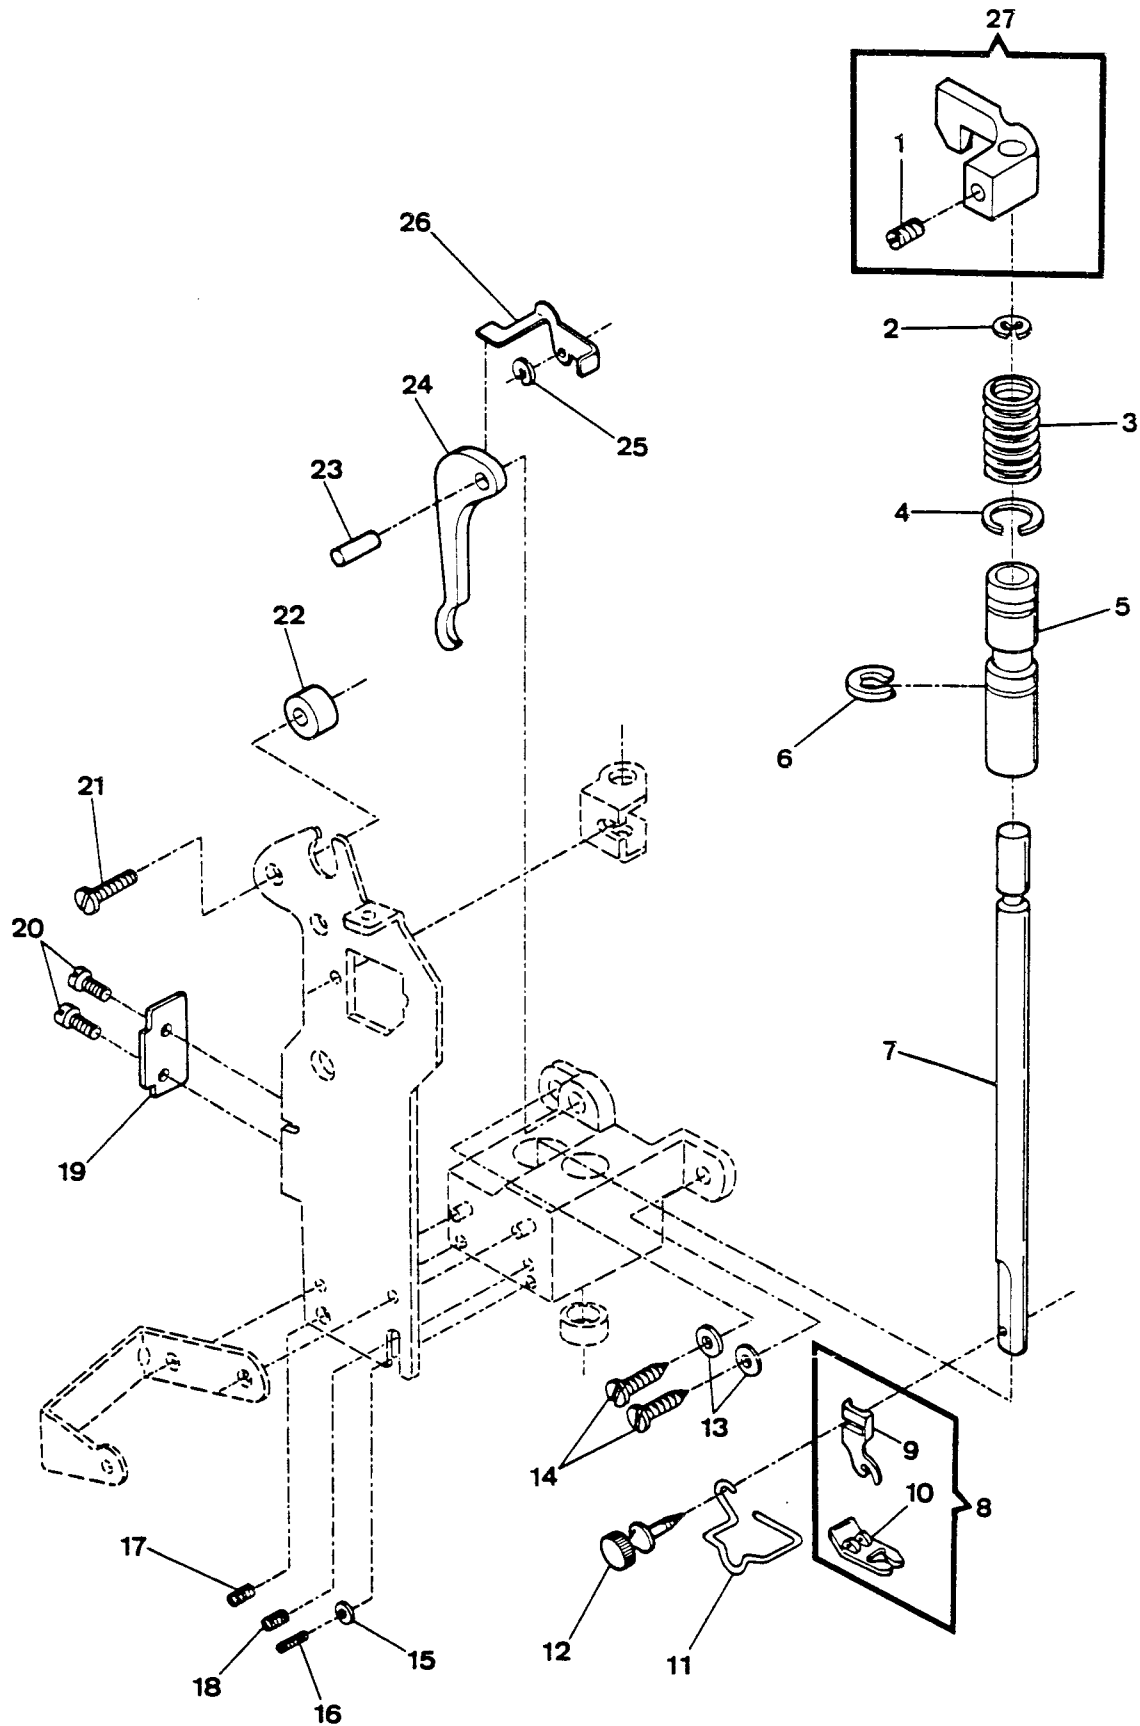

PART LIST
NEEDLE BAR, PRESSER BAR & TAKE-UP (CONT.)


REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	141925-833	PRESSER BAR GUIDE BRACKET SET SCREW	X	X	X	X	X
02	353215	PRESSER BAR SPRING RETAINING RING (UPPER)	X	X	X	X	X
03	353214	PRESSER BAR SPRING	X	X	X	X	X
04	353252	PRESSER BAR SPRING RETAINING RING	X	X	X	X	X
05	445947-001	PRESSER BAR BUSHING	X	X	X	X	X
06	353252	PRESSER BAR BUSHING LOCATING RING	X	X	X	X	X
07	314638	PRESSER BAR	X	X	X	X	X
08	446372	PRESSER FOOT (SNAP-ON) COMPLETE FOR ZIG-ZAG SEWING	X	X	X	X	X
09	155964	PRESSER FOOT SHANK (SNAP-ON)	X	X	X	X	X
10	446371	PRESSER FOOT PLATE (SNAP-ON) FOR ZIG-ZAG SEWING	X	X	X	X	X
11	116863	FINGER GUARD (EUROPE)	X	X	X	X	X
12	354135-452	PRESSER FOOT THUMB SCREW	X	X	X	X	X
13	353375-451	NEEDLE BAR, PRESSER BAR & VIBRATING BRACKET HOUSING MOUNTING SCREW (LOWER) WASHER	X	X	X	X	X
14	113434-451	NEEDLE BAR, PRESSER BAR & VIBRATING BRACKET HOUSING MOUNTING SCREW (LOWER)	X	X	X	X	X
15	54591-451	NEEDLE BAR OVER THROW SET SCREW NUT	X	X	X	X	X
16	354993-451	NEEDLE BAR OVER THROW SET SCREW	X	X	X	X	X
17	141938-833	NEEDLE BAR BALL BUSHING (LOWER) ADJUSTING COLLAR SET SCREW	X	X	X	X	X
18	354906-451	PRESSER BAR BUSHING SET SCREW	X	X	X	X	X
19	446353	PRESSER BAR GUIDE BRACKET POSITIONER	X	X	X	X	X
20	141913-451	PRESSER BAR GUIDE BRACKET POSITIONER SCREW	X	X	X	X	X
21	113455-005	NEEDLE BAR & PRESSER BAR VIBRATING BRACKET HOUSING MOUNTING SCREW (UPPER)	X	X	X	X	X
22	531627	NEEDLE BAR, PRESSER BAR & VIBRATING BRACKET HOUSING MOUNTING BUSHING	X	X	X	X	X
23	446354-451	PRESSER BAR LIFTER HINGE PIN	X	X	X	X	X
24	446356	PRESSER BAR LIFTER	X	X	X	X	X
25	445486	TENSION RELEASING LEVER RETAINING RING	X	X	X	X	X
26	445925	TENSION RELEASING LEVER	X	X	X	X	X
27	353212	PRESSER BAR GUIDE BRACKET ASSEMBLY	X	X	X	X	X

ARM SHAFT DRIVE

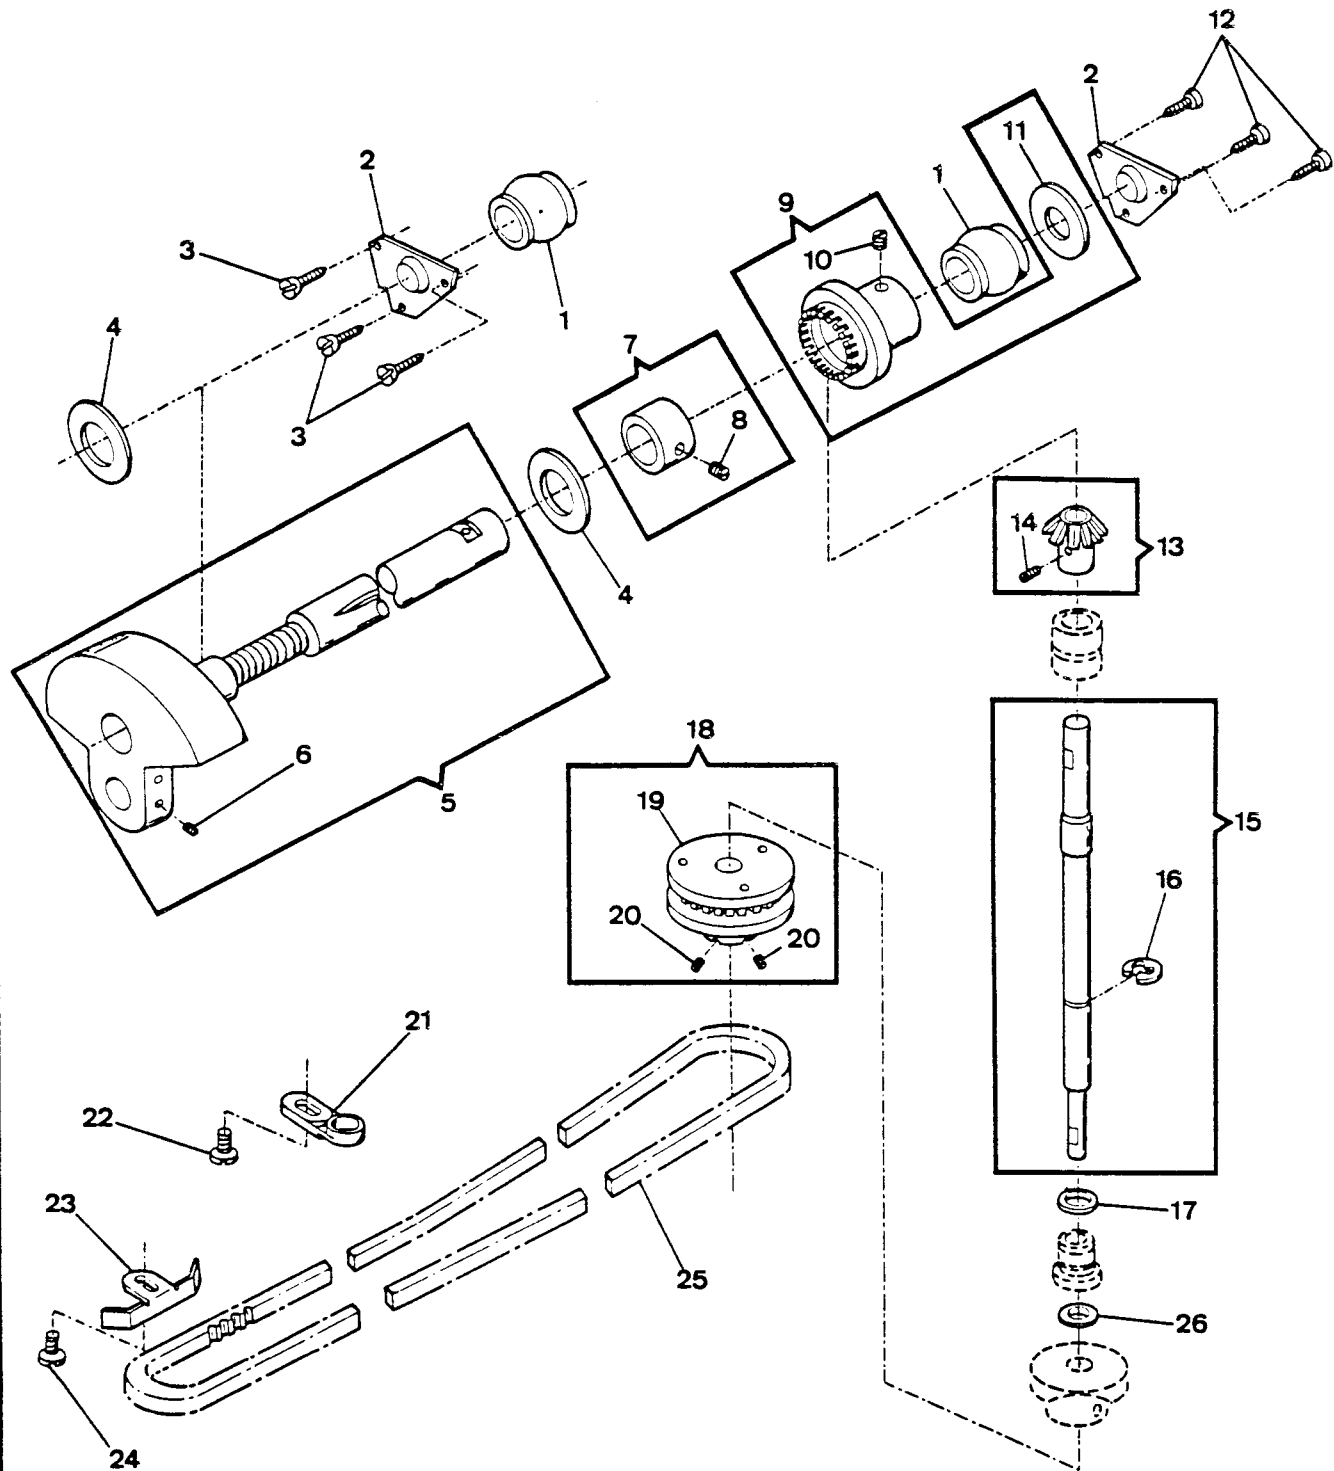


PART LIST							
ARM SHAFT DRIVE			6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	446384	ARM SHAFT BUSHING (FRONT)	X	X	X	X	X
02	446385	ARM SHAFT BUSHING (FRONT) RETAINING BRACKET	X	X	X	X	X
03	113455-001	ARM SHAFT BUSHING (FRONT) RETAINING BRACKET SCREW	X	X	X	X	X
04	319764	ARM SHAFT (HORIZONTAL) RETAINING COLLAR WASHER	X	X	X	X	X
05	531684	ARM SHAFT COMPLETE	X	X	X	X	X
06	354105-833	NEEDLE BAR CRANK POSITION SET SCREW	X	X	X	X	X
07	353580	ARM SHAFT (HORIZONTAL) RETAINING COLLAR	X	X	X	X	X
08	113500-451	ARM SHAFT (HORIZONTAL) RETAINING COLLAR SET SCREW	X	X	X	X	X
09	353272	ARM SHAFT (HORIZONTAL) BEVEL GEAR & FEED LIFTING (ECCENTRIC) COMPLETE	X	X	X	X	X
10	354813-451	ARM SHAFT (HORIZONTAL) BEVEL GEAR & FEED LIFTING ECCENTRIC SET SCREW	X	X	X	X	X
11	353413	ARM SHAFT (HORIZONTAL) BEVEL GEAR & FEED LIFTING ECCENTRIC WASHER (PLASTIC)	X	X	X	X	X
12	113455-001	ARM SHAFT BUSHING (REAR) RETAINING BRACKET SCREW	X	X	X	X	X
13	353273	ARM SHAFT (UPRIGHT) BEVEL GEAR (PLASTIC)	X	X	X	X	X
14	354105-833	ARM SHAFT (UPRIGHT) BEVEL GEAR SET SCREW	X	X	X	X	X
15	179952	ARM SHAFT (UPRIGHT) ASSEMBLY	X	X	X	X	X
16	353215	ARM SHAFT (UPRIGHT) RETAINING RING	X	X	X	X	X
17	353394	ARM SHAFT (UPRIGHT) RETAINING RING WASHER	X	X	X	X	X
18	353438-001	ARM SHAFT (UPRIGHT) BELT DRIVE PULLEY ASSEMBLY COMPLETE	X	X	X	X	X
19	446230	ARM SHAFT (UPRIGHT) BELT DRIVE PULLEY	X	X	X	X	X
20	354906-451	ARM SHAFT (UPRIGHT) BELT DRIVE PULLEY RETAINING COLLAR SET SCREW	X	X	X	X	X
21	531630	ROTATING HOOK DRIVE BELT TENSION ADJUSTER	X	X	X	X	X
22	113453-003	ROTATING HOOK DRIVE BELT TENSIONER SCREW	X	X	X	X	X
23	446376	BELT RETAINER (LEFT)	X	X	X	X	X
24	113455-001	BELT RETAINER (LEFT) SCREW	X	X	X	X	X
25	446237	BELT (ROTATING HOOK DRIVE)	X	X	X	X	X
26	319826	ARM SHAFT (UPRIGHT) BELT DRIVE PULLEY WASHER	X	X	X	X	X

HAND WHEEL

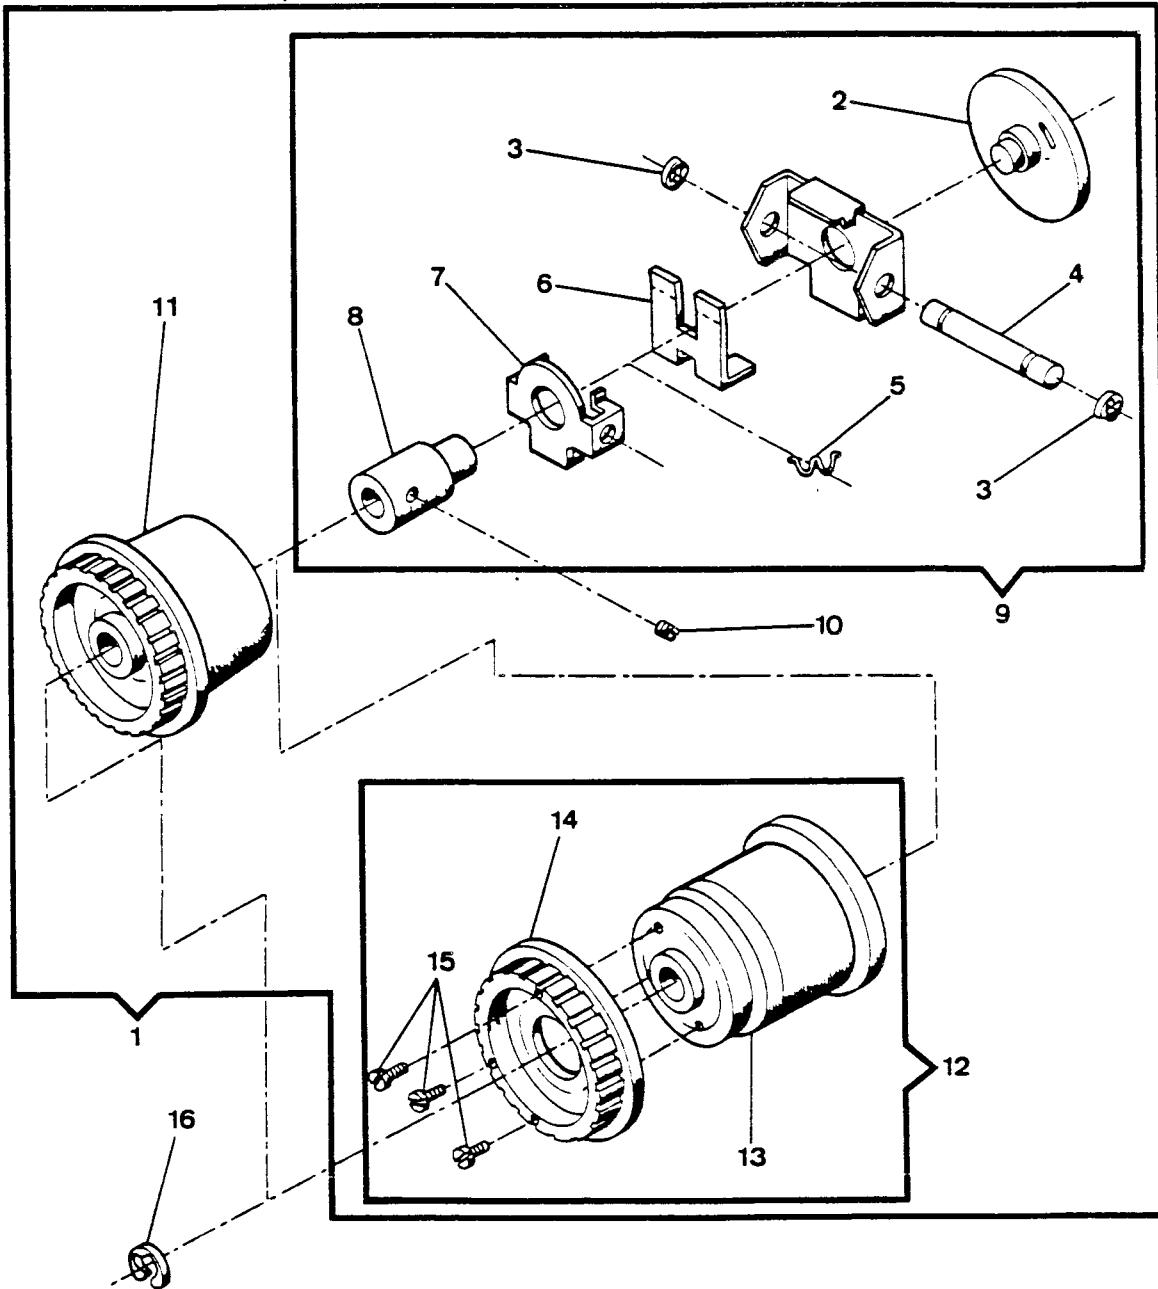

PART LIST							
HAND WHEEL			6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	446391-451	HAND WHEEL (ELECTRIC) COMPLETE	X	X	X	X	X
01	446460-451	HAND WHEEL (TREADLE/ELECTRIC) COMPLETE	X	X	X	X	X
02	446297	HAND WHEEL DISENGAGING CLUTCH ENGAGING PLATE COVER	X	X	X	X	X
03	445721	HAND WHEEL DISENGAGING CLUTCH ENGAGING PLATE HINGE PIN RETAINING RING	X	X	X	X	X
04	319560	HAND WHEEL DISENGAGING CLUTCH ENGAGING PLATE HINGE PIN	X	X	X	X	X
05	531628	HAND WHEEL DISENGAGING CLUTCH ACTUATING SPRING	X	X	X	X	X
06	319567	HAND WHEEL DISENGAGING CLUTCH BUSHING PLATE RETAINER	X	X	X	X	X
07	319566	HAND WHEEL DISENGAGING CLUTCH BUSHING PLATE	X	X	X	X	X
08	446390	HAND WHEEL DISENGAGING CLUTCH BUSHING	X	X	X	X	X
09	446343	HAND WHEEL DISENGAGING CLUTCH BUSHING COMPLETE	X	X	X	X	X
10	354813-451	HAND WHEEL DISENGAGING CLUTCH BUSHING SCREW	X	X	X	X	X
11	446386-451	HAND WHEEL (PLASTIC) (ELECTRIC)	X	X	X	X	X
12	179894-451	HAND WHEEL (TREADLE/ELECTRIC) ASSEMBLY	X	X	X	X	X
13	179896-451	HAND WHEEL (TREADLE/ELECTRIC) DISENGAGING CLUTCH ASSEMBLY	X	X	X	X	X
14	179895	HAND WHEEL (TREADLE/ELECTRIC) SPROCKET (PLASTIC)	X	X	X	X	X
15	354656-451	HAND WHEEL (TREADLE/ELECTRIC) SPROCKET SCREW	X	X	X	X	X
16	446387	HAND WHEEL RETAINING RING (TREADLE/ELECTRIC)	X	X	X	X	X


TENSION ASSEMBLY

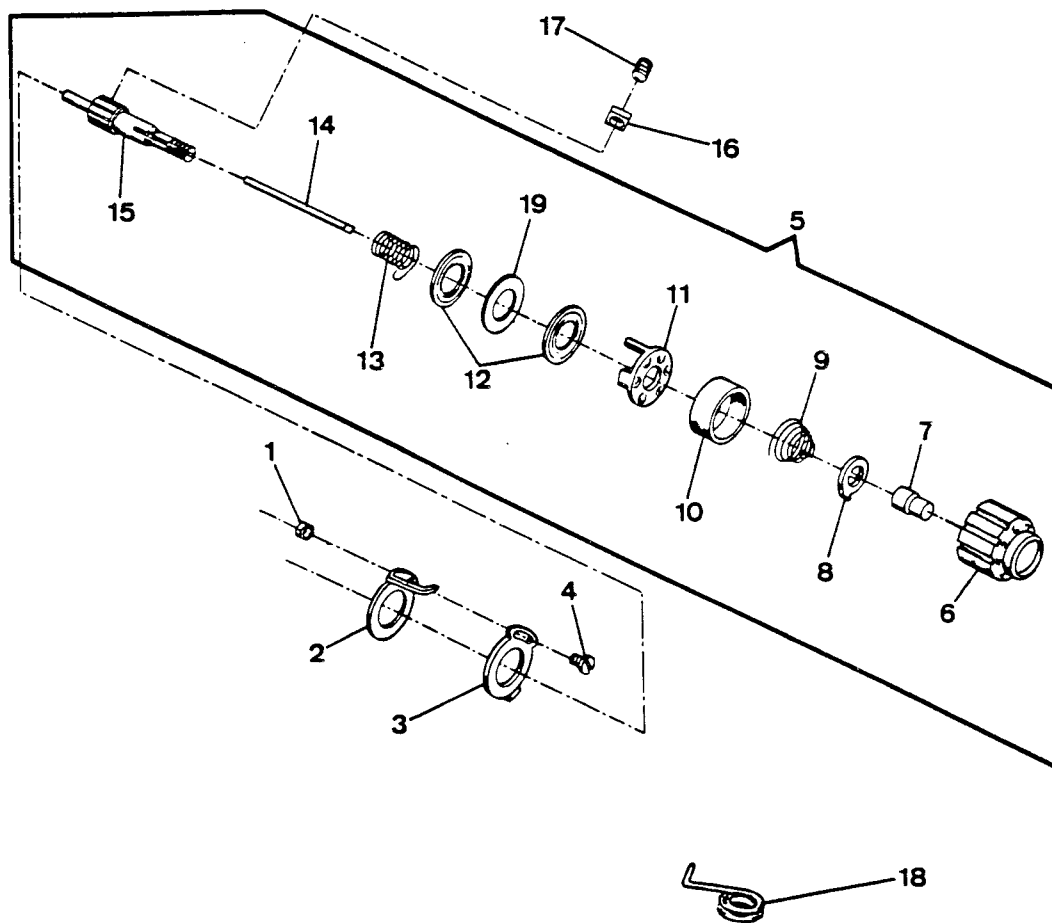


PART LIST
TENSION ASSEMBLY

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	514698-451	SLACK THREAD REGULATOR & TENSION THREAD GUIDE SCREW NUT	X	X	X	X	X
02	446440	THREAD GUIDE (UPPER)	X	X	X	X	X
03	179936-451	SLACK THREAD REGULATOR & TENSION THREAD GUIDE	X	X	X	X	X
04	141808-451	SLACK THREAD REGULATOR & TENSION THREAD GUIDE SCREW	X	X	X	X	X
05	353583-451	TENSION MOUNTING BRACKET COMPLETE	X	X	X	X	X
06	445054-030	TENSION INDICATOR DIAL	X	X	X	X	X
07	446126	TENSION INDICATOR ADAPTER	X	X	X	X	X
08	37984	TENSION MOUNTING BRACKET	X	X	X	X	X
09	125314	TENSION SPRING	X	X	X	X	X
10	44879-478	TENSION SPRING CAP	X	X	X	X	X
11	45343	THREAD TAKE-UP SPRING THREAD GUARD	X	X	X	X	X
12	2102-001	TENSION DISC (SMALL)	X	X	X	X	X
13	66774-002	THREAD TAKE-UP SPRING	X	X	X	X	X
14	353578	TENSION RELEASING PIN	X	X	X	X	X
15	44454	TENSION STUD	X	X	X	X	X
16	353367-451	TENSION STUD SET SCREW NUT	X	X	X	X	X
17	141938-833	TENSION STUD SET SCREW	X	X	X	X	X
18	445784	TENSION GUIDE (LOWER)	X	X	X	X	X
19	44633	TENSION DISC (MIDDLE)	X	X	X	X	X

HOOK SYSTEM

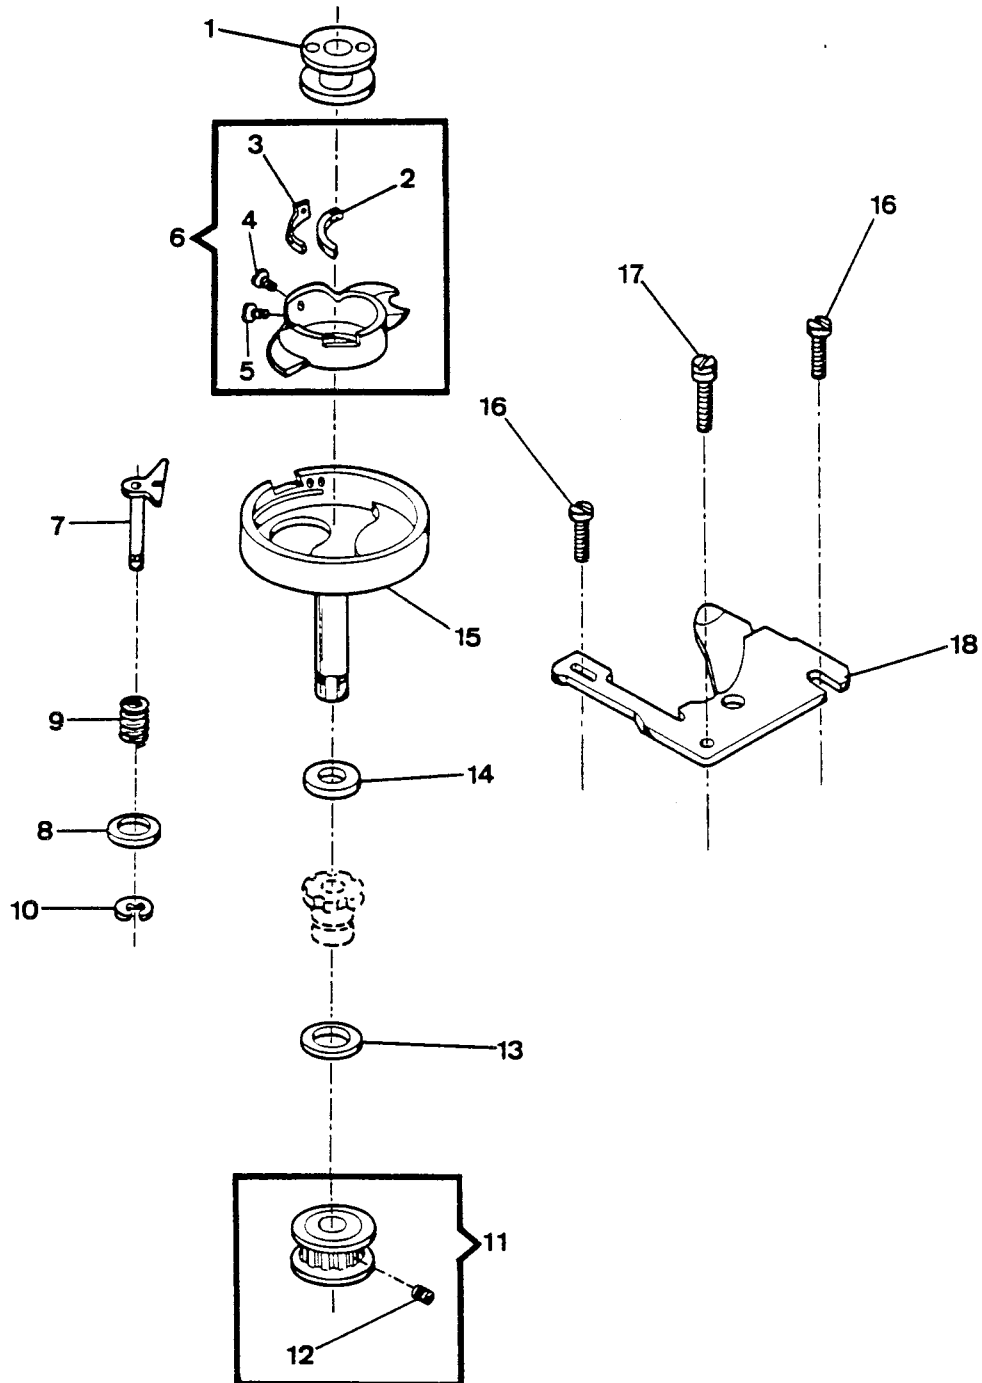


		PART LIST HOOK SYSTEM	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	172336	ROTATING HOOK BOBBIN (PLASTIC)	X	X	X	X	X
02	310884-451	ROTATING HOOK BOBBIN CASE TENSION SPRING SEGMENT	X	X	X	X	X
03	314715	ROTATING HOOK BOBBIN CASE TENSION SPRING	X	X	X	X	X
04	354183-452	ROTATING HOOK BOBBIN CASE TENSION REGULATING SCREW	X	X	X	X	X
05	139975-452	ROTATING HOOK BOBBIN CASE TENSION SPRING SEGMENT SCREW	X	X	X	X	X
06	421325	ROTATING HOOK BOBBIN CASE	X	X	X	X	X
07	353511	ROTATING HOOK BOBBIN CASE RETAINING PLATE ASSEMBLY	X	X	X	X	X
08	445808	ROTATING HOOK BOBBIN CASE RETAINING PLATE STUD WASHER	X	X	X	X	X
09	44892	ROTATING HOOK BOBBIN CASE RETAINING PLATE STUD SPRING	X	X	X	X	X
10	353509	ROTATING HOOK BOBBIN CASE RETAINING PLATE RETAINING RING	X	X	X	X	X
11	446235	ROTATING HOOK BELT DRIVE PULLEY	X	X	X	X	X
12	141803-830	ROTATING HOOK BELT DRIVE PULLEY SCREW	X	X	X	X	X
13	382861-906	ROTATING HOOK BELT DRIVE PULLEY WASHER	X	X	X	X	X
14	353453	ROTATING HOOK WEAR WASHER	X	X	X	X	X
15	353366	ROTATING HOOK COMPLETE	X	X	X	X	X
15	SK-4366	ROTATING HOOK COMPLETE (FOR JAPAN)	X	X	X	X	X
16	113430-451	ROTATING HOOK BOBBIN CASE POSITION PLATE SCREW	X	X	X	X	X
17	113430-451	ROTATING HOOK BOBBIN CASE RETAINING PLATE (ADJUSTABLE & POSITION PLATE) SCREW	X	X	X	X	X
18	44873-001	ROTATING HOOK BOBBIN CASE POSITION PLATE	X	X	X	X	X

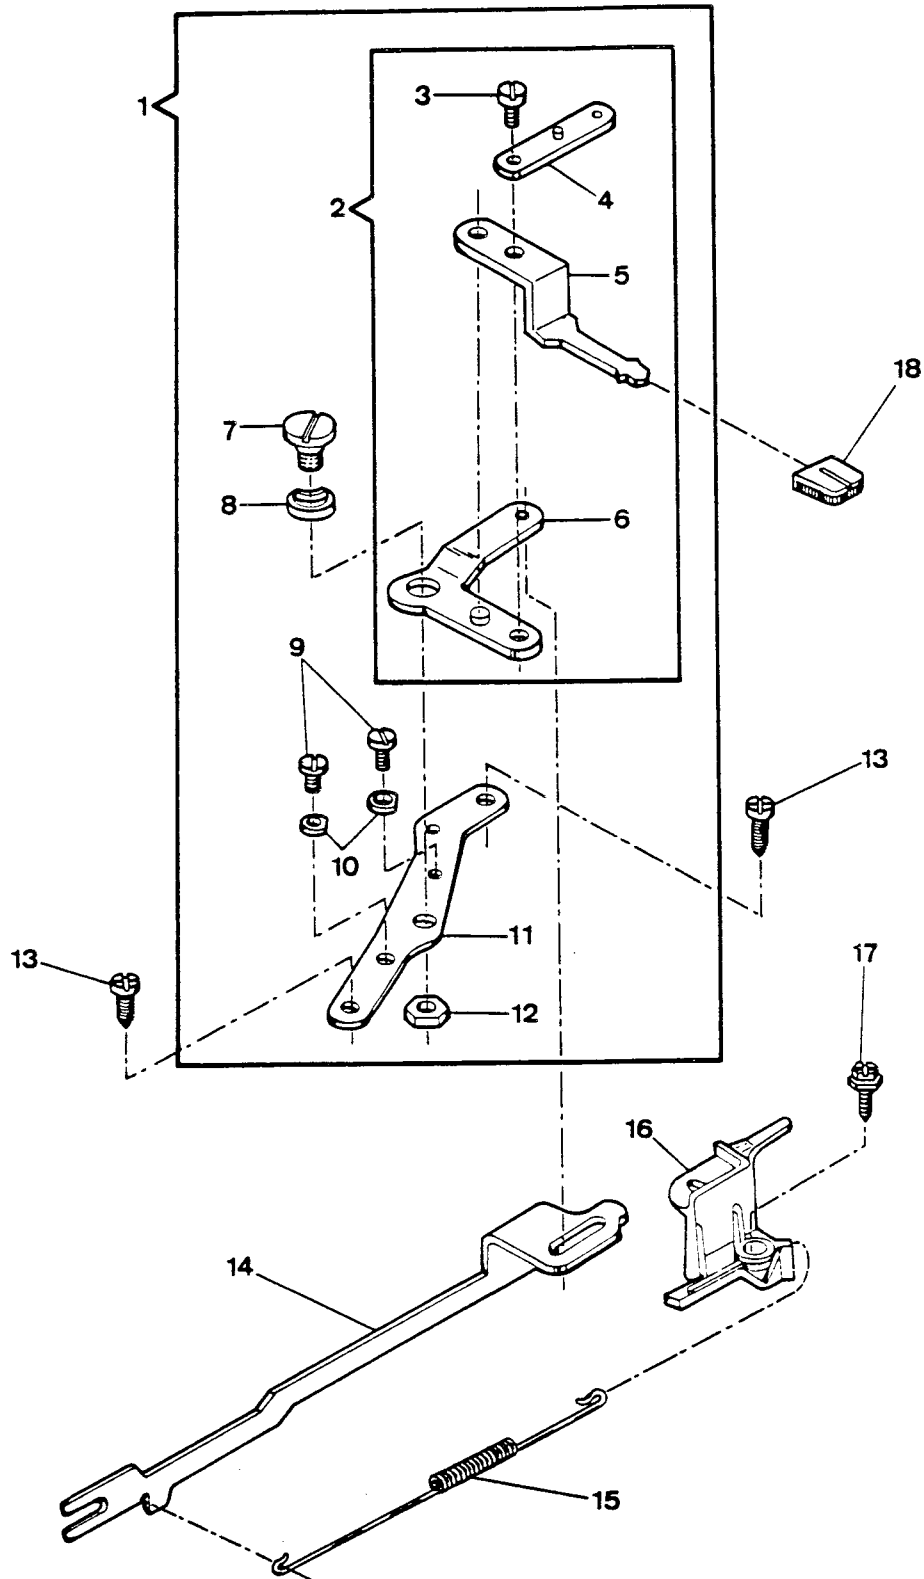

PART LIST							
BIGHT AMPLITUDE			6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	446396	BIGHT AMPLITUDE CONTROL LEVER MOUNTING BRACKET COMPLETE	X				
01	179893	BIGHT AMPLITUDE CONTROL LEVER MOUNTING BRACKET COMPLETE		X	X	X	X
02	446395	BIGHT AMPLITUDE CONTROL LEVER SUB-ASSEMBLY	X				
02	446342	BIGHT AMPLITUDE CONTROL LEVER SUB-ASSEMBLY		X	X	X	X
03	141913-451	BIGHT AMPLITUDE CONTROL LEVER SCREW	X				
03	139866-451	BIGHT AMPLITUDE CONTROL LEVER SCREW		X	X	X	X
04	44556	BUTTONHOLER BIGHT CONTROL CAM FOLLOWER LEVER LINK (LEFT)		X	X	X	X
05	446394	BIGHT AMPLITUDE CONTROL LEVER	X	X	X	X	X
06	37246	BIGHT AMPLITUDE CONTROL LEVER LINK	X	X	X	X	X
07	354825-451	BIGHT AMPLITUDE CONTROL LEVER LINK HINGE SCREW	X	X	X	X	X
08	49204	BIGHT AMPLITUDE CONTROL LEVER LINK HINGE SCREW FRICTION WASHER	X	X	X	X	X
09	141913-451	BIGHT AMPLITUDE CONTROL LEVER LINK STOP SCREW	X	X	X	X	X
10	446904	BIGHT AMPLITUDE CONTROL LEVER LINK STOP	X	X	X	X	X
11	531793	BIGHT AMPLITUDE CONTROL LEVER MOUNTING BRACKET	X	X	X	X	X
12	54591-451	BIGHT AMPLITUDE CONTROL LEVER LINK HINGE SCREW NUT	X	X	X	X	X
13	113455-001	BIGHT AMPLITUDE CONTROL LEVER MOUNTING BRACKET SCREW	X	X	X	X	X
14	37933-001	NEEDLE BAR DRIVING ARM	X	X	X	X	X
15	37942	NEEDLE BAR DRIVING ARM TENSION SPRING	X	X	X	X	X
16	445780	LIGHT LEAD SHIELD & NEEDLE BAR DRIVING ARM TENSION SPRING MOUNTING PLATE	X	X	X	X	X
17	113455-004	LIGHT LEAD SHIELD & NEEDLE BAR DRIVING ARM TENSION SPRING MOUNTING PLATE SCREW	X	X	X	X	X
18	446398-455	BIGHT AMPLITUDE CONTROL LEVER KNOB (PLASTIC) (BLACK)	X	X	X	X	X
18	446398-452	BIGHT AMPLITUDE CONTROL LEVER KNOB (PLASTIC) (GRAY)	X	X	X	X	X
18	446398-454	BIGHT AMPLITUDE CONTROL LEVER KNOB (PLASTIC) (LIGHT BUFF) FOR DX2C	X				


NEEDLE POSITION

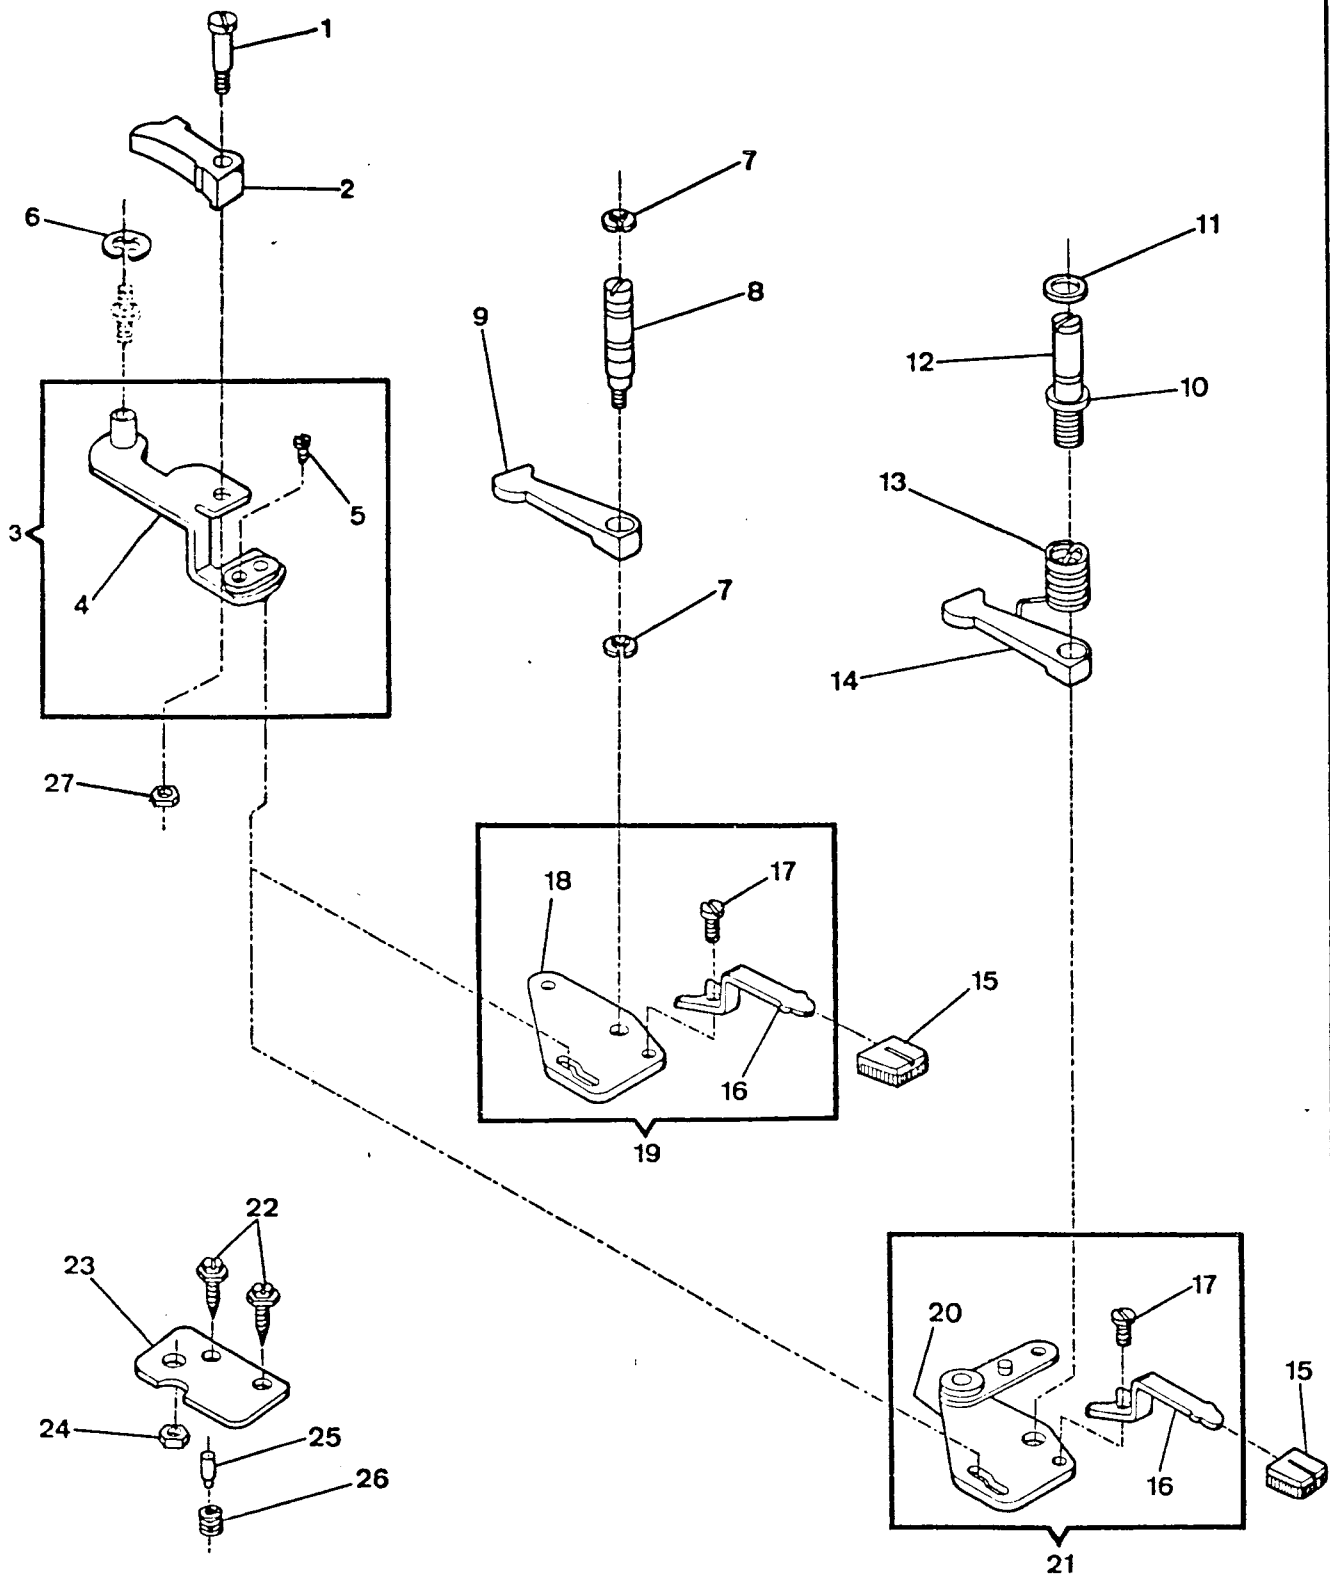

PART LIST
NEEDLE POSITION

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	355240-451	NEEDLE BAR DRIVING ARM SLIDE SCREW	X	X	X	X	X
02	445841	NEEDLE BAR DRIVING ARM SLIDE	X	X	X	X	X
03	356513	NEEDLE BAR DRIVING ARM SLIDE BRACKET COMPLETE	X	X	X	X	X
04	356514	NEEDLE BAR DRIVING ARM SLIDE BRACKET	X	X	X	X	X
05	141913-451	NEEDLE POSITION LEVER BRACKET STUD ARM SET SCREW	X	X	X	X	X
06	445721	NEEDLE BAR DRIVING ARM SLIDE BRACKET RETAINING RING	X	X	X	X	X
07	44371	DISC FOLLOWER STUD RETAINING RING (UPPER & LOWER)	X				
08	446023	DISC FOLLOWER STUD	X				
09	445646	DISC FOLLOWER	X				
10	353585	DISC FOLLOWER STUD COLLAR		X	X	X	X
11	353548	DISC FOLLOWER STUD WASHER		X	X	X	X
12	353584	DISC FOLLOWER STUD		X	X	X	X
13	179897	DISC FOLLOWER SPRING		X	X	X	X
14	446404	DISC FOLLOWER		X	X	X	X
15	446398-455	NEEDLE POSITION SELECTOR LEVER KNOB (PLASTIC) (BLACK)	X	X	X	X	X
15	446398-452	NEEDLE POSITION SELECTOR LEVER KNOB (PLASTIC) (GRAY)	X	X	X	X	X
15	446398-454	NEEDLE POSITION SELECTOR LEVER KNOB (PLASTIC) (FOR DX2)	X				
16	446397	NEEDLE POSITION SELECTOR LEVER	X	X	X	X	X
17	141913-451	NEEDLE POSITION SELECTOR LEVER SCREW	X	X	X	X	X
18	353547	NEEDLE POSITION SELECTOR LEVER BRACKET	X				
19	446399	NEEDLE POSITION SELECTOR LEVER ASSEMBLY	X				
20	44628	NEEDLE POSITION SELECTOR LEVER BRACKET ASSEMBLY		X	X	X	X
21	446400	NEEDLE POSITION SELECTOR LEVER BRACKET COMPLETE		X	X	X	X
22	113455-001	NEEDLE POSITION SELECTOR LEVER MOUNTING PLATE SCREW	X	X	X	X	X
23	446401	NEEDLE POSITION SELECTOR LEVER MOUNTING PLATE	X				
24	54591-451	DISC FOLLOWER STUD NUT	X	X	X	X	X
25	319690	NEEDLE POSITION SELECTOR LEVER BRACKET POSITIONING PIN	X	X	X	X	X
25	356228	NEEDLE POSITION SELECTOR LEVER BRACKET POSITIONING PIN (FOR JAPAN)	X	X	X	X	X
26	444800	NEEDLE POSITION SELECTOR LEVER BRACKET POSITIONING PIN SPRING	X	X	X	X	X
27	618638-005	NEEDLE BAR DRIVING ARM SLIDE SCREW LOCK NUT	X	X	X	X	X


DISC SELECTION ASSEMBLY

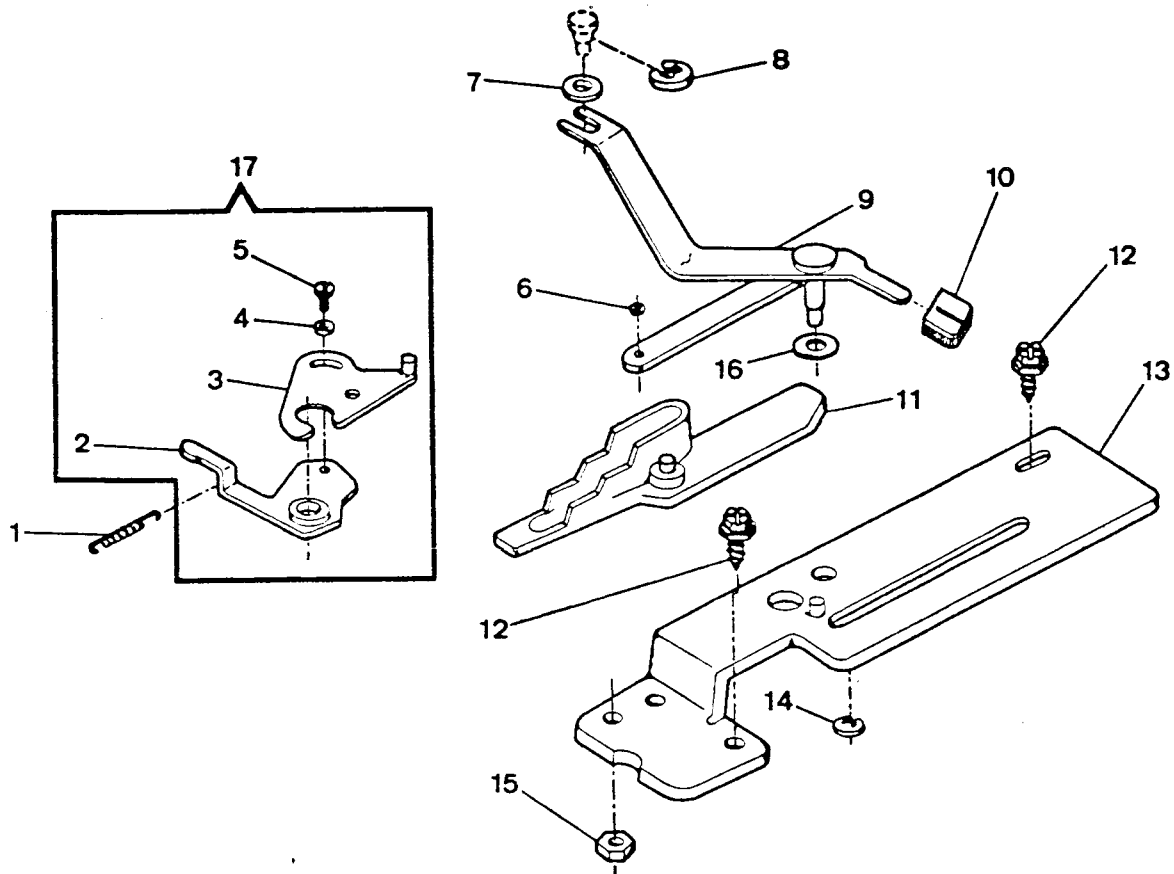

PART LIST
DISC SELECTION ASSEMBLY


REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	446415	DISC FOLLOWER DISENGAGING LEVER SPRING	X	X	X	X	
02	446412	DISC FOLLOWER DISENGAGING LEVER	X	X	X	X	
03	446411	DISC FOLLOWER DISENGAGING LEVER PLATE ASSEMBLY	X	X	X	X	
04	445808	DISC FOLLOWER DISENGAGING LEVER PLATE ADJUSTING SCREW WASHER	X	X	X	X	
05	141913-451	DISC FOLLOWER DISENGAGING LEVER PLATE ADJUSTING SCREW	X	X	X	X	
06	446417	PATTERN SELECTOR CAM SLIDE CONNECTING LINK RETAINING RING	X	X	X	X	
07	444923-452	PATTERN SELECTOR LEVER HINGE STUD WASHER	X	X	X	X	
08	445486	PATTERN SELECTOR LEVER RETAINING RING	X	X	X	X	
09	446383	PATTERN SELECTOR LEVER COMPLETE	X	X	X	X	
10	446398-455	PATTERN SELECTOR LEVER KNOB (PLASTIC) (BLACK)	X	X	X	X	
10	446398-452	PATTERN SELECTOR LEVER KNOB (PLASTIC) (GRAY)	X	X	X	X	
11	353322	PATTERN SELECTOR CAM SLIDE			X		
11	353323	PATTERN SELECTOR CAM SLIDE				X	
11	446406	PATTERN SELECTOR CAM SLIDE	X				X
12	113455-001	PATTERN SELECTOR MOUNTING PLATE SCREW	X	X	X	X	
13	446405	PATTERN SELECTOR MOUNTING PLATE COMPLETE	X	X	X	X	
14	408030	PATTERN SELECTOR LEVER RETAINING RING	X	X	X	X	
15	54591-451	DISC FOLLOWER STUD NUT	X	X	X	X	
16	313190-451	PATTERN SELECTOR DRIVE STUD WASHER	X	X	X	X	
17	446410	DISC FOLLOWER DISENGAGING LEVER PLATE COMPLETE	X	X	X	X	

CAM STACK

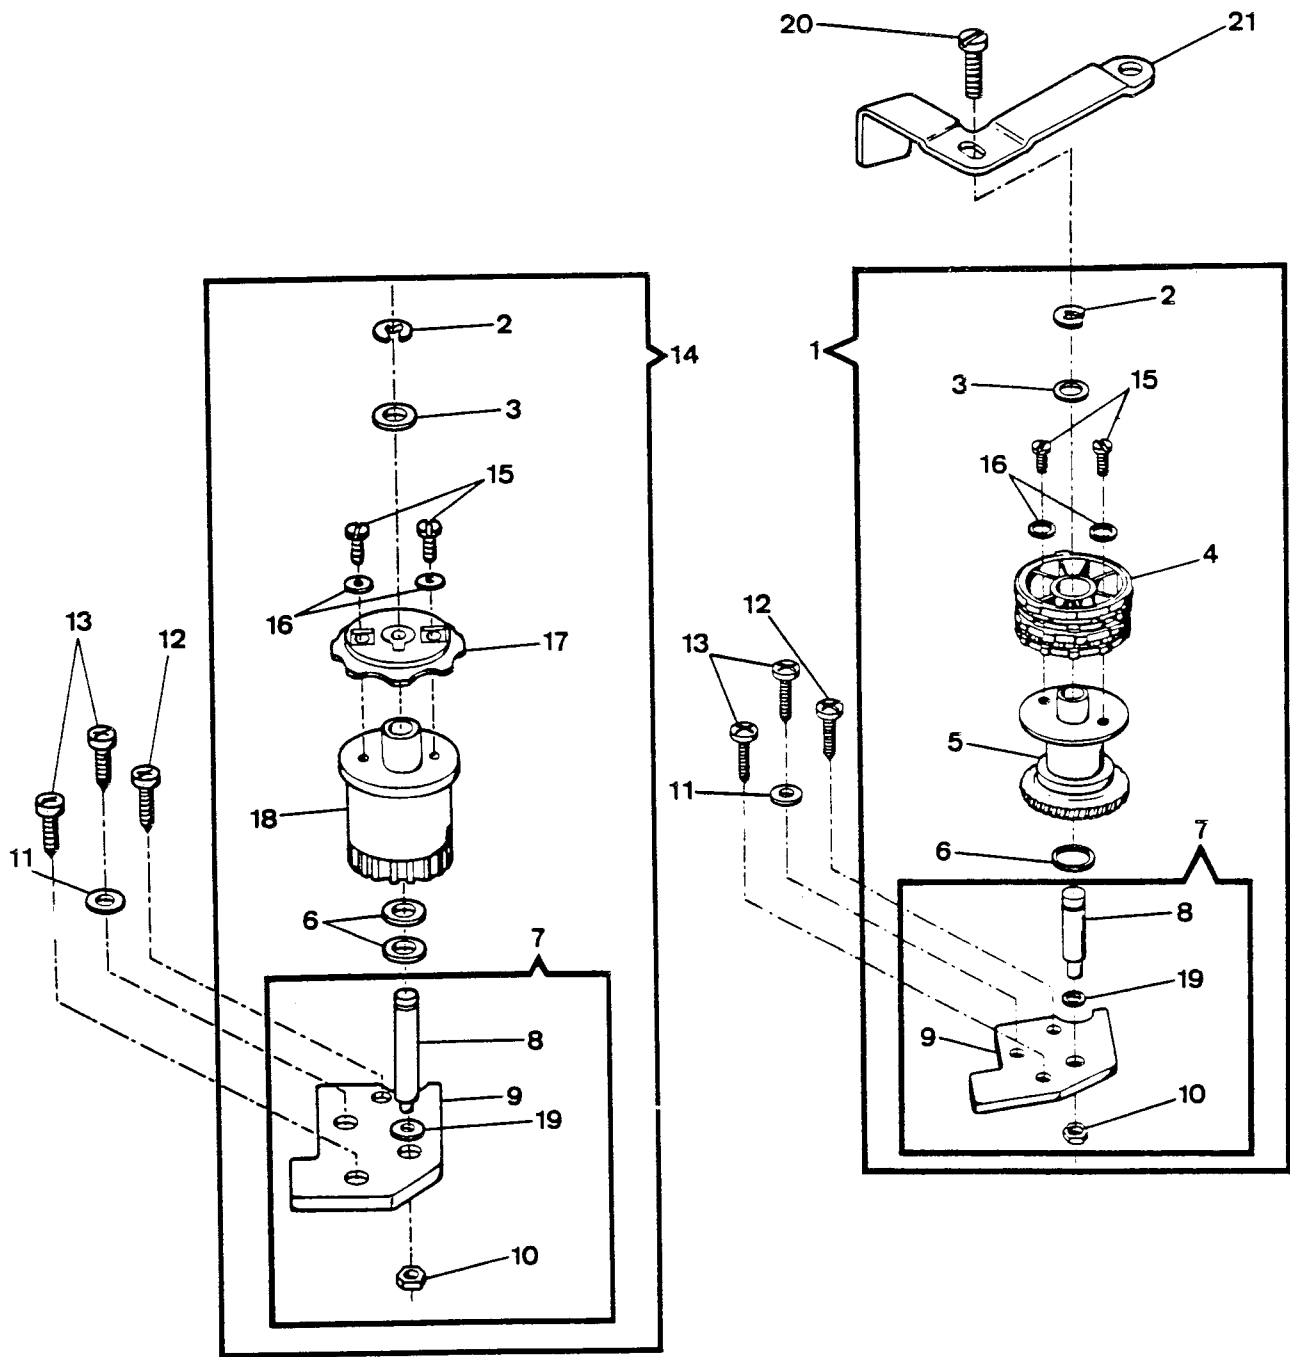

			PART LIST				
			CAM STACK				
			6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	356288-933	DISC DRIVING GEAR COMPLETE			X	X	X
01	356288-932	DISC DRIVING GEAR COMPLETE		X			
02	444921	DISC DRIVING GEAR RETAINING RING	X	X	X	X	X
03	444923-453	DISC DRIVING GEAR SHAFT FRICTION WASHER	X	X	X	X	X
04	353287	DISC STACK (PLASTIC)		X	X	X	X
05	445754	DISC DRIVING GEAR ASSEMBLY		X	X	X	X
06	356256-001	DISC DRIVING GEAR SHAFT SPACER	X	X	X	X	X
06	356256-002	DISC DRIVING GEAR SHAFT SPACER	X	X	X	X	X
06	444923-451	DISC DRIVING GEAR SHAFT SPACER	X	X	X	X	X
07	446420	DISC DRIVING GEAR SHAFT MOUNTING PLATE ASSEMBLY	X	X			
07	446420-001	DISC DRIVING GEAR SHAFT MOUNTING PLATE ASSEMBLY			X	X	X
08	446418	DISC DRIVING GEAR SHAFT	X	X			
08	446418-001	DISC DRIVING GEAR SHAFT			X	X	X
09	353575	DISC DRIVING GEAR SHAFT MOUNTING PLATE	X	X	X	X	X
10	53648-451	DISC DRIVING GEAR SHAFT NUT	X	X	X	X	X
11	353375-451	DISC DRIVING GEAR SHAFT MOUNTING PLATE SCREW WASHER	X	X	X	X	X
12	113455-001	DISC DRIVING GEAR SHAFT MOUNTING PLATE SCREW	X	X	X	X	X
13	113435-451	DISC DRIVING GEAR SHAFT MOUNTING PLATE SCREW	X	X	X	X	X
14	446421-931	DISC DRIVING GEAR COMPLETE	X				
15	113375-451	DISC STACK POSITIONING SCREW	X				
15	141920-452	DISC STACK POSITIONING SCREW		X	X	X	X
16	179957-451	DISC STACK POSITIONING SCREW WASHER	X				
16	446138	DISC STACK POSITIONING SCREW WASHER		X	X	X	X
17	445762	DISC STACK (PLASTIC)	X				
18	179958	DISC DRIVING GEAR	X				
19	353488	DISC DRIVING GEAR SHAFT WASHER	X	X	X	X	X
20	354654-451	DISC DRIVING GEAR (COMPLETE) SUPPORT BRACKET MOUNTING SCREW				X	X
21	353440-900	DISC DRIVING GEAR (COMPLETE)				X	X

FEED REGULATOR CAM

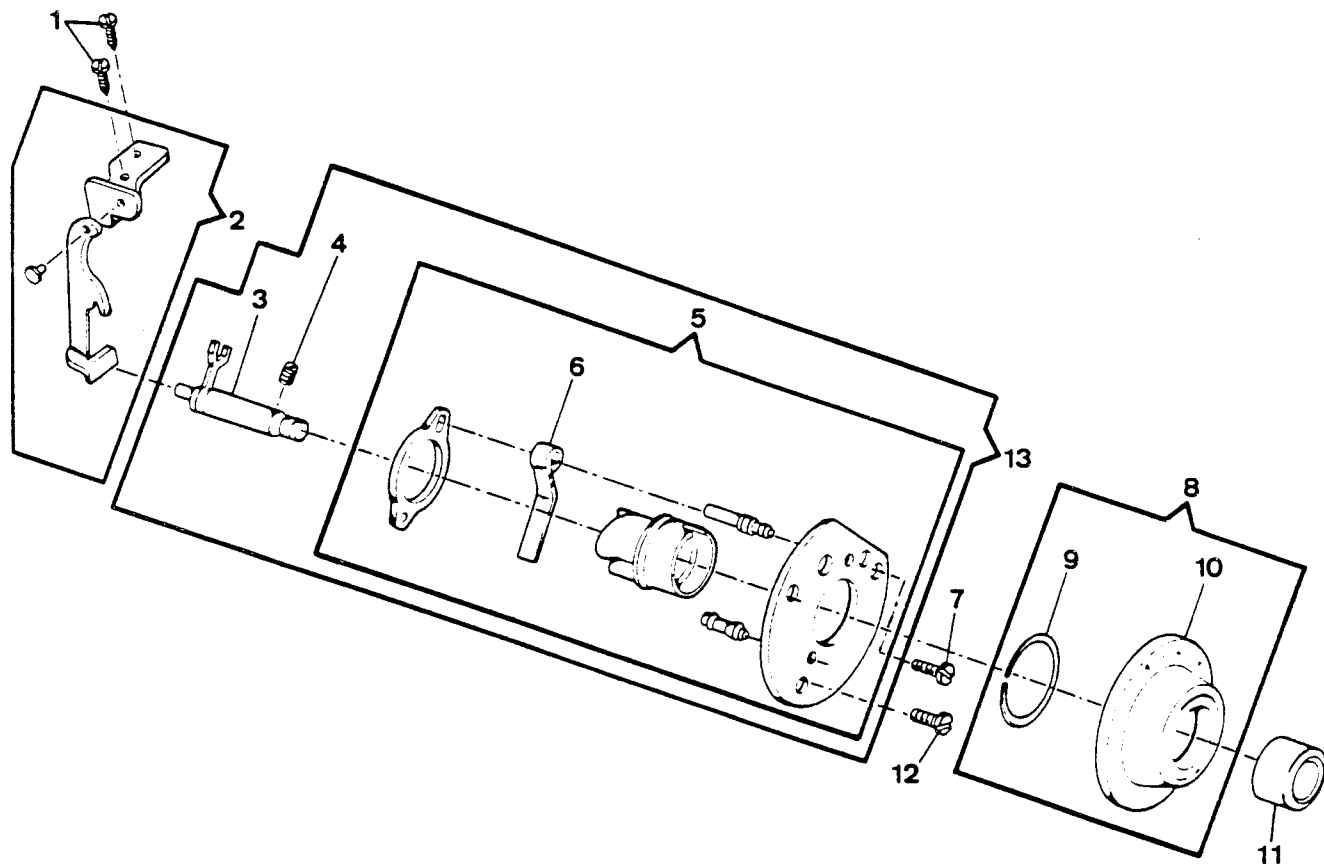


PART LIST
FEED REGULATOR CAM

6 6 6 6 6
2 2 2 2 2
1 1 1 1 1
1 2 4 5 7

REF.	PART NBR	DESCRIPTION					
01	113455-001	FEED REGULATOR CONTROL ARM MOUNTING BRACKET SCREW	X				
02	353304	FEED REGULATOR CONTROL ARM ASSEMBLY	X				
03	353472	FEED REGULATOR CAM FOLLOWER	X				
04	37970	FEED REGULATOR CAM FOLLOWER STUD	X				
05	445652	FEED REGULATOR CAM	X				
06	44420	FEED REGULATOR CAM FRICTION SPRING	X				
07	531806-451	FEED REGULATOR MOUNTING PLATE SCREW (RIGHT)	X				
08	446428-451	FEED REGULATOR CONTROL DIAL ASSEMBLY	X				
08	446428-453	FEED REGULATOR CONTROL DIAL ASSEMBLY (SPRINT DX2)	X				
09	445461	FEED REGULATOR CONTROL DIAL RETAINING RING	X				
10	446427-451	FEED REGULATOR CONTROL DIAL	X				
10	446427-453	FEED REGULATOR CONTROL DIAL (SPRINT DX2)	X				
11	179904-454	FEED REGULATOR POSITIONING PIN KNOB	X				
12	531807-451	FEED REGULATOR MOUNTING PLATE SCREW (LEFT)	X				
13	353487	FEED REGULATOR CAM COMPLETE	X				

BUTTONHOLER & FEED REGULATOR CAM

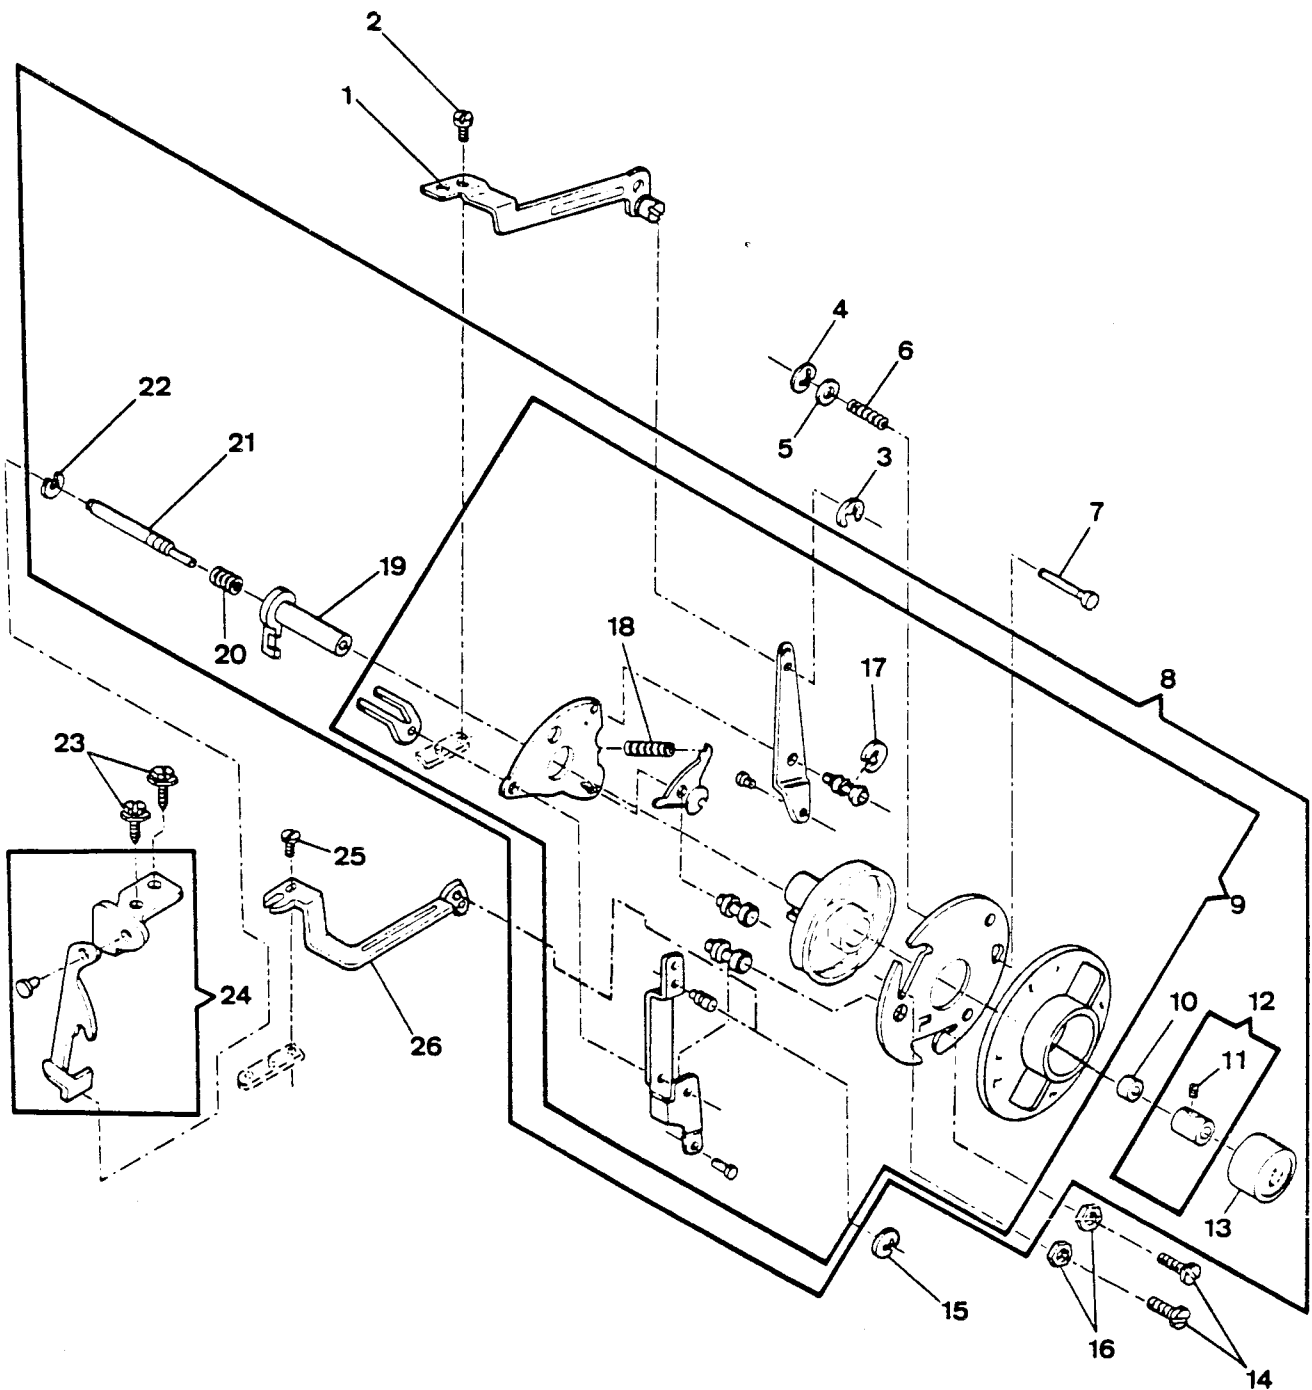

PART LIST
BUTTONHOLER & FEED REGULATOR CAM


6 6 6 6 6
2 2 2 2 2
1 1 1 1 1
1 2 4 5 7

REF.	PART NBR	DESCRIPTION					
01	356233	BUTTONHOLER NEEDLE POSITION CAM FOLLOWER LEVER LINK (RIGHT)					X
02	141913-451	BUTTONHOLER NEEDLE POSITION CAM FOLLOWER LEVER LINK (LEFT & RIGHT) SCREW					X
03	445486	BUTTONHOLER NEEDLE POSITION CAM FOLLOWER LEVER LINK (RIGHT) RETAINING RING					X
04	408030	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD RETAINING RING					X
05	549426-451	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD SPRING WASHER					X
06	179949	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD SPRING					X
07	356230	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD					X
08	353517-451	BUTTONHOLER & FEED REGULATOR CAM COMPLETE					X
08	353517-45Y	BUTTONHOLER & FEED REGULATOR CAM COMPLETE (SPORT)					X
09	353516-451	BUTTONHOLER & FEED REGULATOR CAM ASSEMBLY					X
09	353516-45Y	BUTTONHOLER & FEED REGULATOR CAM ASSEMBLY (SPORT)					X
10	445945	REVERSE FEED CAM FOLLOWER					X
11	113433-451	FEED REGULATOR POSITIONING PIN KNOB ADAPTOR SET SCREW					X
12	353445	FEED REGULATOR POSITIONING PIN KNOB ADAPTOR					X
13	179903-451	FEED REGULATOR POSITIONING PIN KNOB					X
13	179903-453	FEED REGULATOR POSITIONING PIN KNOB (SPORT)					X
13	SK-3935-006	FEED REGULATOR POSIT. PIN KNOB (LADY STAR)					X
13	SK-3935-000	FEED REGULATOR POSITIONING PIN KNOB (JAPAN)					X
14	113513-451	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE SCREW					X
15	445486	BUTTONHOLER BIGHT CONTROL CAM FOLLOWER LEVER LINK (RIGHT) RETAINING RING					X
16	353588-451	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE SCREW WASHER					X
17	353215	BUTTONHOLER NEEDLE POSITION CAM FOLLOWER LEVER RETAINING RING					X
18	353495	BUTTONHOLER & FEED REGULATOR CONTROL DIAL PAWL SPRING					X
19	353305	FEED REGULATOR POSITIONING PIN CARRIER					X
20	44612	FEED REGULATOR POSITIONING PIN FRICTION SPRING					X
21	353446	FEED REGULATOR POSITIONING PIN					X
22	445721	FEED REGULATOR POSITIONING PIN FRICTION SPRING RETAINING RING					X
23	113455-001	FEED REGULATOR CONTROL ARM MOUNTING BRACKET SCREW					X
24	353304	FEED REGULATOR CONTROL ARM ASSEMBLY					X
25	141913-451	BUTTONHOLER BIGHT CONTROL ARM FOLLOWER LEVER LINK (LEFT & RIGHT) SCREW					X
26	353551	BUTTONHOLER BIGHT CONTROL ARM FOLLOWER LEVER LINK (RIGHT)					X

6210 SERIES PARTS LIST
P/N 356493-001

REV. No. _____

BUTTONHOLER & FEED REGULATOR CAM (CONT.)

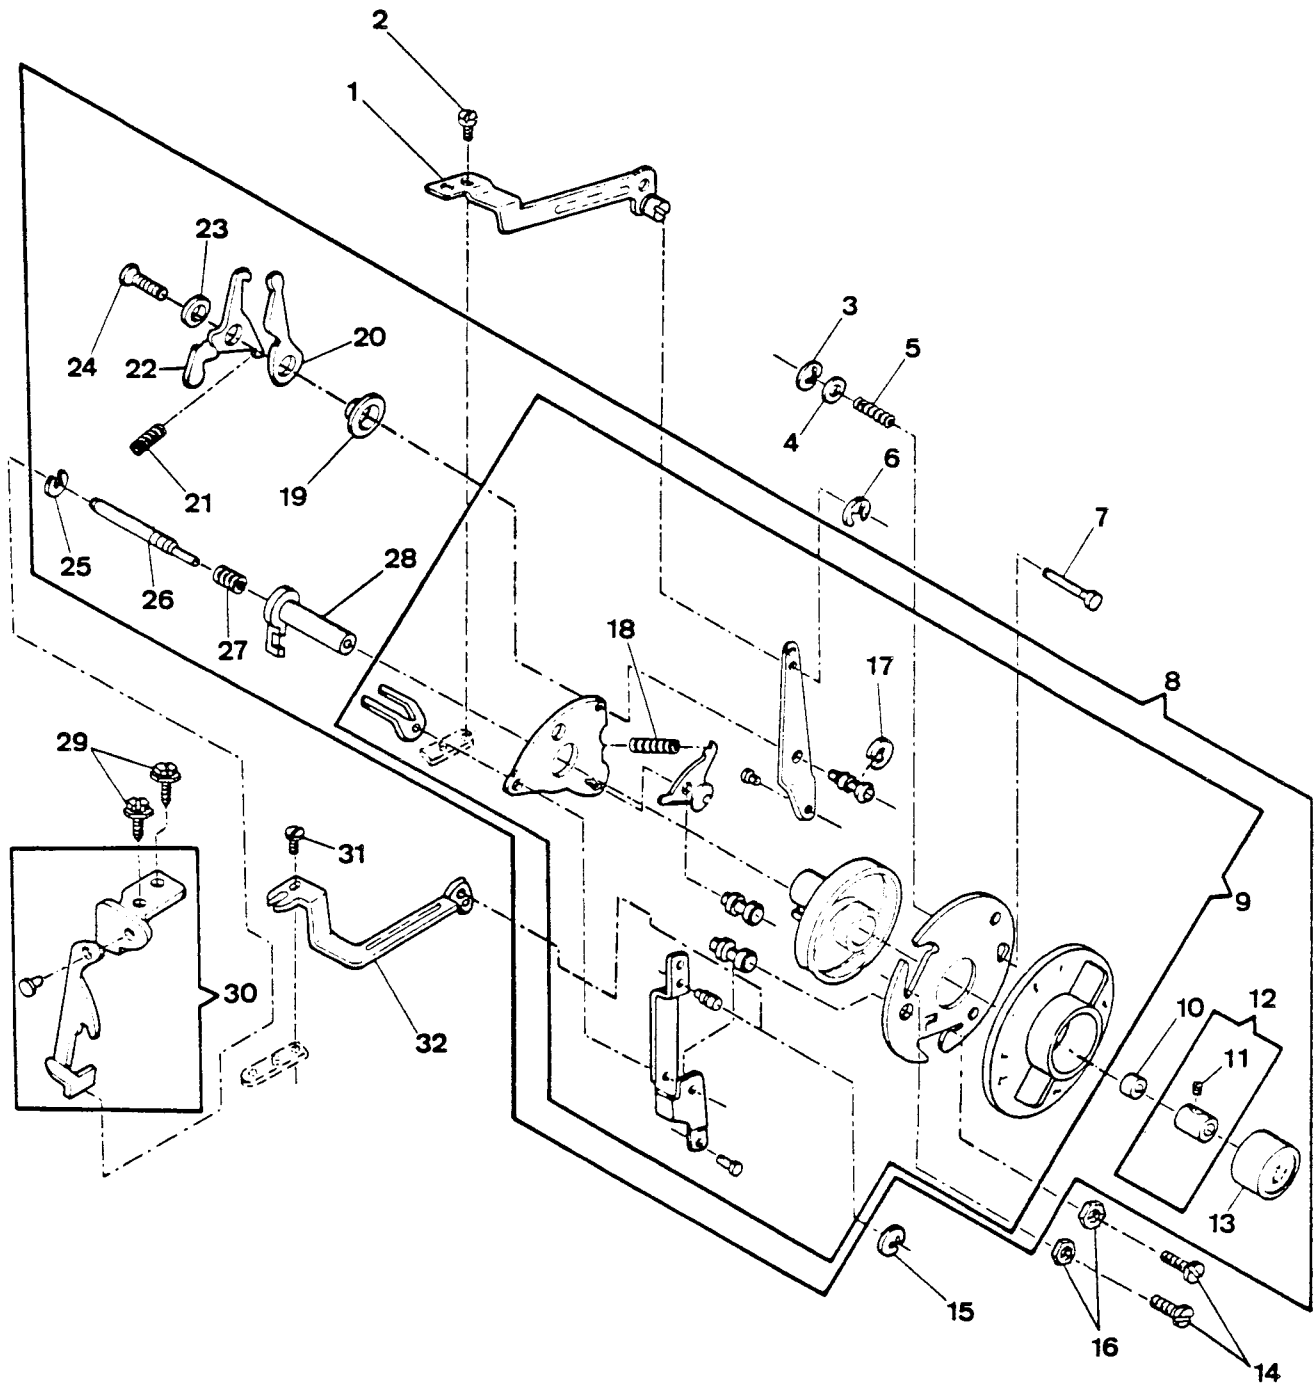


PART LIST
BUTTONHOLER & FEED REGULATOR CAM (CONT.)

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	356233	BUTTONHOLER NEEDLE POSITION CAM FOLLOWER LEVER LINK (RIGHT)				X	X X
02	141913-451	BUTTONHOLER NEEDLE POSITION CAM FOLLOWER LEVER LINK (LEFT & RIGHT) SCREW				X	X X
03	408030	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD RETAINING RING				X	X X
04	549426-451	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD SPRING WASHER				X	X X
05	179949	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD SPRING				X	X X
06	445486	BUTTONHOLER BIGHT CONTROL CAM FOLLOWER LEVER LINK (RIGHT) RETAINING RING				X	X X
07	356230	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE STUD				X	X X
08	353318-451	BUTTONHOLER & FEED REGULATOR CAM COMPLETE				X	X X
09	353317-451	BUTTONHOLER & FEED REGULATOR CAM ASSEMBLY				X	X X
10	445945	REVERSE FEED CAM FOLLOWER				X	X X
11	113433-451	FEED REGUL.POSIT.PIN KNOB ADAPTOR SET SCREW				X	X X
12	353445	FEED REGULATOR POSITIONING PIN KNOB ADAPTOR				X	X X
13	179903-451	FEED REGULATOR POSITIONING PIN KNOB				X	X X
14	113513-451	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE SCREW				X	X X
15	445486	BUTTONHOLER BIGHT CONTROL CAM FOLLOWER LEVER LINK (RIGHT) RETAINING RING				X	X X
16	353588-451	BUTTONHOLER & FEED REGULATOR MECHANISM MOUNTING PLATE SCREW WASHER				X	X X
17	353215	BUTTONHOLER NEEDLE POSITION CAM FOLLOWER LEVER RETAINING RING				X	X X
18	353495	BUTTONHOLER & FD.REG.CONTROL DIAL PAWL SPRING				X	X X
19	353319	CAM CONTROL FEED ENGAGING CAM FOLLOWER & LEVER BUSHING				X	X X
20	353321	CAM CONTROL FEED ENGAGING CAM FOLLOWER LEVER				X	X X
21	353495	CAM CONTROL FEED ENGAGING CAM FOLLOWER & LEVER SPRING				X	X X
22	353320	CAM CONTROL FEED ENGAGING CAM FOLLOWER				X	X X
23	445539	CAM CONTROL FEED ENGAGING CAM FOLLOWER & LEVER WASHER				X	X X
24	113372-451	CAM CONTROL FEED ENGAGING CAM FOLLOWER & LEVER MOUNTING SCREW				X	X X
25	445721	FEED REGULATOR POSITIONING PIN FRICTION SPRING RETAINING RING				X	X X
26	353446	FEED REGULATOR POSITIONING PIN				X	X X
27	44612	FEED REGULATOR POSITIONING PIN FRICTION SPRING				X	X X
28	353305	FEED REGULATOR POSITIONING PIN CARRIER				X	X X
29	113455-001	FEED REGULATOR CONTROL ARM MOUNTING BRACKET				X	X X
30	353304	FEED REGULATOR CONTROL ARM ASSEMBLY				X	X X
31	141913-451	BUTTONHOLER BIGHT CONTROL CAM FOLLOWER LEVER LINK (LEFT & RIGHT) SCREW				X	X X
32	353551	BUTTONHOLER BIGHT CONTROL CAM FOLLOWER LEVER LINK (RIGHT)				X	X X

6210 SERIES PARTS LIST
P/N 356493-001

REV. No. _____


CAM CONTROLLED FEED

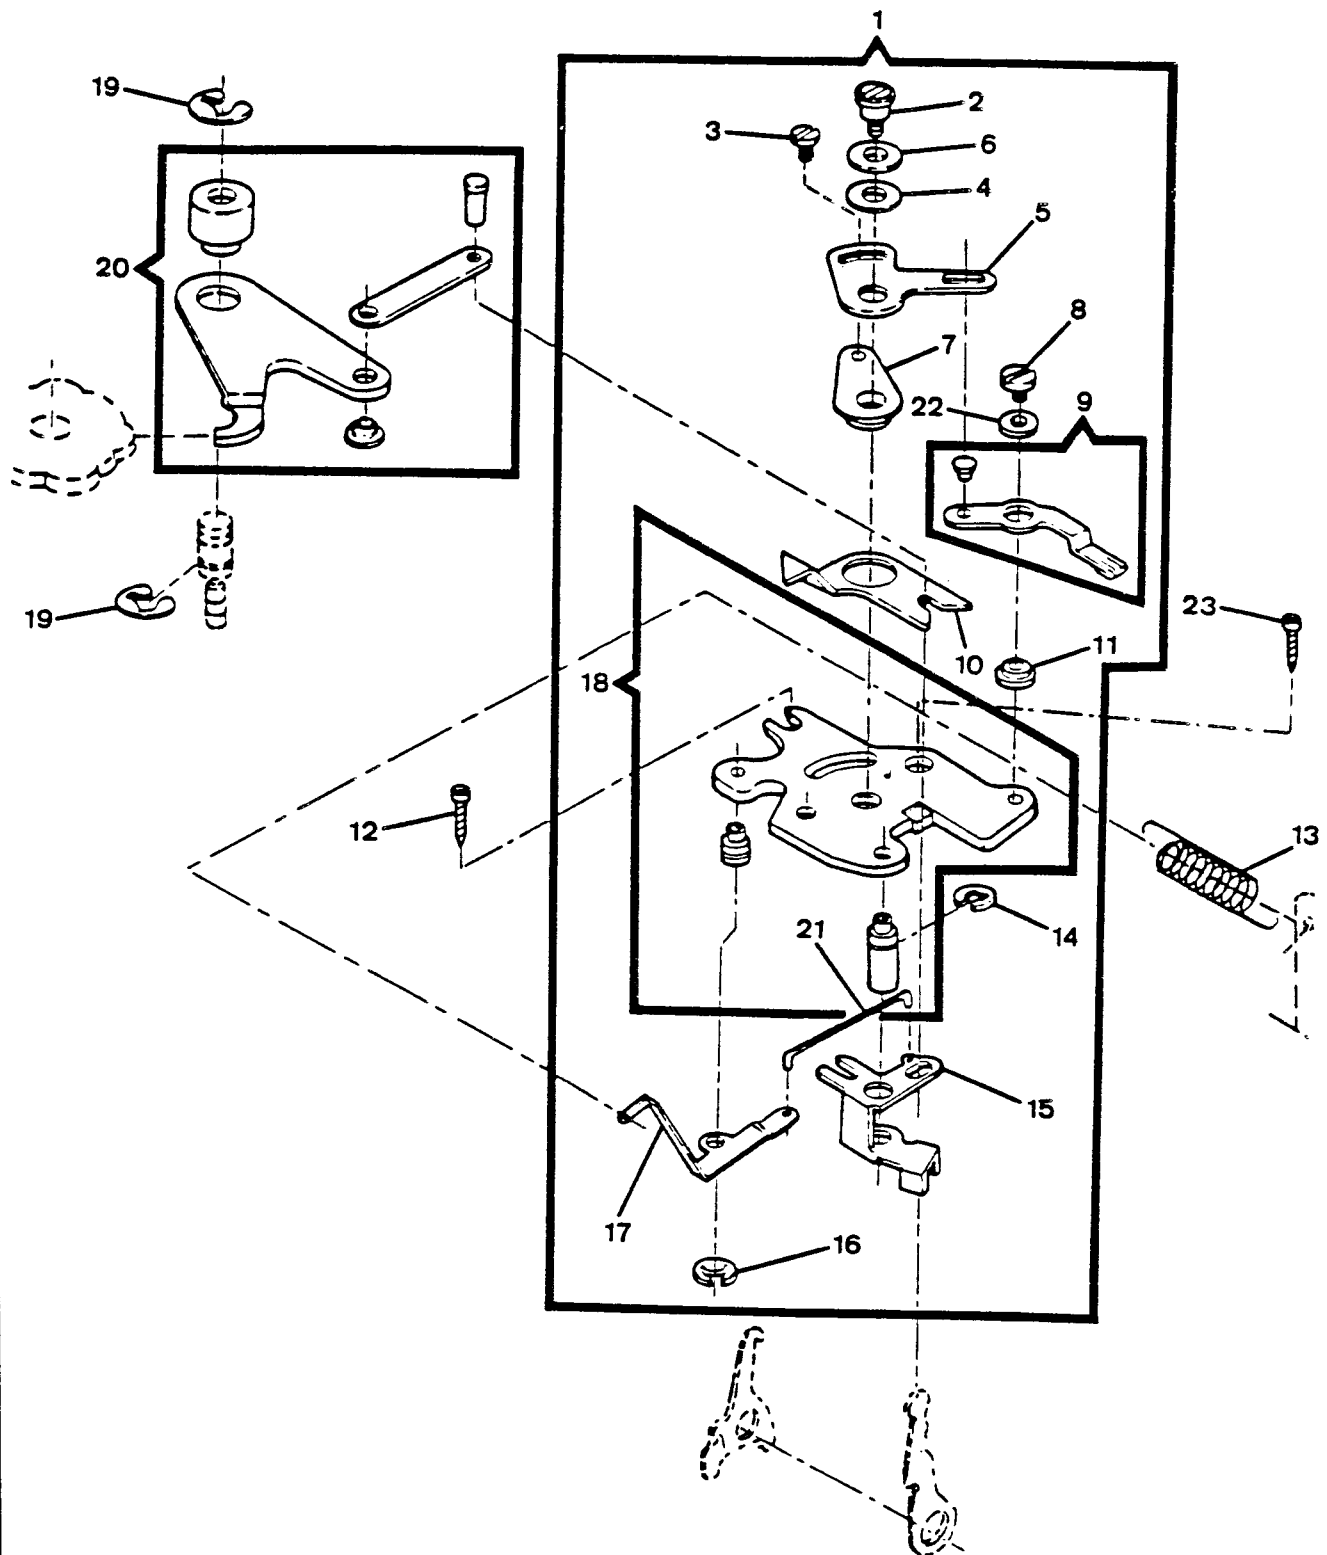



PART LIST
CAM CONTROLLED FEED

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	531749	CAM CONTROLLED FEED MOUNTING BRACKET COMPLETE				X	X X
02	113423-451	CAM CONTROLLED FEED BALANCE ADJUSTING SPRING HINGE SCREW				X	X X
03	141913-451	CAM CONTROLLED FEED BALANCE ADJUSTING SCREW				X	X X
04	353492	CAM CONTROLLED FEED BALANCE ADJUSTING SPRING WASHER				X	X X
05	531754	CAM CONTROLLED FEED BALANCE ADJUSTING SPRING				X	X X
06	543531	CAM CONTROLLED FEED BALANCE ADJUSTING SCREW WASHER				X	X X
07	353331	CAM CONTROLLED FEED DRIVING ARM ECCENTRIC				X	X X
08	113424-451	CAM CONTROLLED FEED BALANCE ADJUSTING LEVER HINGE SCREW				X	X X
09	531752-452	CAM CONTROLLED FEED BALANCE ADJUSTING LEVER ASSEMBLY				X	X X
10	353330	CAM CONTROLLED FEED DRIVING ARM				X	X X
11	353334	CAM CONTROLLED FEED BALANCE ADJUSTING LEVER MOUNTING BUSHING				X	X X
12	113455-001	CAM CONTROLLED FEED MOUNTING BRACKET SCREW				X	X X
13	356605	FEED REGULATOR CONTROL ARM BIAS LINK SPRING				X	X X
14	445721	CAM CONTROLLED FEED ENGAGING CRANK RETAINING RING				X	X X
15	353329	CAM CONTROLLED FEED ENGAGING CRANK				X	X X
16	445486	CAM CONTROLLED FEED FOLLOWER & LINK RETAINING RING				X	X X
17	356166	CAM CONTROLLED FEED ENGAGING CRANK LEVER				X	X X
18	531750	CAM CONTROLLED FEED MOUNTING BRACKET ASSEMBLY				X	X X
19	445486	CAM CONTROLLED FEED FOLLOWER & LINK RETAINING RING				X	X X
20	353335	CAM CONTROLLED FEED FOLLOWER & LINK ASSEMBLY				X	X X
21	353473	CAM CONTROLLED FEED ENGAGING CRANK LINK				X	X X
22	422523	CAM CONTROLLED FEED BALANCE ADJUSTING LEVER WASHER				X	X X
23	113455-003	CAM CONTROLLED FEED MOUNTING BRACKET SCREW (RIGHT)				X	X X

FEED SYSTEM

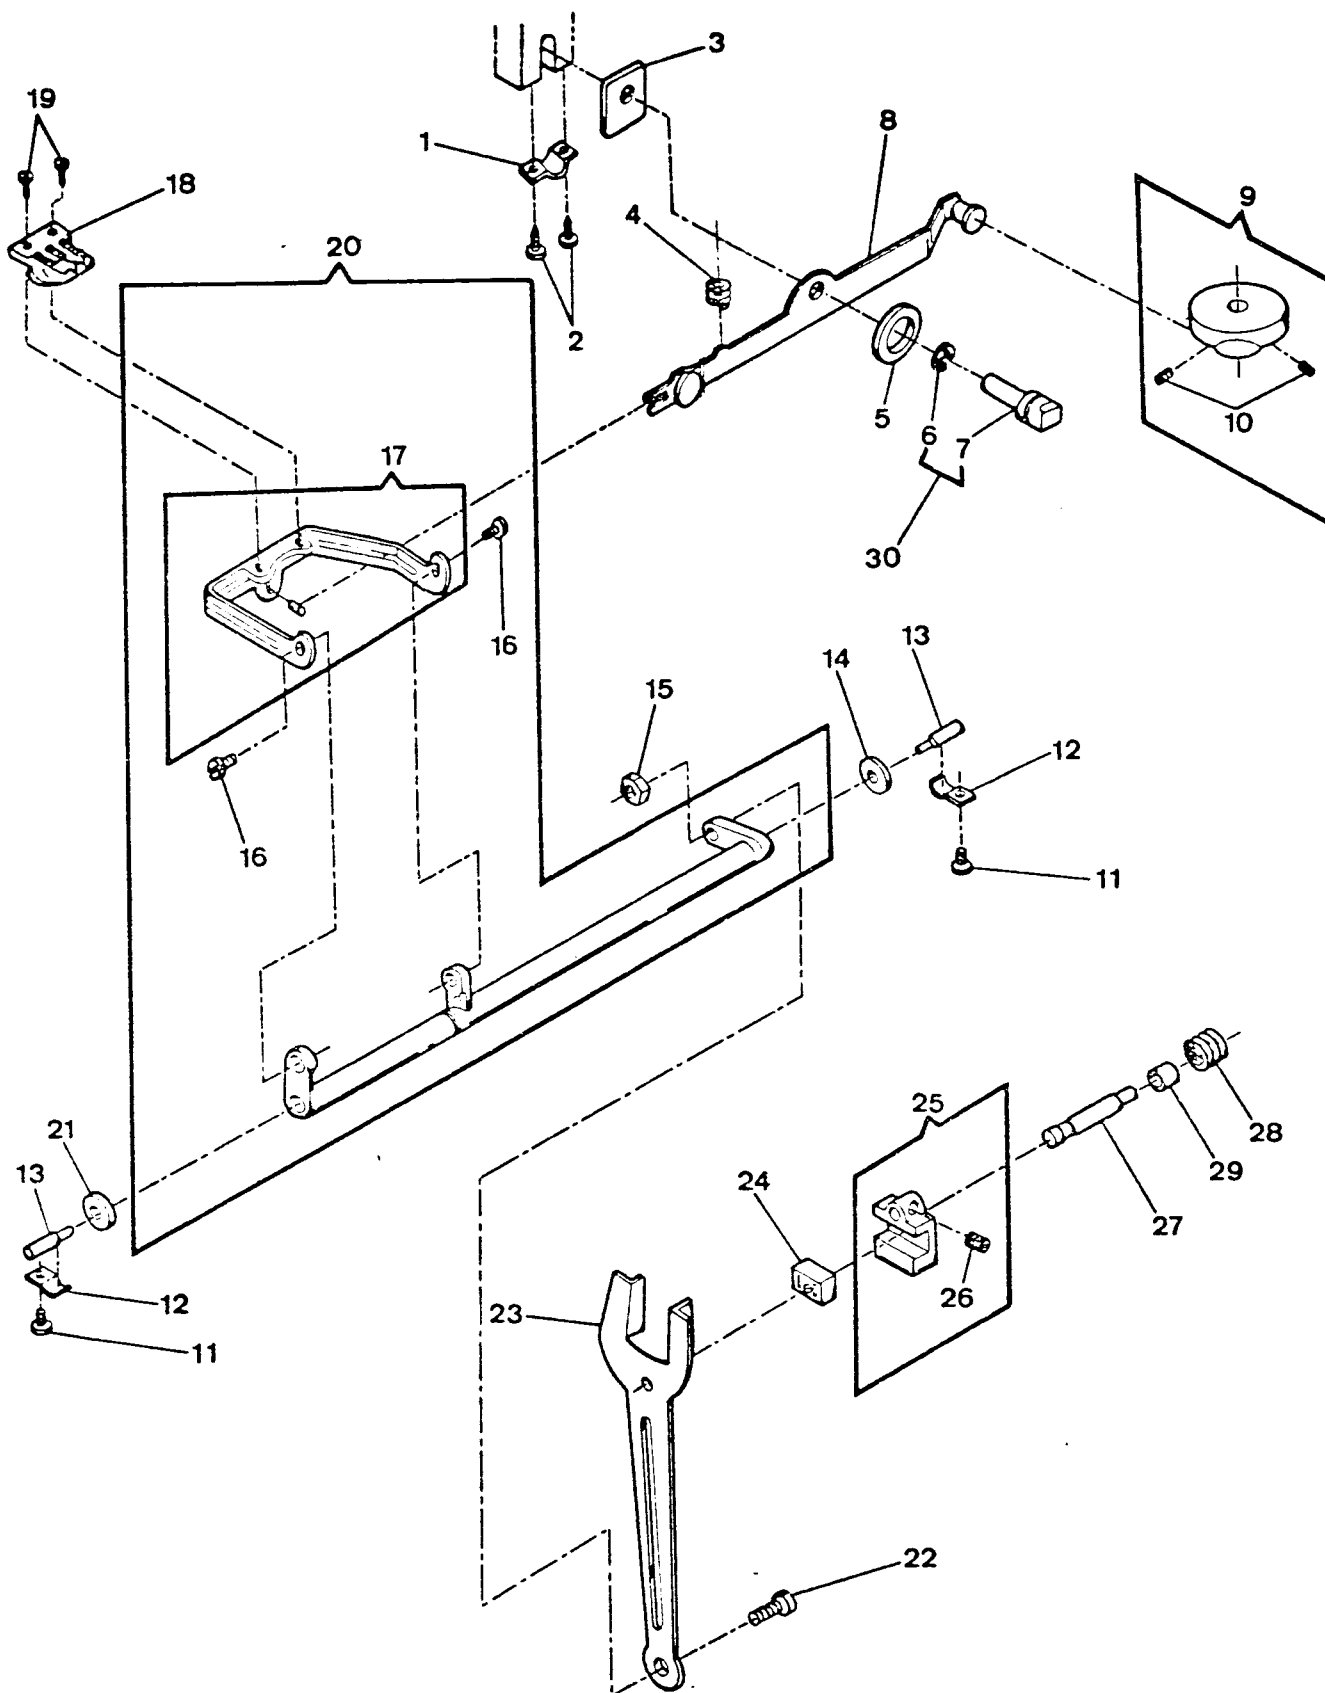


PART LIST FEED SYSTEM			6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	446485	FEED LIFTING LEVER HINGE STUD (ECCENTRIC) CLAMP	X	X	X	X	X
02	113455-001	FEED LIFTING LEVER HINGE STUD (ECCENTRIC) CLAMP	X	X	X	X	X
03	179955	FEED LIFTING LEVER HINGE STUD (ECCENTRIC) SPACER	X	X	X	X	X
04	446249	FEED LIFTING LEVER SPRING	X	X	X	X	X
05	353427	FEED LIFTING LEVER HINGE STUD (ECCENTRIC) SPACER	X	X	X	X	X
06	353428	FEED LIFTING LEVER HINGE STUD (ECCENTRIC) RETAINING PLATE	X	X	X	X	X
07	353448	FEED LIFTING LEVER HINGE STUD (ECCENTRIC)	X	X	X	X	X
08	356222	FEED LIFTING LEVER ASSEMBLY	X	X	X	X	X
09	446228	FEED LIFTING CAM	X	X	X	X	X
10	544118	FEED LIFTING CAM SCREW	X	X	X	X	X
11	113455-001	FEED ROCK SHAFT CENTER SUPPORTING BRACKET SCREW	X	X	X	X	X
12	446484	FEED ROCK SHAFT CENTER CLAMP (LEFT & RIGHT)	X	X	X	X	X
13	446487-001	FEED ROCK SHAFT CENTER	X	X	X	X	X
14	353397	FEED ROCK SHAFT CENTER (RIGHT) NOISE DAMPENING WASHER	X	X	X	X	X
15	53648-451	FEED FORKED CONNECTING SCREW STUD NUT	X	X	X	X	X
16	354939-451	FEED BAR HINGE SCREW	X	X	X	X	X
17	446205	FEED BAR ASSEMBLY	X	X	X	X	X
18	179891	FEED DOG	X	X	X	X	X
19	355235-451	FEED DOG SCREW	X	X	X	X	X
20	446216	FEED ROCK SHAFT COMPLETE	X	X	X	X	X
21	353397	FEED ROCK SHAFT CENTER (LEFT) NOISE DAMPENING WASHER	X	X	X	X	X
22	531623-451	FEED FORKED CONNECTING HINGE SCREW (ECCENTRIC)	X	X	X	X	X
23	531926	FEED FORKED CONNECTING	X	X	X	X	X
24	44437	FEED FORKED CONNECTING SLIDE BLOCK	X	X	X	X	X
25	446244	FEED REGULATOR ASSEMBLY	X	X	X	X	X
26	141925-833	FEED REGULATOR SET SCREW	X	X	X	X	X
27	446483	FEED REGULATOR HINGE STUD	X	X	X	X	X
28	179890	FEED REGULATOR RETURN SPRING	X	X	X	X	X
29	445768	FEED REGULATOR RETURN SPRING BUSHING (PLASTIC)	X	X	X	X	X
30	353479	FEED LIFTING LEVER HINGE STUD (ECCENTRIC) WITH RETAINING RING	X	X	X	X	X

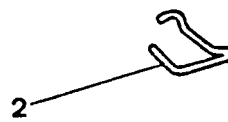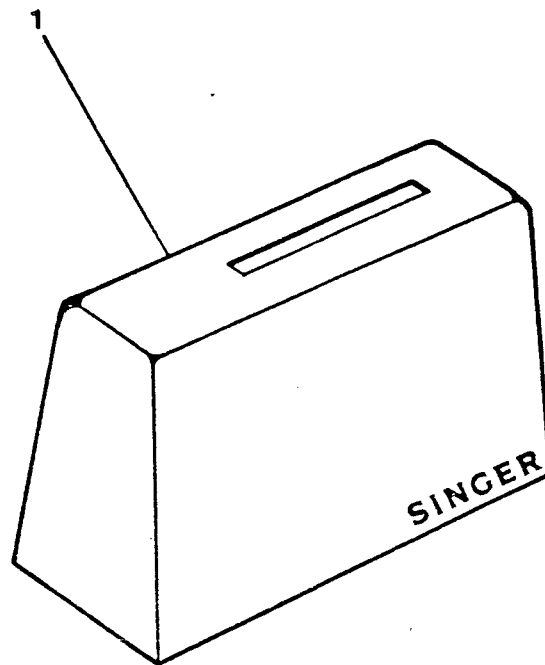

		PART LIST OPTIONS	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	353491-451	SOFT VYNIL COVER (TUBULAR BED) (FOR METAL HANDLE)	X	X	X	X	X
01	531928-451	SOFT VYNIL COVER (TUBULAR BED) (FOR PLASTIC HANDLE)	X	X	X	X	X
02	116863	FINGER GUARD (OPTIONAL)	X	X	X	X	X

ELECTRICAL EQUIPMENT

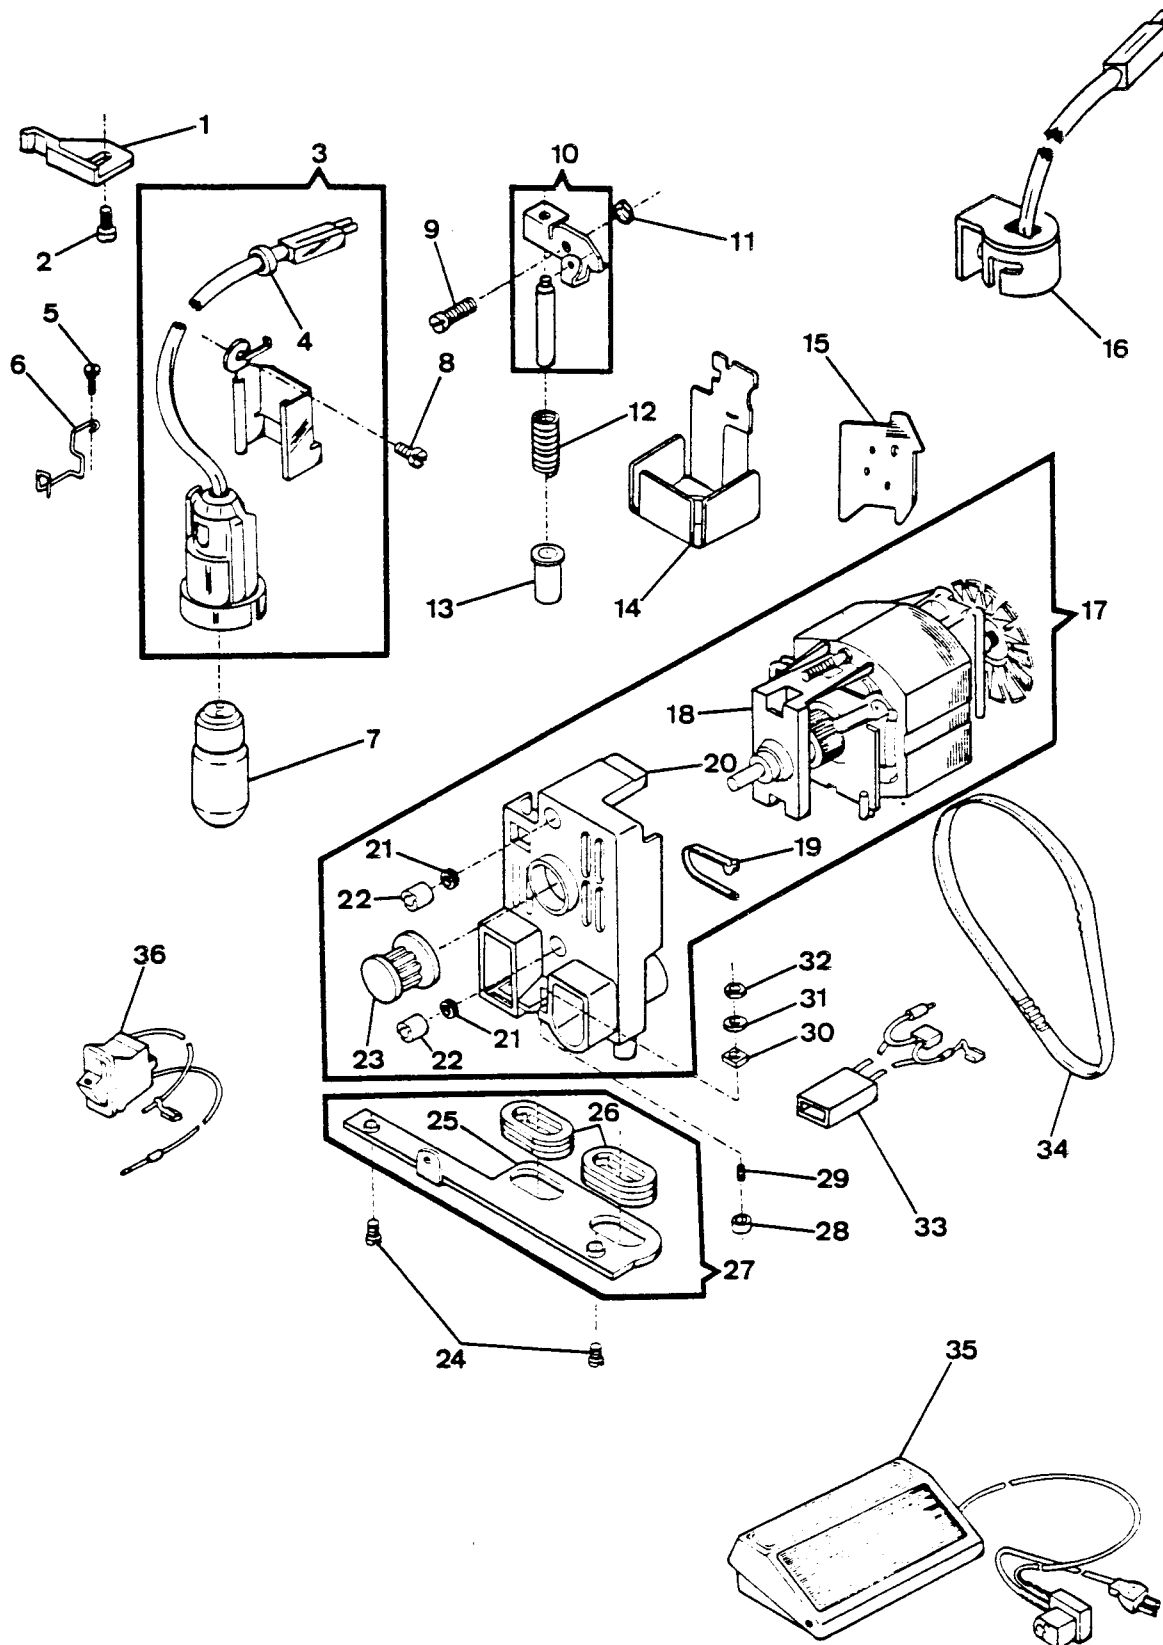

PART LIST
ELECTRICAL EQUIPMENT

REF.	PART NBR	DESCRIPTION	6	6	6	6	6
			2	2	2	2	2
			1	1	1	1	1
			1	2	4	5	7
01	353411	LIGHT LEAD RETAINING CLIP	X	X	X	X	X
02	113504-451	LIGHT LEAD RETAINING CLIP MOUNTING SCREW	X	X	X	X	X
03		REFER TO CHARTS ON FOLLOWING PAGES					
04	179908	LIGHT LEAD GROMMET	X	X	X	X	X
05	113455-001	LIGHT LEAD WIRE RETAINER MOUNTING SCREW	X	X	X	X	X
06	353247	LIGHT LEAD WIRE RETAINER	X	X	X	X	X
07	988076-001	LAMP (120V)	X	X	X	X	X
07	988076-003	LAMP (220V)	X	X	X	X	X
07	988076-005	LAMP (240V)	X	X	X	X	X
08	141913-451	LIGHT SOCKET MOUNTING SCREW	X	X	X	X	X
09	113372-451	MOTOR GUIDE PIN MOUNTING BRACKET SCREW	X	X	X	X	X
10	446470	MOTOR GUIDE PIN MOUNTING BRACKET ASSEMBLY	X	X	X	X	X
11	313470-452	MOTOR GUIDE PIN MOUNTING BRACKET SCREW NUT	X	X	X	X	X
12	446473	MOTOR BELT TENSION SPRING	X	X	X	X	X
13	446475	MOTOR GUIDE PIN BUSHING	X	X	X	X	X
14	605087-001	HEAT SHIELD (FOR EUROPE)	X	X	X	X	X
15	179901	LIGHT SHIELD (WITHOUT GRAPHICS)	X	X	X	X	X
15	179910-451	LIGHT SHIELD (WITH GRAPHICS)	X	X	X	X	X
16		REFER TO CHARTS ON FOLLOWING PAGES					
17		REFER TO CHARTS ON FOLLOWING PAGES					
18		REFER TO CHARTS ON FOLLOWING PAGES					
19	605600-P01	TYE RAP	X	X	X	X	X
20		REFER TO CHARTS ON FOLLOWING PAGES					
21	604018-003	MOTOR MODULE WASHER	X	X	X	X	X
22	603907-001	MOTOR MODULE NUT	X	X	X	X	X
23	988761-001	MOTOR PULLEY	X	X	X	X	X
24	113370-451	MOTOR MOUNTING PLATE SCREW	X	X	X	X	X
25	446476	MOTOR MOUNTING PLATE	X	X	X	X	X
26	353355	MOTOR MOUNTING PLATE GROMMET	X	X	X	X	X
27	446479	MOTOR MOUNTING PLATE ASSEMBLY	X	X	X	X	X
28	988887-001	MOTOR BELT SCREW CAP	X	X	X	X	X
29	113343-451	MOTOR BELT SCREW	X	X	X	X	X
30	179887	MOTOR BELT SCREW NUT	X	X	X	X	X
31	445539	MOTOR ADJUSTING SCREW LOCK NUT WASHER	X	X	X	X	X
32	353402-451	MOTOR ADJUSTING SCREW LOCK NUT	X	X	X	X	X
33	988764-001	LIGHT RECEPTACLE HARNESS (SURPRESSED)					
		COMPLETE	X	X	X	X	X
34	353518-001	MOTOR BELT	X	X	X	X	X
35		REFER TO CHARTS ON FOLLOWING PAGES					
36		REFER TO CHARTS ON FOLLOWING PAGES					

ELECTRICAL EQUIPMENT


REF.		U.S	CANADA	EUROPE	GREAT BRITAIN
		(120V)	(120V)	(220V)	(240V)
	1 SPEED UNSURPRESSED				
3	LIGHT COMP.	NP0032-001	NP0032-001		
16	LIGHT SOCKET (ALT.)	362001-003	362001-003		
17	MOTOR COMPLETE	988759-001	988759-001		
18	SERIES MOTOR MODULE	988752-001	988752-001		
20	COMMUTATOR END	988760-002	988760-002		
35	CONTROLLER	988274-090	988274-090		
35	CONTROLLER (ALT.)	979314-031	979314-031		
36	SWITCH	988763-001	988763-001		
	1 SPEED SURPRESSED				
3	LIGHT COMP.			NP0032-002	NP0032-002
16	LIGHT SOCKER (ALT.)				
17	MOTOR COMPLETE			988759-002	988759-002
18	SERIES MOTOR MODULE			988760-002	988760-002
20	COMMUTATOR END			988274-051	988274-051
35	CONTROLLER			979314-026	979314-026
35	CONTROLLER (ALT.)			988763-001	988763-001
36	SWITCH				

ELECTRICAL EQUIPMENT

		ASIA & AFRICA & SOUTH AMERICA	ASIA & AFRICA & SOUTH AMERICA	AFRICA & SOUTH AMERICA	AMEDO
REF.	1 SPEED UNSUPRESSED -----	FLAT BLADE (120V) -----	FLAT BLADE (220V) -----	ROUND PIN (120V) -----	ROUND PIN (120V). -----
3	LIGHT COMP.	NP0032-004	NP0032-004	NP0032-004	NP0032-004
16	LIGHT SOCKET (ALT.)	362001-003	362001-003	362001-003	362001-003
17	MOTOR COMPLETE	988759-XXA	988759-004	988759-XXA	988759-P03
18	SERIES MOTOR MODULE	988752-XXA	988752-004	988752-XXA	988752-P03
20	COMMUTATOR END	988760-002	988760-002	988760-002	988760-002
35	CONTROLLER	988274-100	988274-110	988274-097	988274-097
35	CONTROLLER (ALT.)	979314-023	979314-024	979314-021	979314-001
36	SWITCH	988763-001	988763-001	988763-001	988763-001
	1 SPEED SURPRESSED -----				
3	LIGHT COMP.				
16	LIGHT SOCKER (ALT.)				
17	MOTOR COMPLETE				
18	SERIES MOTOR MODULE				
20	COMMUTATOR END				
35	CONTROLLER				
35	CONTROLLER (ALT.)				
36	SWITCH - 2 SPEED				

ELECTRICAL EQUIPMENT


		AFRICA & SOUTH AMERICA	SOUTH AFRICA	AMEDO	AUSTRALIA
REF.	1 SPEED UNSUPRESSED	ROUND PIN (220V)	ROUND PIN (220V)	ROUND PIN (220V)	(240V)
3	LIGHT COMP.	NP0032-004	NP0032-005	NP0032-004	
16	LIGHT SOCKET (ALT.)	-----	-----	-----	
17	MOTOR COMPLETE	988759-004	988759-P02	988759-P04	
18	SERIES MOTOR MODULE	988752-004	988752-P02	988752-P04	
20	COMMUTATOR END	988760-002	988760-002	988760-002	
35	CONTROLLER	988274-098	-----	-----	
35	CONTROLLER (ALT.)	979314-022	979314-030	979314-022	
36	SWITCH	988763-001	988763-001	988763-001	
	1 SPEED SUPRESSED				
3	LIGHT COMP.				NP0032-003
16	LIGHT SOCKER (ALT.)				-----
17	MOTOR COMPLETE				988759-P01
18	SERIES MOTOR MODULE				988752-P01
20	COMMUTATOR END				988760-002
35	CONTROLLER				988274-057
35	CONTROLLER (ALT.)				979314-028
36	SWITCH				988763-001

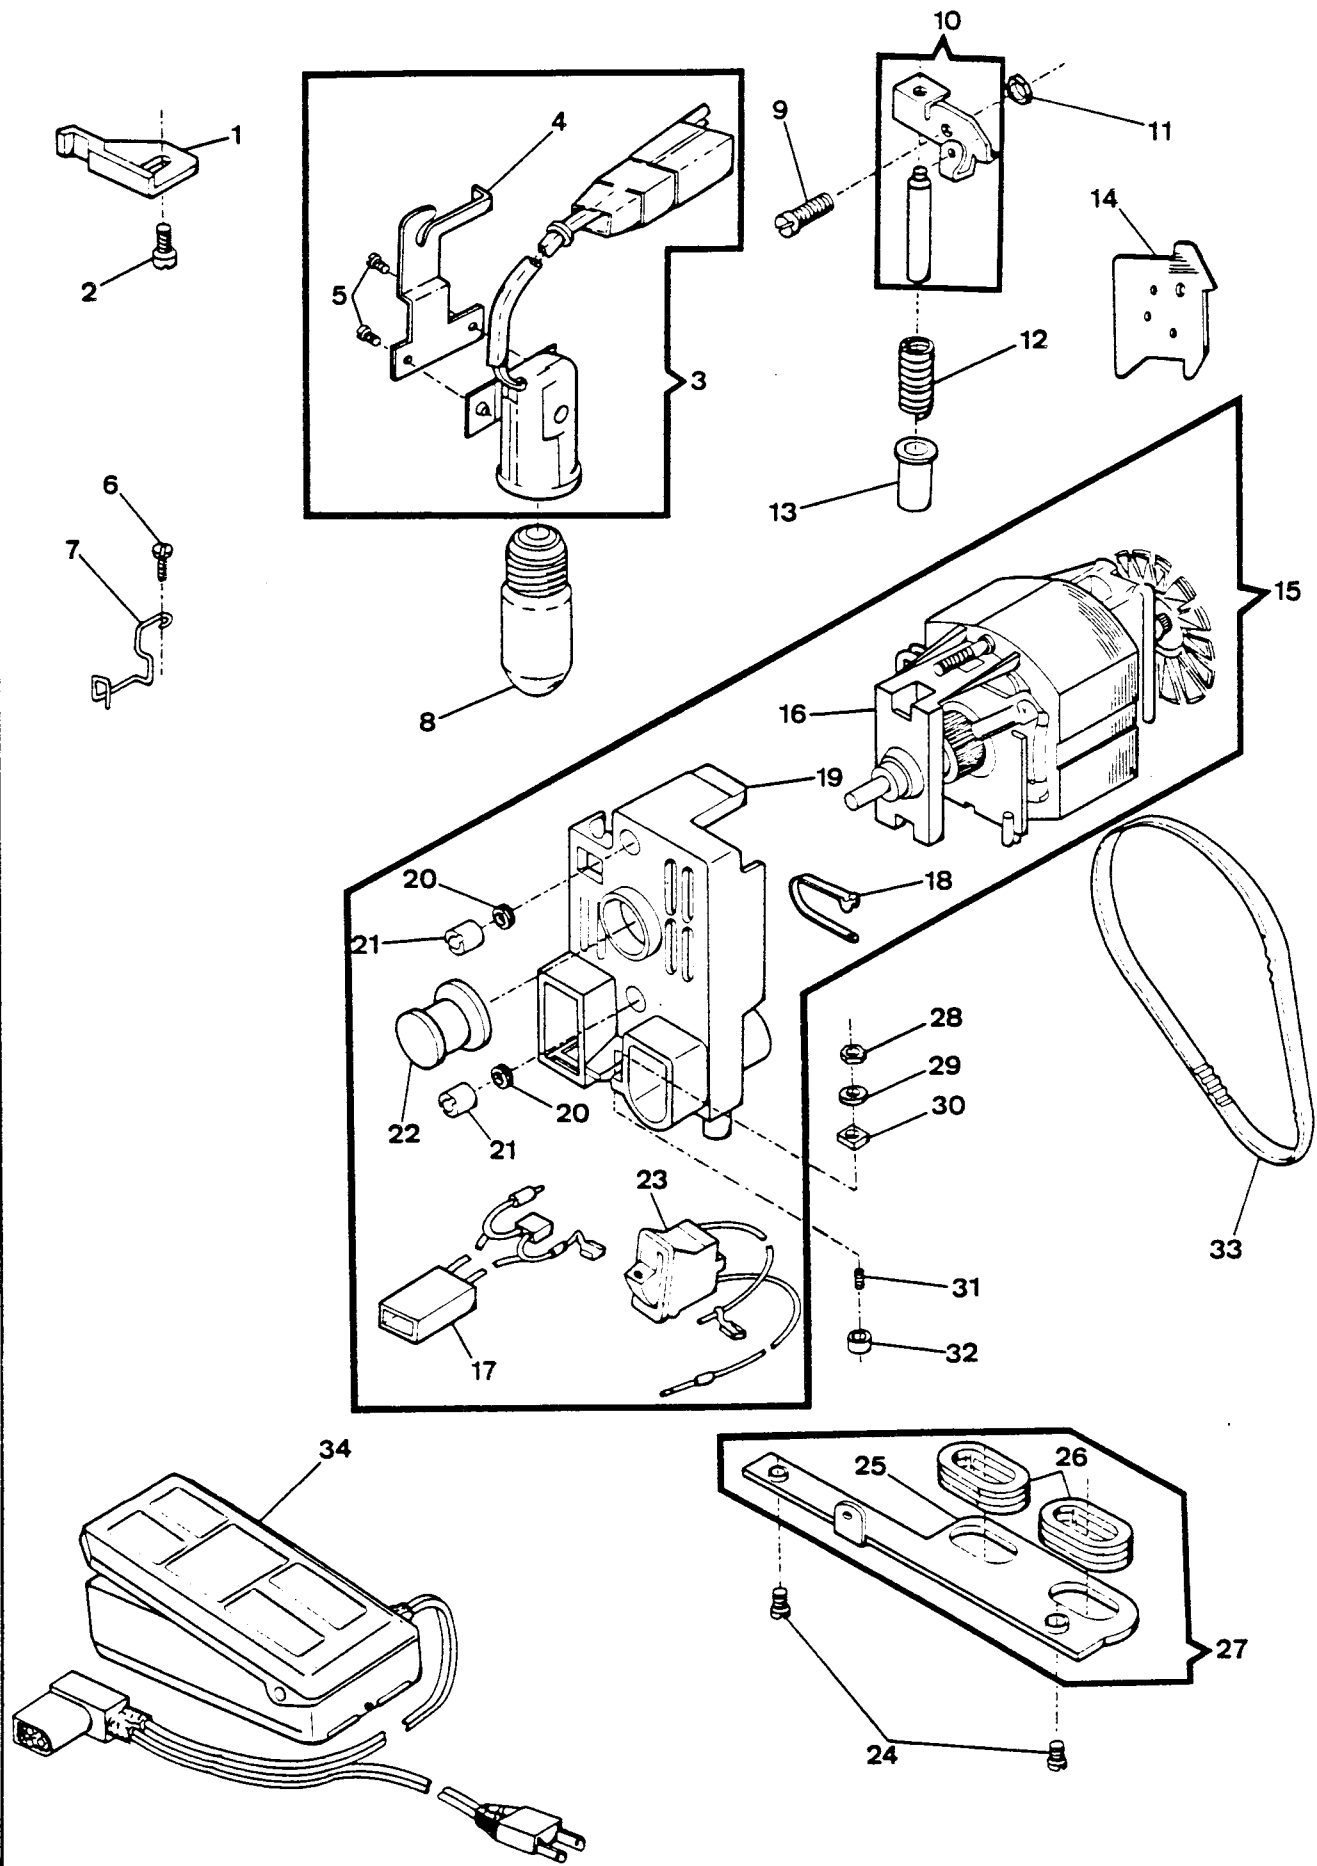

PART LIST
ELECTRICAL EQUIPMENT 110V, SINGLE SPEED,
SUPPRESSED (JAPAN ONLY)

6 6 6 6 6
2 2 2 2 2
1 1 1 1 1
1 2 4 5 7

REF.	PART NBR	DESCRIPTION	1	2	4	5	7
01	353411	LIGHT LEAD RETAINING CLIP	X	X	X	X	X
02	113504-451	LIGHT LEAD RETAINING CLIP MOUNTING SCREW	X	X	X	X	X
03	979148-001	LIGHT COMPLETE	X	X	X	X	X
04	979146-001	LIGHT SOCKET BRACKET	X	X	X	X	X
05	141913-451	LIGHT SOCKET BRACKET SCREW	X	X	X	X	X
06	113455-001	LIGHT LEAD WIRE RETAINER MOUNTING SCREW	X	X	X	X	X
07	353247	LIGHT LEAD WIRE RETAINER	X	X	X	X	X
08	549887-003	LAMP	X	X	X	X	X
09	113372-451	MOTOR GUIDE PIN MOUNTING BRACKET SCREW	X	X	X	X	X
10	446470	MOTOR GUIDE PIN MOUNTING BRACKET ASSEMBLY	X	X	X	X	X
11	313470-452	MOTOR GUIDE PIN MOUNTING BRACKET SCREW NUT	X	X	X	X	X
12	446473	MOTOR BELT TENSION SPRING	X	X	X	X	X
13	446475	MOTOR GUIDE PIN BUSHING	X	X	X	X	X
14	179901	HEAT SHIELD (WITHOUT GRAPHICS)	X	X	X	X	X
15	988759-002	MOTOR COMPLETE	X	X	X	X	X
16	988752-005	SERIES MOTOR MODULE	X	X	X	X	X
17	988764-002	LIGHT RECEPTACLE HARNESS (SUPPRESSED) COMPLETE	X	X	X	X	X
18	605600-P01	TYE RAP	X	X	X	X	X
19	988760-002	COMMUTATOR END COVER	X	X	X	X	X
20	604018-003	MOTOR MODULE WASHER	X	X	X	X	X
21	603907-001	MOTOR MODULE NUT	X	X	X	X	X
22	988761-001	MOTOR PULLEY	X	X	X	X	X
23	988763-P02	SWITCH WITH CONNECTOR & CONTACT LEADS	X	X	X	X	X
24	113370-451	MOTOR MOUNTING PLATE SCREW	X	X	X	X	X
25	446476	MOTOR MOUNTING PLATE	X	X	X	X	X
26	353355	MOTOR MOUNTING PLATE GROMMET	X	X	X	X	X
27	446479	MOTOR MOUNTING PLATE ASSEMBLY	X	X	X	X	X
28	353402-451	MOTOR MOUNTING SCREW LOCK NUT	X	X	X	X	X
29	445539	MOTOR MOUNTING SCREW LOCK NUT WASHER	X	X	X	X	X
30	179887	MOTOR BELT SCREW NUT	X	X	X	X	X
31	113343-451	MOTOR BELT SCREW	X	X	X	X	X
32	988887-001	MOTOR BELT SCREW CAP	X	X	X	X	X
33	353518-001	MOTOR BELT	X	X	X	X	X
34	411837-001	CONTROLLER	X	X	X	X	X

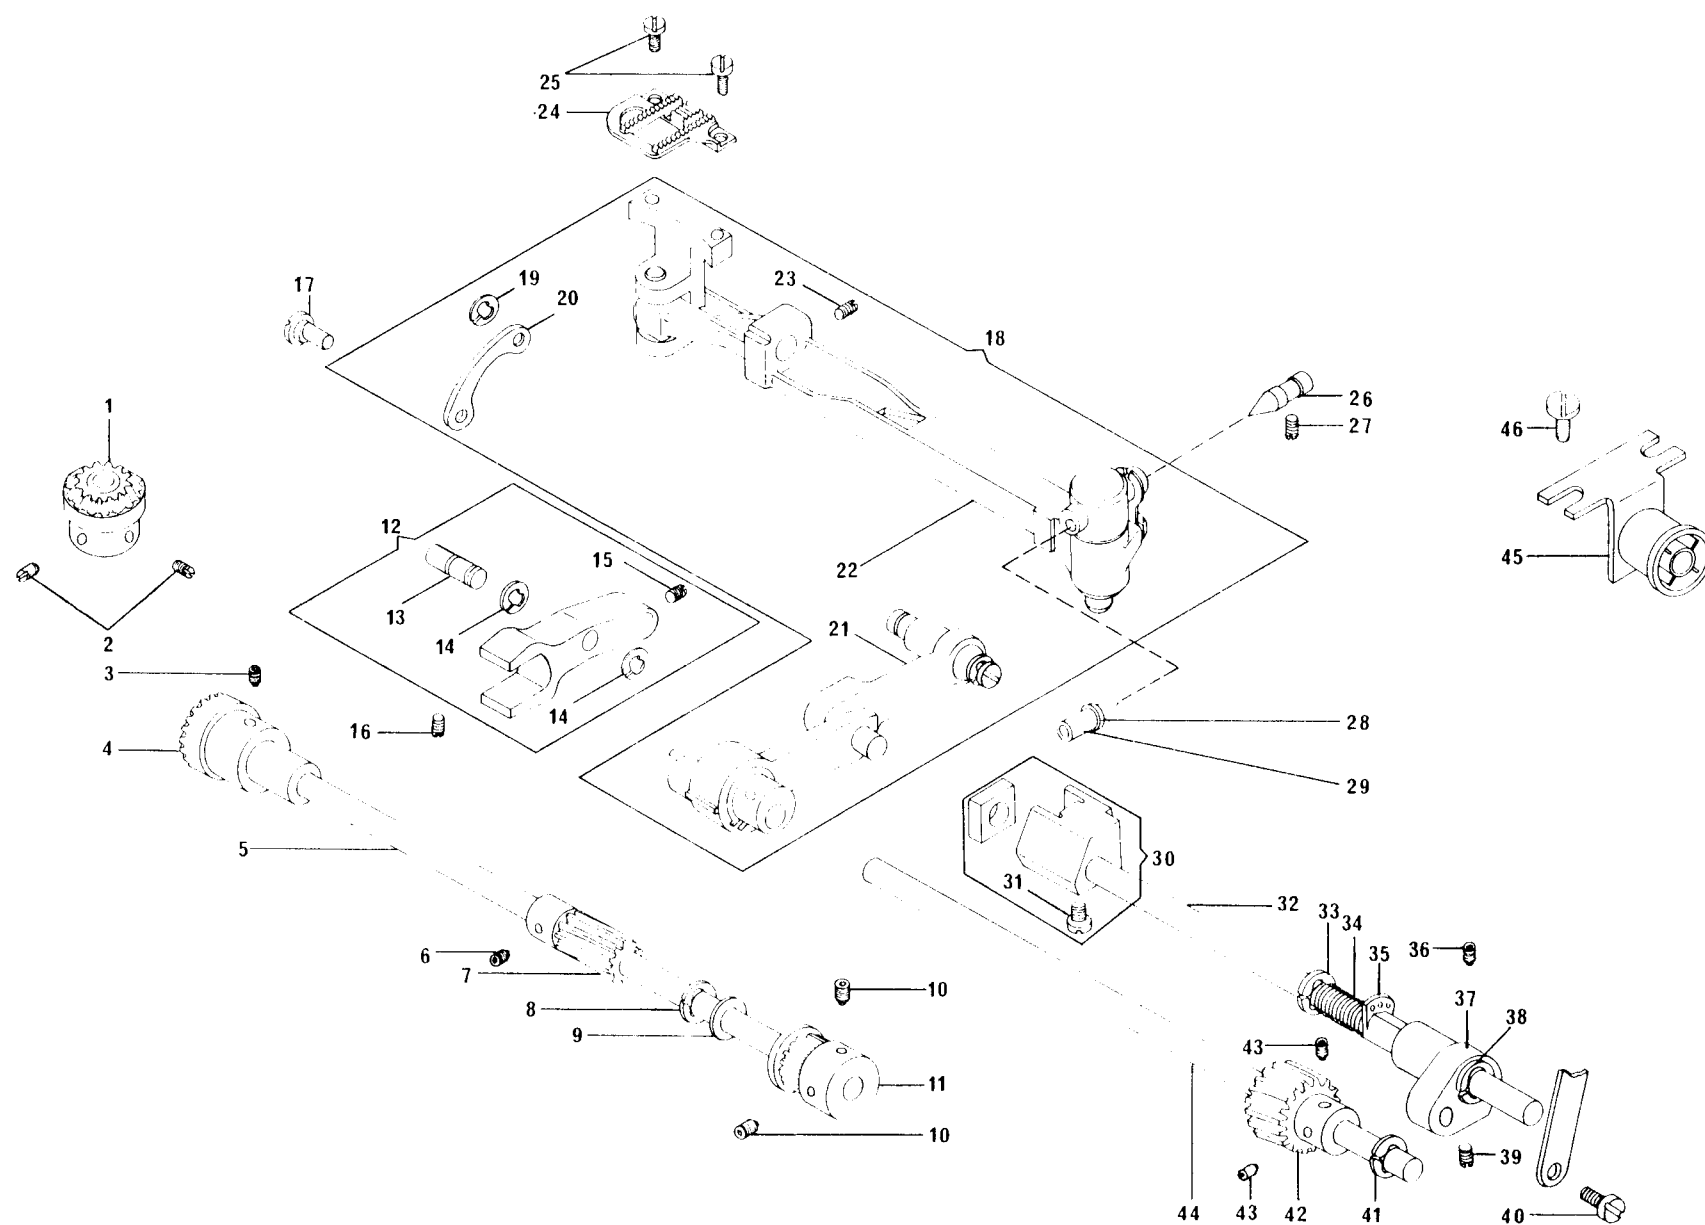

LIST OF PARTS FOR 6500 SERIES MACHINES

(FEED CONTROL SYSTEM)

21

Ref.	Part No.	Description	6548	6528	6544	6543	6533	6513	6522
1	116876-451	Feed Regulator Cam Follower End Cap Complete (Colour Spec. No. 3341)					X	X	X
2	116875-451	Feed Regulator Cam Follower End Cap (Colour Spec. No. 3341)					X	X	X
3	116179	Feed Regulator Cam Follower End Cap Retainer					X	X	X
4	116859-451	Feed Regulator Mechanism Complete (Colour Spec. No. 3220)					X	X	
4	116860-451	Feed Regulator Mechanism Complete (Colour Spec. No. 3220)							X
5	116793-451	Feed Regulator Control Dial Decal (Colour Spec. No. 3220)					X	X	X
6	116857-451	Feed Regulator Control Dial (Colour Spec. No. 3220)					X	X	
6	116858-451	Feed Regulator Control Dial (Colour Spec. No. 3220)							X
7	114152-819	Feed Regulator Mechanism Mounting Screw					X	X	X
8	98188	Feed Regulator Mechanism Mounting Screw					X	X	X
8	116310-451	Guard Plate (Front) Washer (K3 Varieties)					X	X	X
9	116126	Feed Regulator Mechanism Mounting Plate					X	X	X
10	116119	Feed Regulator Cam Follower Stop Screw					X	X	X
11	116125	Feed Regulator Control Dial Thrust Washer					X	X	X
12	116123	Feed Regulator Control Dial Pressure Washer					X	X	X
13	116124	Feed Regulator Control Dial Retainer					X	X	X
14	116136-453	Feed Regulator Cam Follower Assembly (Colour Spec. No. 3341)					X	X	X
15	116116-453	Feed Regulator Cam Follower					X	X	X
16	93779-451	Feed Regulator Cam Follower Adjusting Screw Washer					X	X	X
17	155972	Feed Regulator Cam Follower Adjusting Screw Spring					X	X	X
18	379503-451	Feed Regulator Cam Follower Adjusting Screw					X	X	X
19	116118	Feed Regulator Cam Follower Return Spring					X	X	X
20	116153	Cam Controlled Feed Regulator Driving Bracket with Spring					X	X	
20	116068	Feed Regulator Driving Bracket with Spring							X
21	310717	Cam Controlled Feed Regulator Driving Bracket					X	X	
21	103700	Feed Regulator Driving Bracket							X
22	153585	Cam Controlled Feed Regulator Driving Bracket Return Spring					X	X	
22	116067	Feed Regulator Driving Bracket Return Spring							X
23	103380	Feed Regulator Driving Bracket Retainer					X	X	X
24	379509-451	Feed Regulator Driving Bracket Return Spring Screw							X
25	103873	Guard Plate (K3 Varieties)					X	X	X